



# MONSGEEK MX108 Wireless Keyboard and Mouse Combo User Manual

[Home](#) » [MONSGEEK](#) » MONSGEEK MX108 Wireless Keyboard and Mouse Combo User Manual 



 
## Thank you for supporting Akko

To provide you with a better user experience, please read this manual carefully before using the product.

### Contents

- [1 Packing List](#)
- [2 System Requirement](#)
- [3 MX108 HotKeys](#)
- [4 MX108 System Commands \(Mac\)](#)
- [5 Bluetooth Pairing](#)
- [6 Specifications](#)
- [7 MONSGEEK Warranty and Service Statement](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)

## Packing List

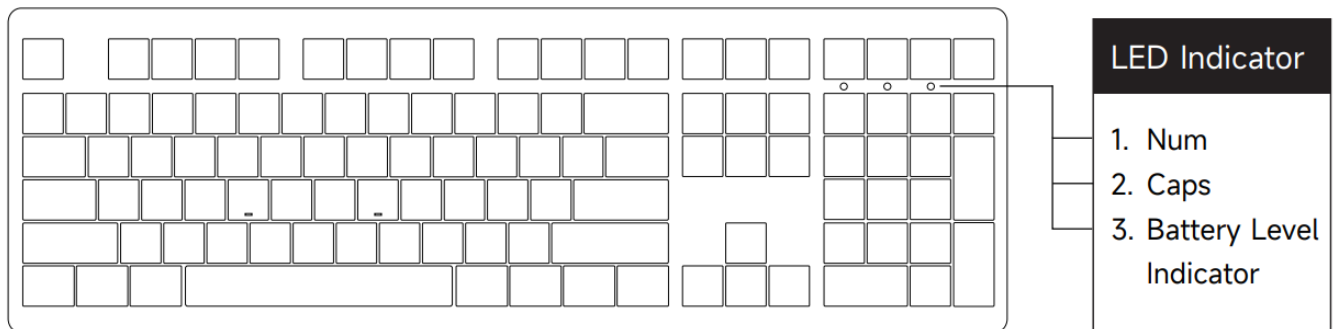

System Requirement

Windows®XP / Vista / 7 / 8 / 10 or higher version


Connectivity Method

Turn the keyboard power switch to the ON position and insert the USB receiver into an available USB port to complete the 2.4G connection and start using it.

Independent Indicator

Status	Indicator Position	LED Indicator
Num	LED Indicator 1	Steady white
Caps	LED Indicator 2	Steady white
Low Battery	LED Indicator 3	Slow flashing white LED
Charging		Steady red
Fully Charged		Steady red → Light off

 MX108 HotKeys

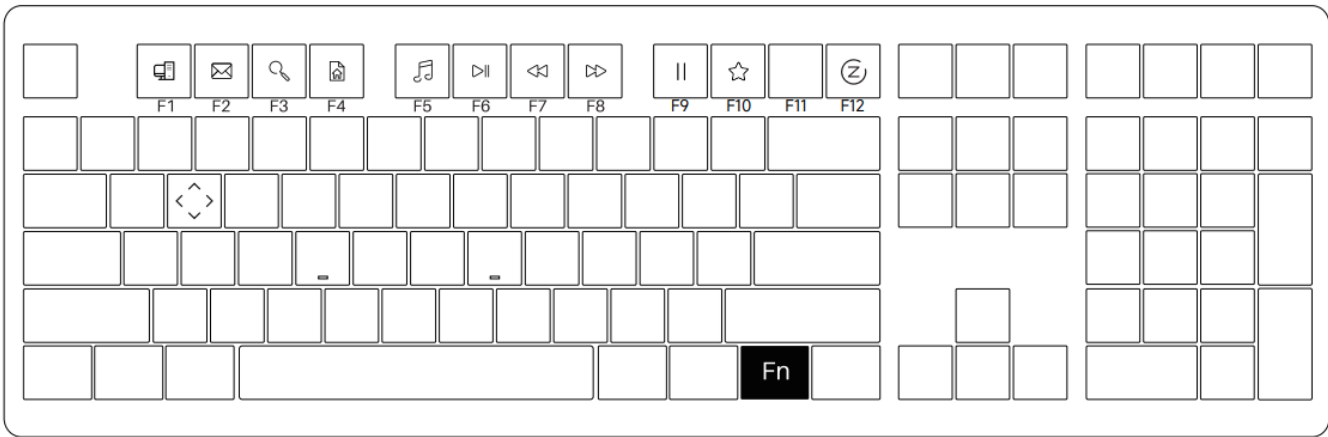


Fn+	F1	=	My computer
	F2		E-mail
	F3		Windows search
	F4		Browser homepage
	F5		Multimedia player

Fn+	F6	=	Play/Pause
	F7		Previous song
	F8		Next song
	F9		Stop
	F10		Bookmark


Fn+	F11	=	Refresh
	F12		One-Key Hibernate
	W		Swap W A S D with ↑↓ ←→

 MX108 System Commands (Mac)

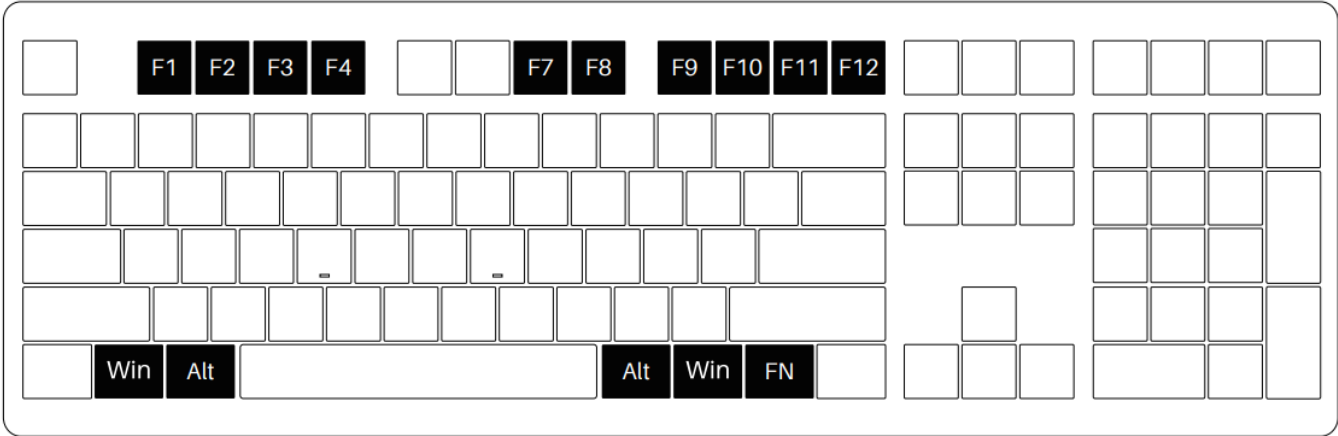


F1	Decrease display brightness
F2	Increase display brightness
F3	Open mission control
F4	Activate Siri
F7	Skip back (Audio)
F8	Pause/Play (Audio)
F9	Skip forward (Audio)
F10	Mute
F11	Volume down
F12	Volume up
Left Win	Option
Left Alt	Command

Right Alt	Command
Right Win	Option

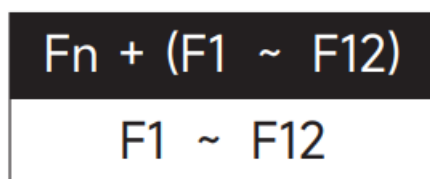 

## MX108 System Commands (Windows)

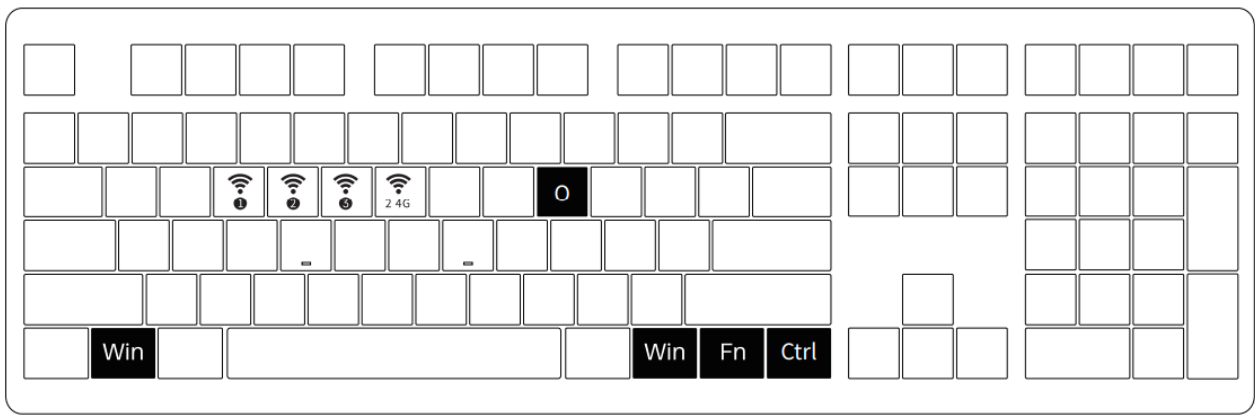 

Fn+	E	=	Bluetooth Device 1
	R		Bluetooth Device 2

Fn+	T	=	Bluetooth Device 3
	Y		2.4G Wireless Device

Revert Ctrl into Menu Key	
Hold down Fn and right Ctrl keys for 3s	

Lock Win Key	
Press Fn and left Win key	

Restore Factory Settings	
Hold down left Win and right Win keys for 5s	

WIN System $\rightleftharpoons$ MAC System	
Hold down Fn and O keys for 3s	

## Bluetooth Pairing

 
After turning on the keyboard, press FN+E/R/T to enter Bluetooth mode. Press and hold the FN+E/R/T combination key for 3 seconds to put the keyboard in pairing mode, with three LED indicator lights flashing quickly. Once the connection is established, the indicator light will stay on for 2 seconds. If the device fails to connect, the indicator light will turn off and the keyboard will enter sleep mode.

### 2.4G Pairing

After turning on the keyboard, press FN+Y to enter 2.4G mode. Then press and hold the FN+Y combination key for 3 seconds to enter pairing mode, with the three indicator lights flashing quickly, and insert the USB receiver. Once pairing is successful, the LED indicator lights will return to normal. If no available device is found within 30 seconds, the three LED indicator lights will turn off, and the keyboard will enter sleep mode.

## MX108 Bluetooth + 2.4G Wireless Mouse Overview

## Specifications

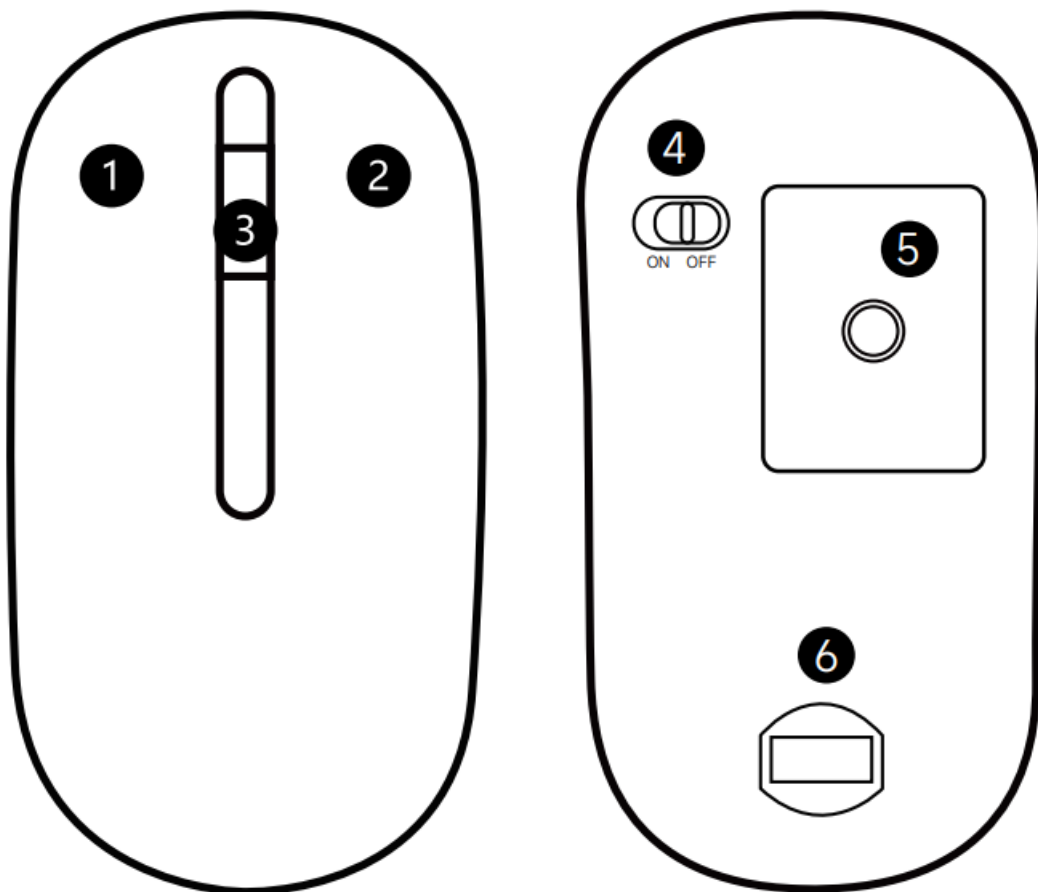

1. Left Click
2. Right Click
3. Scroll Click
4. Power Switch
5. Mode Switch
6. 2.4G Receiver Slot

Model	MX108	Mode	BT + 2.4G Wireless
Length	114mm	Voltage	Built-in lithium battery: 3.7V/300mAH
Width	33mm	Charge	USB 5.0V
Height	60mm	Polling Rate	Bluetooth: 133Hz 2.4G: 125Hz
Weight	≈84g	Wireless Distance	10m 360°
LED Indicator	Red	DPI	Default 1200
Mode Switch	Short press to switch to 2.4G mode. (The indicator light will be green) Short press again to switch to Bluetooth mode. (The indicator light will be blue)	2.4G Pairing	Press left and right clicks to power on. (The green indicator flashes quickly)
		Bluetooth Pairing	Press and hold the pairing button for 3 seconds to enter pairing mode. (Pairing duration is 2 minutes)
Operating Systems	WIN2000/Win7/Win8/Win10/ Android/ IOS/Mac	Key Functions	* Left/Right click * Power switch/Mode switch * Scroll click

## MONGEEK Warranty and Service Statement

1. MONGEEK offers a One-Year warranty for customers in mainland China.

For other regions, please contact your seller (MonsGeek distributor) for specific warranty details.

2. If the warranty period expires, customers are responsible for repair costs.

MONGEEK provides instructions for self-repair if preferred, but users assume full responsibility for any losses incurred during the process.

3. Disassembling the keyboard without manufacturer/seller's instruction will void the warranty immediately.

4. Return and warranty policies may vary across platforms and are subject to the specific distributor's terms at the time of purchase.

Company: Shenzhen Yinchon Technology Co., Ltd

Address: 33 Langbi Rd, Bitou Community 1st Industrial Zone, Bao'an District, Shenzhen, China

Tel: 0755-23216420

Website: [www.monsgeek.com](http://www.monsgeek.com)

Origin: Shenzhen, China



### WARNING

Water and Beverages can't be poured into the Keyboard.



Made in China



[instagram.com/akkogear](https://www.instagram.com/akkogear)



[facebook.com/akkogear](https://www.facebook.com/akkogear)







[tiktok.com/@akkogear](https://www.tiktok.com/@akkogear)

## Documents / Resources



[MONSGEEK MX108 Wireless Keyboard and Mouse Combo](#) [pdf] User Manual  
MX108 Wireless Keyboard and Mouse Combo, MX108, Wireless Keyboard and Mouse  
Combo, Keyboard and Mouse Combo, Mouse Combo, Combo

## References

-  [Akko \(@akkogear\) • Instagram photos and videos](#)
-  [tiktok.com/@akkogear](https://www.tiktok.com/@akkogear)
-  [- MonsGeek](#)
-  [MonsGeek - Make Cool Gears Accessible.](#)