




Monsher MSG 30 Built-in Cooker User Manual

[Home](#) » [Monsher](#) » Monsher MSG 30 Built-in Cooker User Manual 

Monsher MSG 30 Built-in Cooker User Manual



Contents

1 IMPORTANT SAFETY INSTRUCTIONS

- 1.1 General Safety
- 1.2 Safety for children
- 1.3 Safety of the electric-related work
- 1.4 Intended use

2 INSTALLATION

- 2.1 Prior to use of the product
- 2.2 Installation and connections
- 2.3 Wiring
- 2.4 Gas connection

3 ABOUT PRODUCT

- 3.1 General view

4 Documents / Resources

- 4.1 References

5 Related Posts

IMPORTANT SAFETY INSTRUCTIONS

This section contains safety instructions to help prevention of physical injury or material damage. Failure to comply with these instructions makes any warranty invalid.

General Safety

- This product is not designed for use by persons (including children) who are lack of knowledge or experience and have deficient physical, sensual or cognitive skills unless they are attended by a person to take care of their safety or give necessary instructions for use of the product. The children should be supervised and never be allowed playing with the product.
- Plug the product to an outlet/mains protected by a fuse of such value as given in the table “Technical specifications”. In case of use with or without transformer, remember to get the earthing installation done by a qualified electrician. If the product is used without proper earthing as per the applicable local regulations, our firm shall not be responsible for any resulting loss.
- If the power cable/plug is damaged, do not operate the product. Contact with the Authorized Service Center.
- If the product is damaged and has a noticeable damage, do not operate the product.
- Do not perform any repair or modification on the product. However, you may remedy some troubles; see suggested solutions for the problems.
- Never wash the product by spraying or pouring water on it! There is risk of electric shock!
- Do not use the product under the conditions when your judgement is affected due to effect of medical drug and/or alcohol.
- Disconnect the product with the mains during the installation, maintenance, cleaning and repair operations.
- Always get the installation and repair operations done by an authorized service center. The manufacturing firm may not be held responsible for any loss that may arise due to operations performed by any unauthorized persons and consequently the product warranty becomes invalid.
- Be careful when using alcohol in the food. The alcohol evaporates at high temperature and when it contacts with hot surfaces, it may inflame and cause fire.
- Do not heat the sealed cans and glass jars. The resulting pressure may cause burst of the jar.

- As the edges of the product will be hot when working, do not put any flammable substances near it.
- Keep open all around the ventilation channels.
- The product may be hot during use. Do not touch the hot parts and heating elements, etc.
- Make sure the product is switched off after each use.
- Product and accessible parts of the product are hot during use of it.
- Do not touch the product in use.
- Do not use sharp and piercing tools when cleaning the glass; such materials may give harm to your product.
- As superheated oil may cause fire, always keep watch when the product is in use.
- In case of possible fire, do not attempt to extinguish the fire with water; disconnect the power connection of the product immediately and cover the fire by help of a wet blanket.
- Do not use steam cleaner.
- If the glass of the product is broken: switch off all burners and any electric heater element immediately and disconnect power supply of the equipment; do not touch the surface of the equipment and do not use the equipment.
- To clean the glass of the range, never you abrasive agents or sharp metal scrapers that may destroy the surface and cause the glass to be broken.
- Do not use the product on the nylon, flammable and heat-sensitive materials.
- Pots placed on the heaters of the range should be in proper sizes.
- Do not scrub the buttons and inox surfaces of the range by means of scrapping objects; do not use Scotch-Brite.
- If the flame of burner is accidentally off, the burner is switch off in controlled manner and it is not fired for minimum 1 minute.

Safety for children

The exposed parts of the product will get heated during use and after use until it cools down; keep children away.

- **CAUTION:** During use of the grill, the accessible parts may be hot. You should keep the children away from the product.
- The children under 8 eight years old should not touch the product when they are unattended by a adult.
- This equipment may be used by children above 8 years old and/or persons who are handicapped physically, sensually or cognitively if they are duly informed about risks and safe use of the product.
- The children should not play with the product. Cleaning and maintenance of the equipment may not be performed by the children unattended.
- Packaging materials may be dangerous for the children. Keep the packaging materials at a place not accessible by the children or thrown in the garbage by sorting out according to the instructions on waste. 1

Safety of the electric-related work

- All Works on the electric equipment and systems should be performed by an authorized and qualified person.
- This product is not suitable for you with a remote system.
- In case of any damage, switch off the product or disconnect the power supply. To this end, switch of the fuse of the house.
- Make sure the fuse rated value is same with the current of the product.

Intended use

This product is designed for domestic use. It is not allowed for industrial use. “

CAUTION: this product should be used for cooking only. It should not be used for different purposes such as heating a room, etc.” The producer may not be held responsible for any loss that may occur due to improper use or during transportation. The service life of the product you purchase is 10 years. This is the time during which the producer should make available spare parts necessary for operation of the product in the specified way.

INSTALLATION

Prior to use of the product

Make sure the power and/or gas installation is suitable. If not, make the necessary arrangements by means of qualified technical and installer. Make sure the power and/or gas installation is suitable. If not, make the necessary arrangements by means of qualified technical and installer.

- For installation of the product, you should comply with the rules specified in the local standards concerning power and/or gas
- Control the product prior to installation to find out whether there is any damage or not. If the product is damaged, do not make the installation. The damaged products may cause risk for your safety.
- Any works on the gas equipment and system should be performed by authorized and qualified persons.
- The products have no system for discharge of gas that may occur as a result of burning. The product should be installed and connected as per the applicable regulations concerning installation. You should observe the requirements regarding ventilation.
- Air necessary for burning is taken from the room air and the emitted gases are directly given to the room.
- A good ventilation is required in the room for safe operation of your product. If there is no window or door to be used for ventilation of the room, an additional ventilation system should be installed.
- The floor area of the kitchen should be bigger than 8m².
- Kitchen volume should be bigger than 20m³.
- The chimney outlet should be at height of 1.80m from the floor and in diameter of 150mm directly opening to the atmosphere.
- Air vent should be near the kitchen floor and minimum 75cm², opening to the outer atmosphere.

Installation and connections

Preparation of the built-in range prior to installation

The range is equipped with a seal to prevent the liquids through the cavities into the cabinet. In order to place this seal, adhere the seal as shown in the figures above. Turn the range upside down and remove the protective tape of the rubber seal and adhere it to the range; both ends of the seal should meet each other. Install the mounting sheets as shown in figure 5 by help of screw. And place the range in the opening on the counter. Figure 7 shows the size to which the counter will be cut for installation of the range. Place the prepared range into the counter cut to these sizes. If you will use the range on the built-in oven, observe the figures 8 and 9 for proper air circulation between the oven and range.

Wiring

You should definitely use an earthed line for the product!

The manufacturing firm shall not be responsible for any damages that may occur if the product is used without the earth.

- The mains supply data should be same on the data indicated on the nameplate of the unit. You may find the nameplate at the back of or under the product.
- The connection cable of the product should comply with the technical specifications and power consumption.

Risk of electric shock! Before performing any work on the electric installation, please disconnect the power supply of the product.

Gas connection


ABOUT PRODUCT

General view

1. Small burner
2. Small burner
3. Medium burner
4. Medium burner
5. Fish burner
6. Big burner
7. Big burner
8. Wok / Mini wok burner
9. Wok / Mini wok burner
10. Wok / Mini wok burner
11. Small burner button No. 1
12. Small burner button No. 2
13. Medium burner button No. 3
14. Medium burner button No. 4
15. Fish burner button No. 5
16. Rapid burner button No. 6
17. Rapid burner button No. 7
18. Wok /Mini wok burner button No. 8
19. Wok /Mini wok burner button No. 9
20. Wok /Mini wok burner button No. 10
21. Pan Supports
22. Range top tray



Documents / Resources

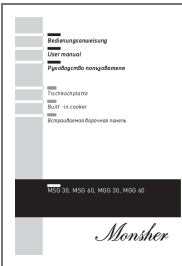

References

- **M Monsher**

Manuals+.