



Home » Support » Monstake W1 Automatic Soap Dispenser Instruction Manual 📆

### Contents [ hide ]

- 1 Monstake W1 Automatic Soap Dispenser
- 2 Introduction
- 3 Product Function Diagram
- 4 Instructions for first use
- 5 Product Specifications
- 6 After-sales Service
- 7 Troubleshooting
- **8 FREQUENTLY ASKED QUESTIONS**
- 9 VIDEO PRODUCT OVERVIEW
- 10 References



**Monstake W1 Automatic Soap Dispenser** 



### Introduction

The Monstake W1 Automatic Soap Dispenser is a touchless, innovative solution that is intended to enhance convenience and hygiene in any environment. This rechargeable dispenser is priced at \$23.99 and boasts an elegant black foam design that is crafted from premium ABS and PP plastic. It is equipped with a 2000 mAh rechargeable battery that can operate for up to four months following a mere 2-3 hours of charging. The dispenser is designed to be user-friendly, featuring a user-friendly LCD screen that displays the clock, gear position, and battery level, as well as an enhanced waterproof touch button. It is compatible with a wide range of detergent types, including foaming soap, shampoo, and dishwashing liquids, making it suitable for both residential and commercial kitchens. This soap dispenser, which was recently introduced by Monstake, is both practical and stylish. It seamlessly integrates modern aesthetics with functionality, rendering it an ideal addition to a variety of settings, including residences, offices, and restaurants.

### **Product Function Diagram**



- 1. Liquid filling port
- 2. Gear display
- 3. Charging port
- 4. Push Button power on/off, switch the temperature, adjust the gear
- 5. Temperature& Battery Power display
- 6. Bubble port

### Instructions for first use

- 1. Please fully charge the battery for the first time, it will take about 3-4 hours.
- 2. Foaming hand sanitizer can be poured directly into use, Ordinary gel/liquid soap needs to be diluted with water before pouring it in. please refer to FAQ 5-6.
- Do not use non-foaming hand sanitizer directly, and do not use soap. If the machine is blocked due to improper use, we will not be responsible for the after-sales service, please understand.
- 4. It is strictly forbidden to rinse or soak directly, and do not turn the product upside down to avoid damage.

## **Product Specifications**

Product name: Monstake automatic foaming soap dispenser

• Item model number: W1

• Product color: Black, White

• Product capacity: 300ml

• Battery capacity: 2000mAh

• Rated input: DC5.0V/1.0A

• Product weight 0.83 lb

• Product Size 5.11\*5.11\*2.36 inch

Packing List: Product\*1, Adhesive\*1, Charging Cable\*1, Cover\*1, Instruction
Manual\*1

### **After-sales Service**

- In order to ensure the quality, all our products have been tested for foam before production, so it is normal if there is residual moisture.
- If you have any questions about the product, please contact us through Amazon, and we will reply within 24 hours.
- If it is a product quality problem, we will unconditionally replace it with a new one.
- Thank you for choosing our product and hope it brings convenience to your life.

## **Troubleshooting**

Issue	Possible Cause	Solution
Dispenser is not dispen sing soap	Battery low or dead	Recharge battery fully
sensor not working	Sensor dirty or blocked	Clean sensor area
Soap dispensing uneve	Incorrect gear setting	Adjust gear to desired dispensing level
Touch button not respo	Water or debris on button	Wipe clean and dry the touch b utton
Soap clogs in dispense	Using gel soap without dil ution	Dilute gel soap with water before use

Issue	Possible Cause	Solution
LCD screen not showin	Battery dead or malfunction	Recharge battery; reset dispen ser
Dispenser leaks soap	Overfilled container or loo se parts	Refill properly and tighten all p arts
Soap runs out quickly	Dispensing gear too high	Lower the dispensing gear setti
False triggering	Installed too low or sensor sensitivity	Install dispenser 20 cm above counter
Battery not charging	Faulty charging cable or p	Check cable and charger, repla ce if needed

### FREQUENTLY ASKED QUESTIONS

How to turn on and off Monstake W1 Automatic Soap Dispenser Soap Dispense?

Press and hold the push button for 3 seconds to power on, and in the power-on state, press and hold the push button for 3 seconds to power off.

How to switch the Monstake W1 Automatic Soap Dispenser Soap Dispenser temperature?

In the power-on state, press the push button twice to switch the temperature. There are two types: Fahrenheit and Celsius.

How to adjust the Monstake W1 Automatic Soap Dispenser Soap Dispenser gear?

There are three gears in total, and the default is one gear when booting. Click the push button to adjust the grade, and the screen will display the 1st, 2nd, and 3rd grades accordingly.

How to install Monstake W1 Automatic Soap Dispenser Soap Dispenser?

1Keep the walls dry and clean, suitable for installation on smooth surfaces such as tiles, marble, mirrors, etc. 2 Tear off the adhesive protective film, stick it to the wall, and press firmly for 30 seconds to ensure that the adhesive is firmly attached. 3 It will be better to h a n g t h e s o a p dispenser after sticking the adhesive on the wall for 24 hours. 24 hours is the best stable state. 4 The adhesive cannot be used repeatedly.

Can I use foam hand sanitizerdirectly?

This is the best option.

How should ordinary gel/liquid soap be mixed in Monstake W1 Automatic Soap DispenserSoap Dispenser?

\*The ratio of water to ordinary gel/liquid soap is 3:1. \*Please add water first.Then add ordinary gel/liquid soap for blending. \* It's better to mix it with a container and then pour it in. \*If you want the foam to be thicker, you can add a little more ordinary gel/liquid soap.

How to use the automatic cleaning function of Monstake W1 Automatic Soap Dispenser Soap Dispenser ?

In the off state, press the push button 3 times to turn on the automatic cleaning function.

How to charge Monstake W1 Automatic Soap Dispenser Soap Dispenser?

\* It can be charged using a USB cable, and it takes 3-4 hours to fully charge. \*

When the product is charging, the screen is on, and the power will increase by 0%-100% from the charging symbol.

How to clean Monstake W1 Automatic Soap Dispenser Soap Dispenser?

If the surface of the product is dirty, please do not directly rinse or soak it with water, it will easily cause damage to the product, please simply wipe it with a rag.

### **VIDEO – PRODUCT OVERVIEW**

https://manuals.plus/wp-content/uploads/2025/05/Monstake-W1-Automatic-Soap-Dispenser-Instruction-Manual.mp4

**DOWNLOAD THE PDF LINK:** Monstake-W1-Automatic-Soap-Dispenser-Instruction-Manual

### References

- User Manual
  - Automatic Soap Dispenser, B09F3LG8CJ, Instruction Manual, Monstake, Monstake W1,
- Monstake W1

Name

# Leave a comment

Your email address will not be published. Required fields are marked\*

Comment *	

Email	
Vebsite Vebsite	
Save my name, email, and website in this browser for the next time I comment.	
Post Comment	

### Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.