



[Home](#) » [Monstake](#) » **Monstake W2 Automatic Soap Dispenser User Guide** 

Contents [[hide](#)]

- [1 Monstake W2 Automatic Soap Dispenser](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 VIDEO – PRODUCT OVERVIEW](#)
- [13 References](#)



Monstake W2 Automatic Soap Dispenser



INTRODUCTION

Monstake W2 Automatic Soap Dispenser is a kitchen or bathroom appliance that combines intelligent functionality with an elegant design. This black, wall-mounted soap dispenser features a large oval screen that displays time, temperature, battery life, and detergent levels. It was recently introduced at a retail price of **\$27.99**. This smart device, which is constructed from premium plastic and features a fashionable finish, eliminates cross-contamination through touchless operation. It was developed by Monstake. The device is a sustainable and low-maintenance addition to any modern space, as it is powered by a 2500mAh rechargeable battery that can last for up to four months. Due to its IPX5 waterproofing and adaptable foam level adjustments, the W2 is an excellent choice for families, couples, and even children. This solution is optimal for soap, dishwashing liquid, or body cleanser, as it is engineered for effortless installation and user-friendliness. Monstake's commitment to innovation in sanitation products is exemplified by this elegant and dependable dispenser.

SPECIFICATIONS

Brand	Monstake
Model Number	W2
Color	Oval Foam Black
Material	Plastic (ABS and PP)
Dimensions	2.15"D x 6.69"W x 3.54"H
Battery	Built-in 2500mAh rechargeable battery
Charging Time	2-3 hours
Battery Life	Up to 4 months
Capacity	450 ml / 16 oz
Dispensing Modes	3 Adjustable foam levels
Display	Large oval screen with clock, temp, battery, level
Installation Type	Wall-mounted, traceless adhesive
Waterproof Rating	IPX5
Recommended Mount Height	0.65 ft / 20 cm above countertop
Soap Compatibility	Foam soap or diluted gel soap (3-4x water)



WHAT'S IN THE BOX

- Soap Dispenser
- User Guide

FEATURES

- **Smart Display Interface:** Indicates detergent volume, battery level, temperature, and time.

FULL-SCREEN SMART DISPLAY CLEAR AT A GLANCE



Low Liquid Reminder
Battery Display
Current Gear Display

Clock

12-Hour/24-Hour
Adjustable

Temperature

Fahrenheit/Celsius
Adjustable

- **Foam Output Modes:** Provides three foam parameters that can be adjusted for precise use.
- **Rechargeable Battery:** The 2500mAh battery offers a four-month battery life.



- **Large Capacity:** Capable of accommodating 450ml/16oz of liquid, making it an excellent choice for family use.
- **Wall-Mounted Design:** Preserves hygiene and conserves counter space.

NO-DRILL WALL MOUNTING INSTALLATION

Suitable for smooth and dry wall surfaces



- **One-Button Operation:** With a single button, it is effortless to power on/off and modify modes.
- **Waterproof Rating:** Is suitable for use in damp environments, such as restrooms, with an IPX5 waterproof rating.
- **Soap Compatibility:** This product is compatible with both foam soap and diluted gel soap.



- **Traceless Adhesive:** Traceless adhesive is included for effortless mounting. No drilling is required.
- **Gold-Plated Finish:** Contributes to a contemporary and fashionable appearance.
- **Visual Alerts:** Red icons signify that the soap or battery status is low.
- **Eco-Friendly:** Prevents the use of disposable batteries and minimizes detergent waste.
- **Child-Friendly:** The device is user-friendly and secure for children to operate.
- **Diverse Applications:** Appropriate for body wash, dishwashing liquid, and hand detergent.
- **Compact Size:** The dimensions are designed to fit into small spaces with ease.

SETUP GUIDE

- **Location Selection:** Choose a clean, flat surface, such as glass or tile.

- **Surface Cleanse:** Use a clean cloth to wipe the surface to eliminate any grit or moisture.
- **Adhesive Application:** Apply traceless adhesive to the dispenser's exterior.
- **Mount on the Wall:** Firmly press the device onto the wall approximately 0.65 feet above the counter.
- **Device Charging:** Connect the device to the USB cable that was provided and allow it to charge for 2–3 hours.



- **Fill the Reservoir:** Open the top and add foam detergent or diluted gel soap.
- **Power On:** To activate the device, press and hold the trigger.
- **Foam Level Adjustment:** To cycle through three levels, click the button once.
- **Clock Set:** To modify the time settings, double-click the icon.
- **Ensure Seal:** After charging, verify that the waterproof connection is securely sealed.
- **Test Dispensing:** To evaluate the foam output, place your hand beneath the sensor.
- **Reposition as Necessary:** If the product is misaligned, peel it off and reapply it.

- **Avoid Direct Water Contact:** Ensure that the location is not in direct contact with the flow of water to prevent water splashing.
- **Manual Reading:** Evaluate the user guide for operational clarity.
- **Full Battery Charge:** Before commencing use, ensure that the battery is fully charged.

CARE & MAINTENANCE

- **Weekly Cleaning:** Utilize a moistened cloth to wipe the exterior on a weekly basis.
- **Refrain from Immersion:** The unit should never be submerged or rinsed.
- **Battery Check:** Check the battery on a monthly basis and recharge it if it is used frequently.
- **Adhesive Inspection:** If the mount appears to be loose, replace the adhesive.
- **Nozzle Cleaning:** Utilize tepid water to eliminate accumulation.
- **Soap Compatibility:** Avoid soaps that are viscous and contain particles; use soaps that are compatible.
- **Condensation Removal:** Maintaining a dry environment necessitates the removal of condensation following steamy bathing.
- **Safeguard the Charging Port:** After use, ensure that the port is sealed with a plug.
- **Monitor Levels:** Refill when the icon turns red.
- **Avoid Outdoor Installations:** Store indoors.
- **Handling with Care:** Refrain from exerting excessive pressure or yanking.
- **Clock Updates:** Periodically update the time; reset the clock in the event of a battery failure.
- **Avoid Harsh Cleaners:** Instead, opt for mild soap solutions for cleansing.
- **Full Charging:** Avoid partial charging to ensure the longevity of your battery. Apply full charges.
- **Sensor Inspection:** Ensure that the front sensor area is free of soap droplets.

TROUBLESHOOTING

Issue	Possible Solution
-------	-------------------

Device not turning on	Recharge battery and ensure the power button is held
Foam not dispensing	Check for soap blockage; use compatible soap types
Weak or no foam	Dilute gel soap 3-4x with water
Red liquid icon displayed	Liquid level is below 10%, refill immediately
Screen not displaying	Recharge battery and check waterproof plug is closed
Adhesive not sticking	Reapply to smooth, clean, dry surface
Battery draining fast	Limit unnecessary activations; recharge fully
No clock display	Double-click to reset clock mode
Excessive foam output	Adjust to a lower foam level (1-3 settings)
Surface moisture around device	Wipe with a cloth; avoid direct water exposure

PROS & CONS

Pros

- Rechargeable battery with up to 4-month life
- Clear digital display with time and status indicators
- Easy, no-drill installation with adhesive
- Adjustable foam levels for customized use
- Compatible with different liquid soaps

Cons

- Not suitable for soaps with particles
- Requires soap dilution if using gel soap

- Cannot be fully rinsed or submerged
- Screen may be hard to read in low light
- Needs smooth surface for proper wall adhesion

WARRANTY

The Monstake W2 Automatic Soap Dispenser is backed by a **one-year** manufacturer's warranty. This includes full replacement support for defects or malfunctions not caused by misuse or physical damage. Monstake ensures customer satisfaction and stands by its product, offering reliable customer support and peace of mind.

FREQUENTLY ASKED QUESTIONS

How do I turn the Monstake W2 Automatic Soap Dispenser on and off?

Press and hold the power button on the Monstake W2 until the display lights up or shuts off.

What should I do if the Monstake W2 isn't dispensing foam?

Check if the soap is too thick, the nozzle is clogged, or the battery is low.

How long does the battery in the Monstake W2 last after charging?

A full charge lasts up to 4 months, depending on usage frequency.

How do I know when to recharge the Monstake W2 dispenser?

The battery icon on the screen will indicate low power before shutting off.

What does it mean when the liquid icon turns red on the Monstake W2 screen?

It means soap is below 10 Percent and needs to be refilled.

Why is the foam inconsistent on my Monstake W2?

Ensure the soap is properly diluted and the nozzle is clean. Check for air bubbles inside the tube.

How do I adjust the foam level on the Monstake W2?



Use the selection button to choose from foam levels 1 to 3 based on preference.

VIDEO – PRODUCT OVERVIEW

<https://manuals.plus/wp-content/uploads/2025/05/Monstake-W2-Automatic-Soap-Dispenser-User-Guide.mp4>

References

- [User Manual](#)

 Automatic Soap Dispenser, B0CDWQTBN7, Monstake, Monstake W2, user guide,
 Monstake W2

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.