

## Contents [ [hide](#) ]

- [1 MOOER SD30 C4 AirSwitch Wireless Footswitch Controller](#)
- [2 Specifications](#)
- [3 OVERVIEW](#)
- [4 Product Usage Instructions](#)
- [5 FAQs](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)

# MOOER

## MOOER SD30 C4 AirSwitch Wireless Footswitch Controller




## Specifications

- **Product Name:** C4 AirSwitch Wireless Footswitch Controller
- **Compatible with:** MOOER SD30 and SD75 Combo Amplifiers
- **Footswitches:** A, B, C, D
- **Wireless Connectivity:** Yes

## OVERVIEW

The Mooer C4 AirSwitch is a wireless footswitch controller that can be used to remotely control functions of the MOOER SD30 and SD75 Combo Amplifiers. When the wireless footswitch is connected to SD30/SD75, its 4 footswitches A, B, C, and D, directly mirror the functions of the PRESET buttons. Please see the manual of your amplifier for more detailed information about the functions.

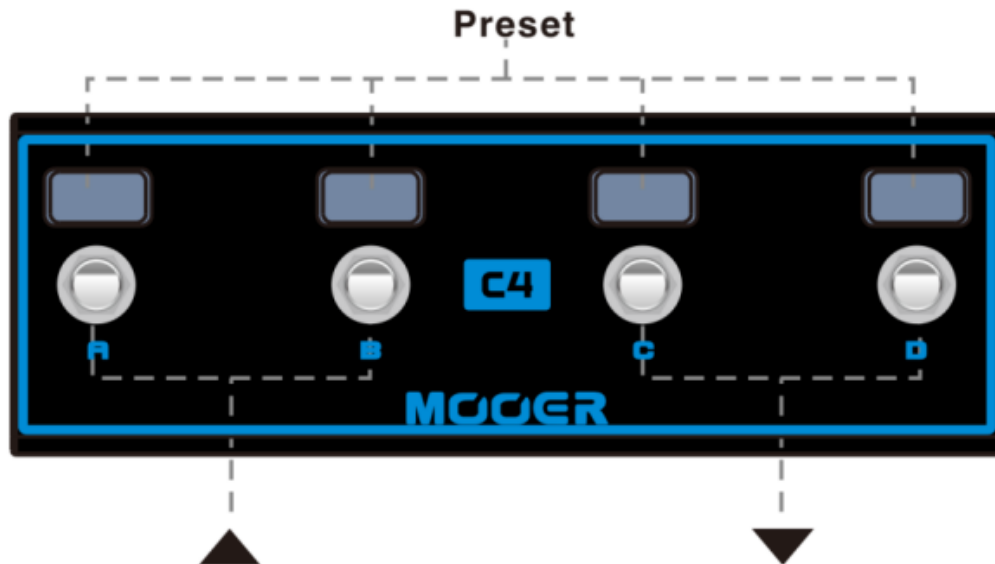

## Product Usage Instructions

- Press footswitches A + B simultaneously for BANK ▲
- Press footswitches C + D simultaneously for BANK ▼
- Press footswitch A, B, C, or D to select a corresponding preset

## Pairing the wireless footswitch with your amplifier

- Make sure the SD amplifier is turned off.
- Press and hold footswitches C + D on the wireless controller.
- Power on the amplifier
- Release the footswitches when the amplifier has finished booting up
- Set WL-FS to ON in the SYSTEM SETTINGS

## Note

Please refer to the manual of your amplifier for detailed information about the functions that can be controlled using the C4 AirSwitch.

## FAQs


**Q: Can the C4 AirSwitch be used with other amplifiers?**

A: The C4 AirSwitch is specifically designed to work with MOOER SD30 and SD75 Combo Amplifiers. It may not be compatible with other amplifiers.

**Q: How do I know if the footswitch is successfully paired with the amplifier?**

A: Once paired, the footswitch LED indicators should reflect the selected presets or functions on the amplifier. Ensure that the WL-FS setting is ON in the SYSTEM SETTINGS to confirm successful pairing.

## Documents / Resources

	<a href="#">MOOER SD30 C4 AirSwitch Wireless Footswitch Controller [pdf]</a> User Guide SD30, SD75, SD30 C4 AirSwitch Wireless Footswitch Controller, SD30 C4, AirSwitch Wireless Footswitch Controller, Wireless Footswitch Controller, Footswitch Controller, Controller
---	---

## References

- [User Manual](#)

- Mooyer
- AirSwitch Wireless Footswitch Controller, controller, Footswitch Controller, MOOER, SD30, SD30 C4, SD30 C4 AirSwitch Wireless Footswitch Controller, SD75, Wireless Footswitch Controller

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.