



MOOKA FAMILY BL-69 Projector with WiFi and Bluetooth User Manual

[Home](#) » [MOOKA FAMILY](#) » MOOKA FAMILY BL-69 Projector with WiFi and Bluetooth User Manual 

MOOKA

FAMILY BL-69 Projector with WiFi and Bluetooth User Manual

Contents

- [1 FAQ -Projector BL-69](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

FAQ -Projector BL-69





Internal Lens to Remove Black Spots

1. How to Setup Screen Mirroring on iPhone?

– A: You need connect the projector to your home WiFi at first.

1: Select “Screen Mirroring” in the Input Source list- Press the “OK” Key- Choose “Setting” – Enter System Setup to Choose “WiFi” – Enter and Save Your Home WiFi Password – Connect this Projector to Your Home WiFi successfully.

2: Return to the “Screen Mirroring” interface – Select the iOS Screen Mirroring function and stay in this interface.

3: Turn on the WLAN on your iPhone and connect your iPhone to your Home WiFi (Connect the projector to your iPhone to the Same Local WiFi Network)

4: Choose “Screen Mirroring” on your iPhone and Select the projector name “MOOKA-xxxxxx” for pairing.

2. How to Play Netflix, Hulu, Amazon Prime Video, and Disney on Movie Projectors From an iPhone?

– A: Cause HDCP copyrighted content from Netflix, Hulu, Prime Video can

– NOT be screen mirrored or screencast directly from an iPhone.

– It’s possible to watch Netflix on your projector with a streaming stick such as Chromecast, Roku, and Firestick. You can plug in the device and connect it to the HDMI port on the back of your projector. Once plugged in, open Netflix from an app or browser like Chrome on your laptop or tablet (if it’s connected to Wi-Fi). After opening up – Netflix, navigate over to “Cast” which should be located at either the top right corner or bottom right corner depending on how old your version of Chrome is.

– From there, select your projectors name that will show up under available devices once you’ve turned it on and then click done. Or, you can use an HDMI cable (Included) to connect from your laptop to the projector to broadcast Netflix, amazon prime videos, Disney+.

3. Which Android Phone Models are not Compatible with WiFi Projectors?

– A: The phone projector adopts Miracast protocol. If your Android phone does not support Miracast(Like Google/MOTO/Sony), it can not be screen mirrored. But you can connect your Android phone to the USB 2 port (OUT5V) on the projector via your original USB phone charge cable, or download any screencast app on your phone.

4. How to Adjust When the Projected Image is Fuzzy or Blurry?

– A: As a general rule, projectors have a projection angle of 90 degrees.

– However, there are features that can compensate for this, such as keystone correction or lens focus. If you notice blurry edges, you can try adjusting the projection angle and the height of the projector to see if that corrects

the problem. If you notice that one edge of your image is stretched out and blurry, you may need to adjust your keystone correction. This feature helps to make sure that the image stays on the screen properly.

Here are the steps to correctly adjust the image on a projector:

1. Turn on the projector to display an image
2. Adjust the angle of a projector to make sure there's a rectangle of light coming from the projector's front lens, so the job of setting the angle becomes a job of getting that image "square" with the wall.
3. Adjust the angle using the projector's feet on the bottom which is designed to be screwed in and out so that the top two corners of the image line up with each other horizontally.
4. Use a vertical keystone on the projector back to adjust the shape of the image, slide the keystone key to the left and right for the vertical correction of $\pm 15^\circ$ to ensure the projected image is always a standard rectangle.
5. Adjust the Focus Ring on the top of the projector to sharpen the projected image.
6. Zoom in or out to fit the screen
7. Repeat the above steps as necessary to dial in the image to your screen

PS: It is normal that the screen edge is less clear than the center for all home projectors, and it performs better in a relatively dark environment.

5. There is No Sound from Home Projectors When Plugging Firestick.

– A: Please check whether the Dolby sound is turned on for the video. The mini projector does not support Dolby sound and needs to be turned off.

– Go to Settings > Display & Sounds > Audio > Dolby Digital Output > Turn Dolby OFF. or Choose the PCM (Setup-Audio output-PCM).

6. How to Clean Black Spots on the Screen?

– A: Take off the projector label that covers a hidden slot for easy internal lens access. After opening, you can wipe the internal lens with a cotton swab. Reference clean link: <https://www.youtube.com/watch?v=1zTTWti-8l4>

7. How to Clean Yellow or Orange Spots on the Screen?

– A: It was broken. Please contact seller, we will send a replacement for free to you ASAP.

8. Is Bluetooth Connectivity also Compatible to Stream Movies or Videos from a Phone?

– A: No, Bluetooth can only transmit Audio, but not Videos. If you want to cast your phone's screen, please use the WiFi screen mirroring function.

9. The video is so choppy when I stream it by the projector, is there any problem with the projector?

– A: Please make sure the speed of your home wifi is great first. The fluent of the video is affected by the speed of your internet.

10. What are the working voltage requirements? will it work on 110v and 230v – us and UK?

– A: The Voltage of the projector is 100-240v. So it will work in US and UK.

– If the above methods don't fix the problem you met, please feel free to contact the seller via message. we will be more than happy to provide a Replacement for Free and will continue to help until everything is solved for you.

Looking forward to your response so that we can provide better service for you.

Best Regards,
MOOKA Family Customer Team





[MOOKA FAMILY BL-69 Projector with WiFi and Bluetooth](#) [pdf] User Manual

BL-69 Projector with WiFi and Bluetooth, BL-69, Projector with WiFi and Bluetooth, WiFi and Bluetooth