



moon U C1 Lumens Head Torch User Manual

[Home](#) » [MOON](#) » moon U C1 Lumens Head Torch User Manual 

Contents

- 1 moon U C1 Lumens Head Torch
- 2 CONTENTS
- 3 OPERATION
- 4 VARIABLE LUMEN SYSTEM
- 5 SOUND ALARM SYSTEM
- 6 CHARGING
- 7 RUNTIME
- 8 BAND INSTALLATION
- 9 WARRANTY
- 10 Documents / Resources

 


moon U C1 Lumens Head Torch








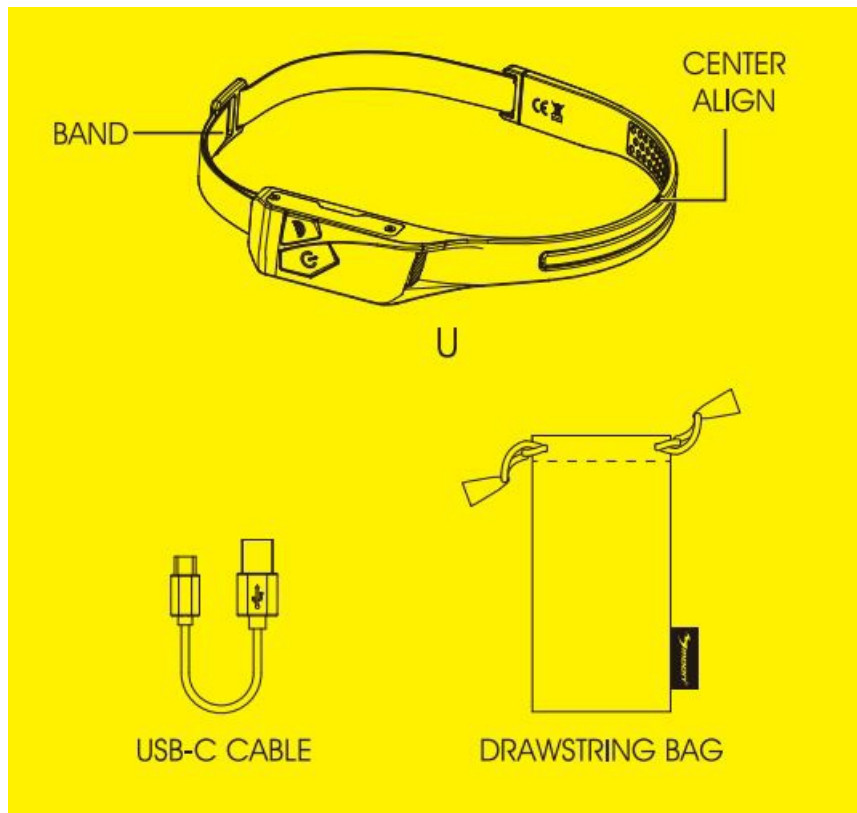

 
The light is locked for shipment, refer to OPERATION instructions to unlock it. Read this manual carefully before using it and keep it for future reference. Visit www.moon-sport.com for manual updates.

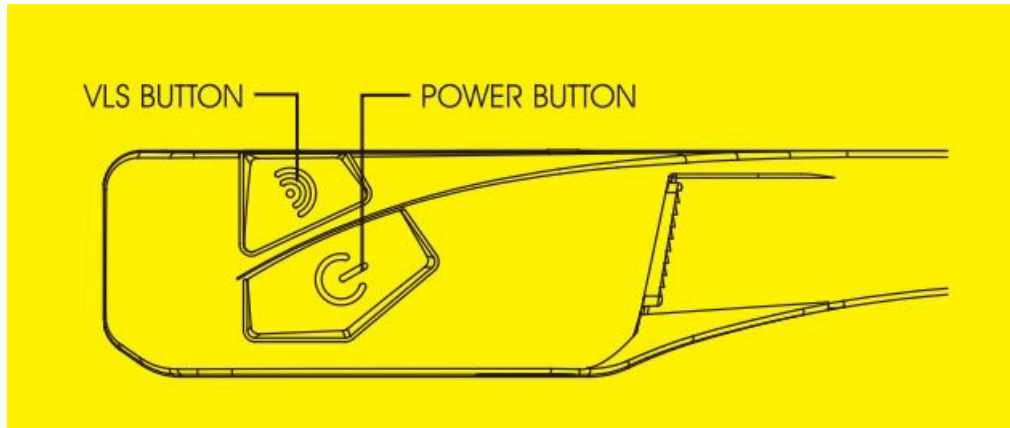CONTENTS



OPERATION

 


- ON / OFF Press  / Press and hold , 0.5s
- MODE SELECT: Click 
- BOOST MODE: Double click 
- BEAM SELECT Click 
- STEADY / FLASH : Double-click 
- LOCK/ UNLOCK:
 - Power off
 - Press and hold  5s
 - BEEP! when locked / BEEP! BEEPI when unlocked


Lock system: Lock the light to prevent it from being turned on.

Mode memory: The light resumes the previous mode upon next usage.


VARIABLE LUMEN SYSTEM

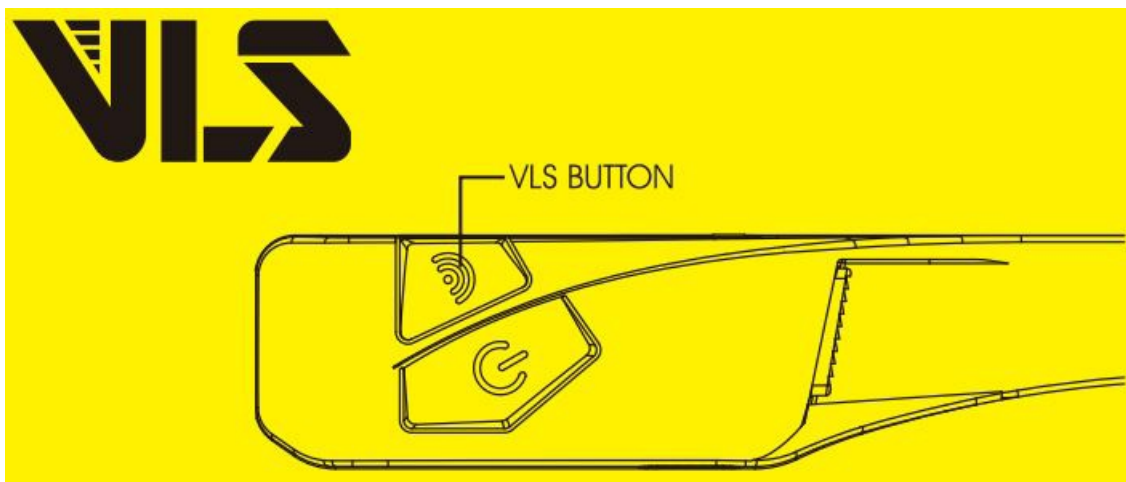

1. Select the desired mode.
2. Press and hold  to set the lumen.

3. Release  when reaching the desired lumen.
4. Light flashes once when reaching the MAX or MIN lumen level.

Restore default setting: 1. Power off

 
Press and hold  8s BEEP! BEEP! BEEP! when finished.

Mode memory: The light resumes the previous VLS setting upon next usage.

SOUND ALARM SYSTEM

- SAS beeps when battery is low.
- 50% – beep! (1 time)
- 25% – beep! beep! (every 10mins)
- 10% – beep! beep! beep! (every 10mins)

CHARGING

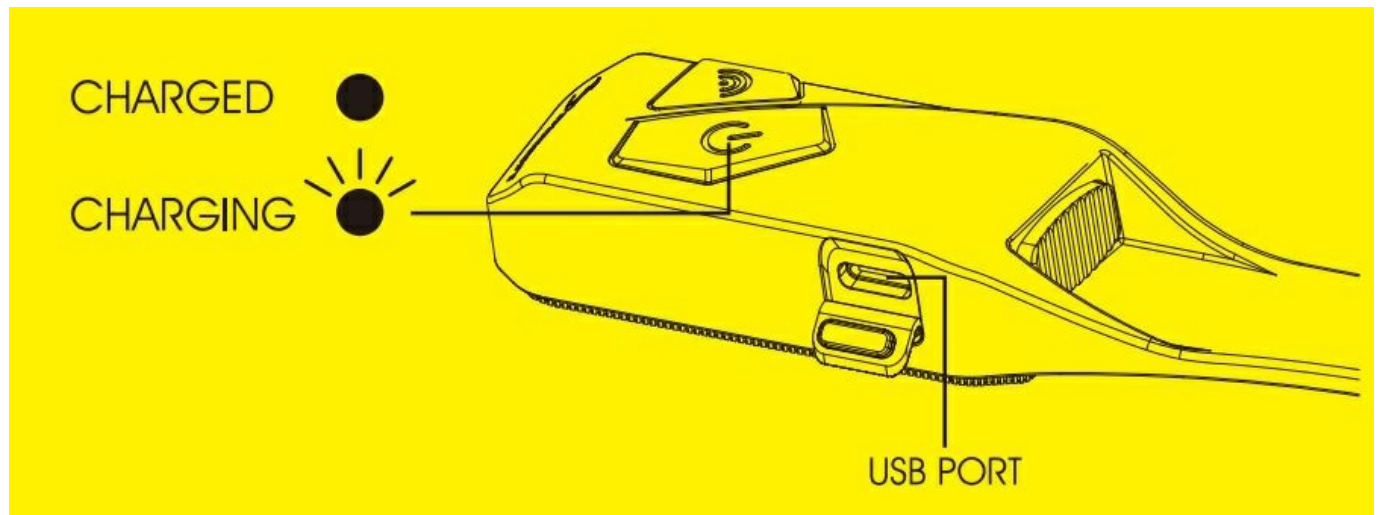



1. Power off.
2. Plug USB cable to USB port.
3. Unplug after fully charged.





Do not charge over 5V.



Keep away from flammable objects while charging.

RUNTIME











Mix

	BOOST	MODE1	MODE2
<div>DEFAULT LUMEN</div> <div>LUMEN</div> <td>350</td> <td>250</td> <td>100</td>	350	250	100
<div>DEFAULT LUMEN</div> <div>H:MIN</div> <td>1:30</td> <td>2:30</td> <td>6:00</td>	1:30	2:30	6:00
<div>VLS LUMEN</div> <div>LUMEN</div> <td>-</td> <td>250-10</td> <td>250-10</td>	-	250-10	250-10
<div>DEFAULT LUMEN</div> <div>H:MIN</div> <td>-</td> <td>2:30-52:00</td> <td>2:30-52:00</td>	-	2:30-52:00	2:30-52:00



LED

	BOOST	MODE1	MODE2
<div>DEFAULT LUMEN</div> <div>LUMEN</div> <td><div></div>350</td> <td>200</td> <td>70</td>	<div></div> 350	200	70
<div>DEFAULT LUMEN</div> <div>H:MIN</div> <td>1:30</td> <td>3:00</td> <td>8:00</td>	1:30	3:00	8:00
<div>VLS LUMEN</div> <div>LUMEN</div> <td>-</td> <td>200-5</td> <td>200-5</td>	-	200-5	200-5
<div>DEFAULT LUMEN</div> <div>H:MIN</div> <td>-</td> <td>3:00-100:00</td> <td>3:00-100:00</td>	-	3:00-100:00	3:00-100:00




COB

	BOOST	MODE1	MODE2	FLASH	STEADY FLASH	SOS
<div>DEFAULT LUMEN</div> <div>LUMEN</div> <td>350</td> <td>150</td> <td>50</td> <td>10</td> <td>20</td> <td>-</td>	350	150	50	10	20	-
<div>DEFAULT LUMEN</div> <div>H:MIN</div> <td>1:30</td> <td>3:50</td> <td>11:00</td> <td>200:00</td> <td>68:00</td> <td>66:00</td>	1:30	3:50	11:00	200:00	68:00	66:00
<div>VLS LUMEN</div> <div>LUMEN</div> <td>-</td> <td>150-5</td> <td>150-5</td> <td>200-5</td> <td>200-5</td> <td>-</td>	-	150-5	150-5	200-5	200-5	-
<div>DEFAULT LUMEN</div> <div>H:MIN</div> <td>-</td> <td>3:45-108:30</td> <td>3:45-108:30</td> <td>17:00-330:00</td> <td>20:00-68:00</td> <td>-</td>	-	3:45-108:30	3:45-108:30	17:00-330:00	20:00-68:00	-


Use the SOS sign for red emergency only

BAND INSTALLATION

 
STEP.1

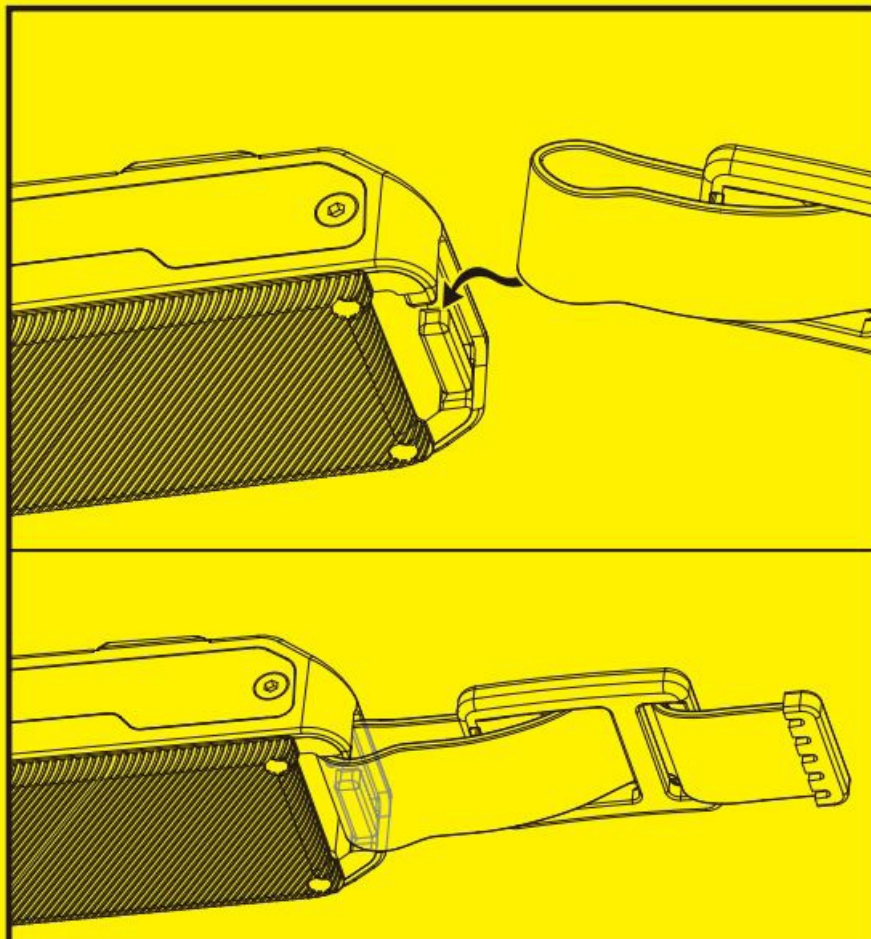

STEP.2

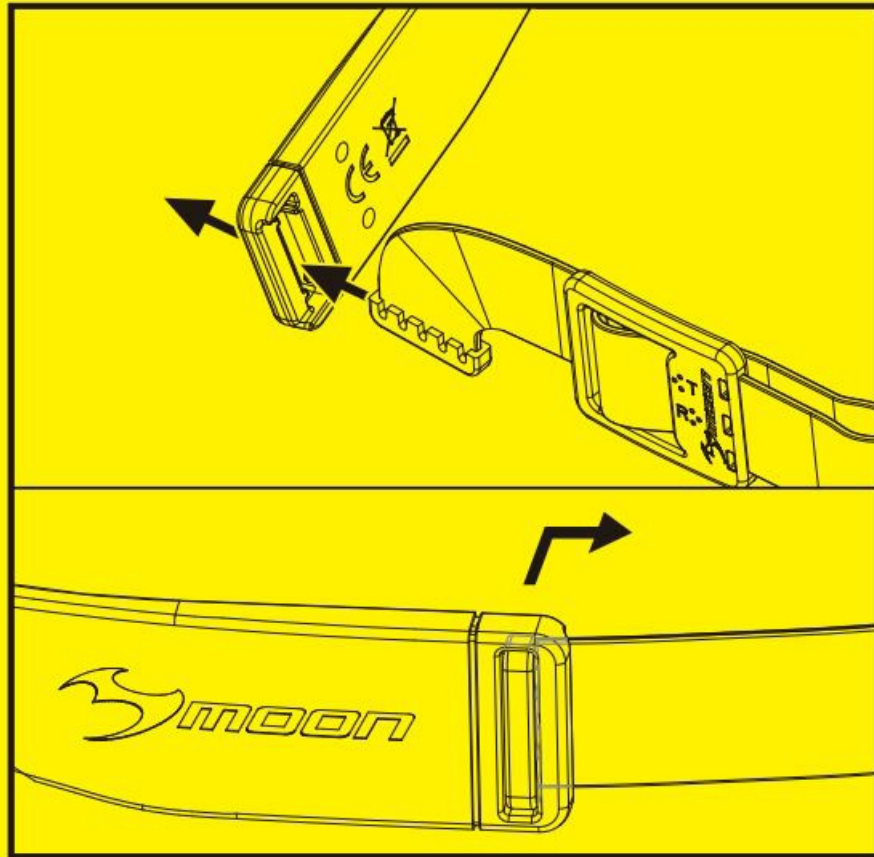 


CENTER ALIGN

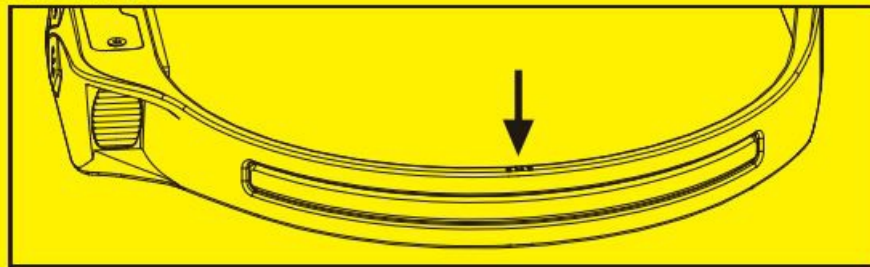 

WARNING

 - Understand country lighting laws and regulations before use.
- Do not shine light directly into your eyes.
- Do not submerge the light into the water.
- Keep light in a cool and dry place when storing.
- Fully recharge the light at least every 3 months during storage.
- Do not place the band around the neck to prevent strangulation.
- Do not twist the COB.

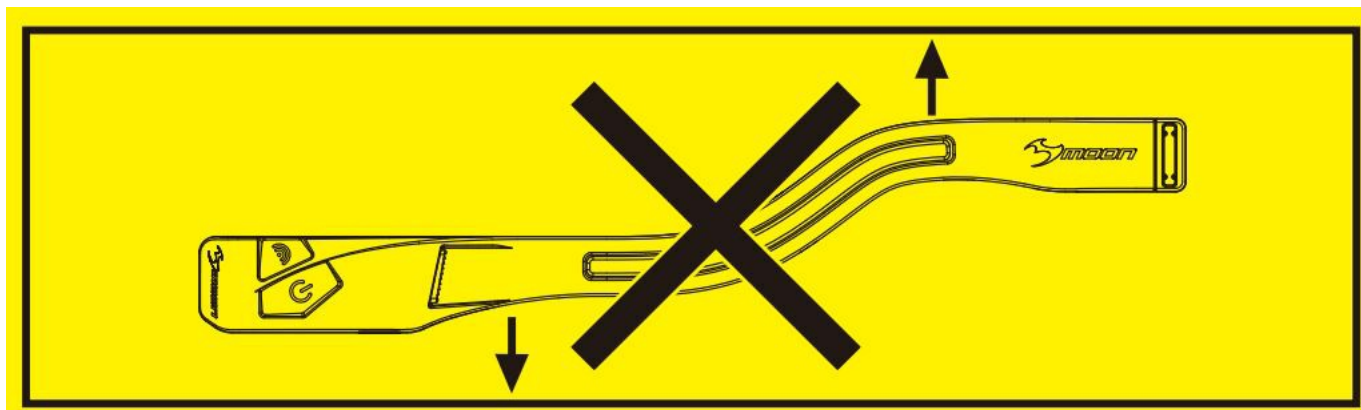

WARRANTY

MOON lights are covered by a ONE-YEAR LIMITED WARRANTY from the date of purchase. This warranty covers the defects in material and workmanship only with proof of purchase. Please contact original dealer for warranty service. For lights bought on MOON website, please contact cs@moon-sport.com for help.

ONLINE WARRANTY REGISTRATION

Visit www.moon-sport.com for online warranty registration.

Documents / Resources



[moon U C1 Lumens Head Torch](#) [pdf] User Manual

U C1 Lumens Head Torch, U C1, Lumens Head Torch, Head Torch, Torch

[Manuals+](#)