



---

[Home](#) » [moorgen](#) » **moorgen 8620 4 Key Rotary Smart Remote Control Instructions** 

## **Contents** [ [hide](#) ]

- [1 moorgen 8620 4 Key Rotary Smart Remote Control](#)
- [2 Product Usage Instructions](#)
- [3 INSTRUCTION](#)
- [4 PRODUCT FUNCTIONS](#)
- [5 TECHNICAL PARAMETERS](#)
- [6 DIMENSION](#)
- [7 SCHEMATIC DIAGRAM OF BATTERY INSTALLATION](#)
- [8 PRODUCT EXPLODED DIAGRAM](#)
- [9 FCC WARNING](#)
- [10 Frequently Asked Questions](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)

# moorgen

## **moorgen 8620 4 Key Rotary Smart Remote Control**



## Specifications

- **Model:** MQE620D37, MQE620C25, MQE620F18
- **Product Name:** 4-Key Rotary Smart Remote Control
- **Power Supply:** 3V (2 AAA Batteries)
- **Working Current:** 35mA
- **Wireless Frequency:** 915MHz
- **Wireless Distance:** 20m

## Product Usage Instructions

### To Install Batteries

1. Push left to remove the upper cover.
2. Insert 2 AAA batteries according to the schematic diagram provided.
3. Reattach the upper cover securely.

### To Use the Remote Control

- **Key1:** Perform the function associated with Key1.
- **Key2:** Perform the function associated with Key2.
- **Key3:** Perform the function associated with Key3.
- **Key4:** Perform the function associated with Key4.
- To rotate left or right, use the corresponding keys as indicated.

# INSTRUCTION

## TO USER

Thank you for purchasing our products! Please read this instruction carefully before use and keep it for reference!

## LEGAL NOTICE

- The contents and pictures in the documents enclosed in the product package are for illustration only.
- Results (including but not limited to appearance, color, size) and supported functions (When the software is updated, the product functions will be updated as well.) etc. may be slightly different, please refer to the actual product.

## PRODUCT FUNCTIONS

- Multifunction rotary smart remote control supporting the control of dimming light, color light, CCT light, BGM, and curtains;
- The remote control has 4 keys and supports left and right rotation operations.
- Slight touch keys to change 4 devices, and left/right rotation to control the devices;
- Every device can be set to left/right rotation and pause operations, with functions customized.
- You can open/close the rotation sound effect by long-pressing KEY4 for 5 seconds.
- You can also adjust the volume and pitch of the rotation sound effect.
- Used with the Mo-Bus wireless gateway.

 
## TECHNICAL PARAMETERS

- **Model:** MQE620D37 MQE620C25 MQE620F18
- **Product Name:** 4-Key Rotary Smart Remote Control
- **Power Supply:** 3V 2 AAA Batteries
- **Working Current:**  $\leq 35\text{mA}$
- **Wireless Frequency:** 915MHz
- **Wireless Distance:**  $\geq 20\text{m}$
- **IP Rating:** IP20


- **Working Temperature:** 0°C~50°C
- **Working Humidity:** 10%~80%RH, no condensation
- **Dimension:** Φ66x67mm
- **Installation:** Table-placed

## DIMENSION


(Unit: mm)

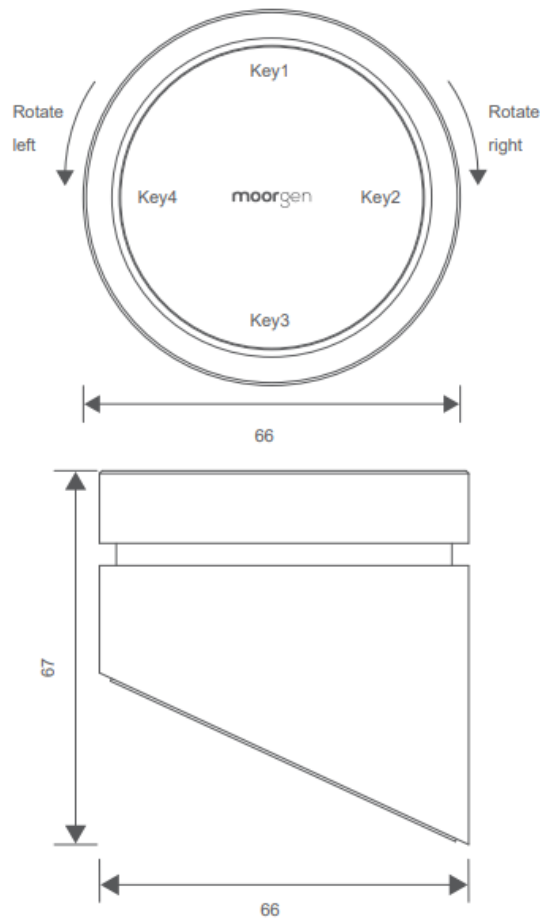

## SCHEMATIC DIAGRAM OF BATTERY INSTALLATION

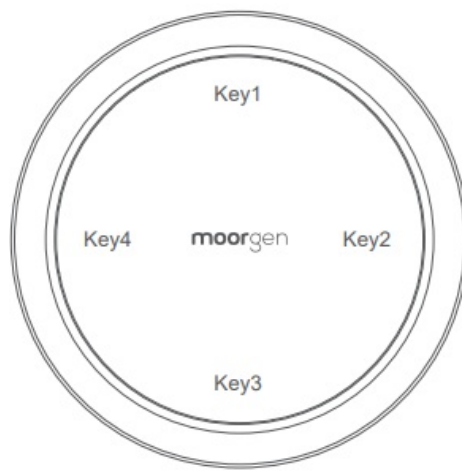 


Push left to remove.

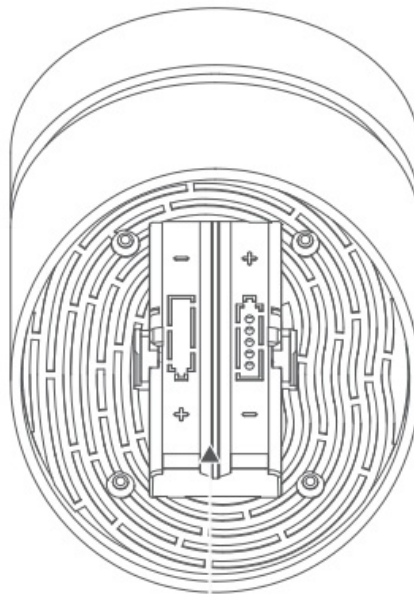 

- **Battery Installation**

- 2 \* AAA Batteries

## PRODUCT EXPLODED DIAGRAM

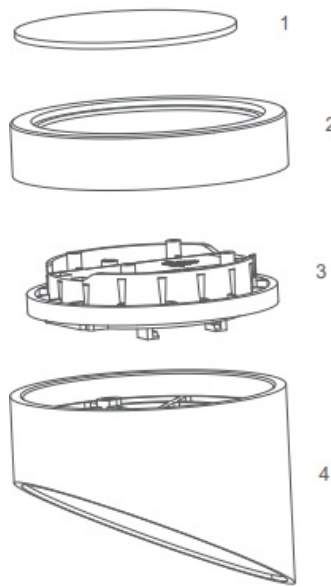 

1. Lens
2. Upper cover
3. Lower cover
4. Base

## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference,
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet the general RF exposure requirement. The device can be used in portable exposure conditions without restriction.

## **NOTICE**

- For the initial user, please read these instructions carefully before installation.
- Products packed in boxes should be preserved in a ventilated, dry, and safe indoor place with no corrosive gases.
- The stacking height is 10 layers max, and the appropriate warehouse temperature range is  $-10^{\circ}\text{C}\sim+40^{\circ}\text{C}$ ;
- Without the direct influence of the rain, snow, fierce impact, and other external factors, the products packed in boxes can be transported by any vehicle.
- Keep the product away from a moist environment during use to avoid unnecessary impact on the product.
- Instead, keep the products in a dry and clean place to prevent the inner components from moisture and other stuff that may affect the product's performance.
- Please use a fine cloth to clean the dust on the surface. Do not use corrosive cleaning liquids or other chemical solvents.
- If the product has a performance failure, non-professional personnel are not allowed to open it. Please contact related service providers or the after-sales service department.

**Scan to visit the official website**




- [moorgen.de](https://moorgen.de)

## Frequently Asked Questions

- **Q: What should I do if the remote control stops working?**
  - **A:** Check the battery level and replace if necessary. Ensure there are no obstructions between the remote and the receiver. If issues persist, contact customer support.
- **Q: Can I use rechargeable batteries with this remote control?**
  - **A:** It is recommended to use non-rechargeable AAA batteries for optimal performance.
- **Q: How far is the wireless range of the remote control?**
  - **A:** The wireless distance is up to 20 meters under normal operating conditions.

## Documents / Resources

	<a href="#">moorgen 8620 4 Key Rotary Smart Remote Control [pdf]</a> Instructions 8620, 2BG6M-8620, 2BG6M8620, 8620 4 Key Rotary Smart Remote Control, 8620, 4 Key Rotary Smart Remote Control, Rotary Smart Remote Control, Smart Remote Control, Remote Control
---	--

## References

- [User Manual](#)

moorgen

2BG6M-8620, 2BG6M8620, 4 Key Rotary Smart Remote Control, 8620, 8620 4 Key Rotary Smart Remote Control, moorgen, Remote Control, Rotary Smart Remote Control, Smart Remote Control



# Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.