

morphy richards

MRAT4UB

Ascend 4

Slice Toaster



morphy richards MRAT4UB Ascend 4 Slice Toaster Instruction Manual

[Home](#) » [morphy richards](#) » morphy richards MRAT4UB Ascend 4 Slice Toaster Instruction Manual 

Contents

- [1 morphy richards MRAT4UB Ascend 4 Slice Toaster](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 SPECIFICATIONS](#)
- [4 PRODUCT OVERVIEW](#)
- [5 BEFORE FIRST USE](#)
- [6 USING YOUR TOASTER](#)
- [7 CLEANING](#)
- [8 WARRANTY](#)
- [9 CONTACT](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

morphy richards®

morphy richards MRAT4UB Ascend 4 Slice Toaster



IMPORTANT SAFETY INSTRUCTIONS



CAUTION: HOT SURFACE

PLEASE BE AWARE OF HOT SURFACES HANDLE WITH CARE

The use of any electrical appliance requires the following common sense safety rules. Please read these instructions carefully before using the product.

- **WARNING:** Misuse of appliances could cause personal injury.
- **WARNING:** Avoid using small bread slices less than 85mm in length, you must pay attention to the potential risk of burning when taking out the bread.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of reach of children.
- Cleaning and user maintenance shall not done by children.
- This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Bread may burn, therefore toasters must NOT be used near or below curtains and other combustible materials.
- The use of attachments or tools not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
- Do NOT attempt to remove food with forks or other utensils into the toaster. As well as damaging the toaster, there is a high risk of electric shock.
- Should some toast remain blocked in the toaster, remove the plug from the mains, wait for the toaster to cool down until it is safe to touch, then turn the toaster over and shake it gently.
- Clean the crumb trays regularly, as crumbs can smoke or burn.
- Over-sized food, metal foil packages or utensils must NOT be inserted in the toaster as they may cause fire or electric shock.

Location

- This appliance is intended to be used in households and similar applications such as: farmhouses; by clients in hotels, motels, and other residential type environments; and bed and breakfast type environments. It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat surface.
- Do NOT use the appliance outdoors or near water.

Power cable

- Do NOT let the power cable hang over the edge of a worktop where a child could reach it.
- Do NOT let the power cable run across an open space e.g. between a low socket and a table.
- Do NOT let the power cable run across a cooker or other hot area which might damage the cable.
- The power cable should reach from the socket to the base unit without straining the connections.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- It is recommended to not use this appliance with extension leads and/or power boards.

Personal safety

- **WARNING:** To protect against fire, electric shock, and personal injury do not immerse the cord, plug and appliance in water or any other liquid.
- Do NOT touch the hot surface. Use handles, levers or knobs only.
- Unplug from the outlet before cleaning and when not in use.
- Allow to cool before putting on or taking off parts and before cleaning.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Surfaces are liable to get hot during use.

Other safety considerations

- **WARNING:** The appliance must not be immersed for cleaning.
- **CAUTION:** To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning. Use a soft cloth and detergent.
- Do NOT place the appliance on or near a hot gas or electric burner or in a heated oven.


Electrical requirements

- **WARNING:** This appliance must be earthed.
- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A. C. (Alternating Current).
- This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well-earthed.

SPECIFICATIONS

Model:	MRAT4UB	MRAT4RG
Colour:	Upward Blue	Racing Green
Rated Voltage & Frequency:	220-240V~ 50-60Hz	
Rated Power:	1680-2000W	
Capacity:	4 Slice	
External Dimensions (L x W x H):	280 x 308 x 215mm	
Net Weight:	2.75 Kg	

PRODUCT OVERVIEW

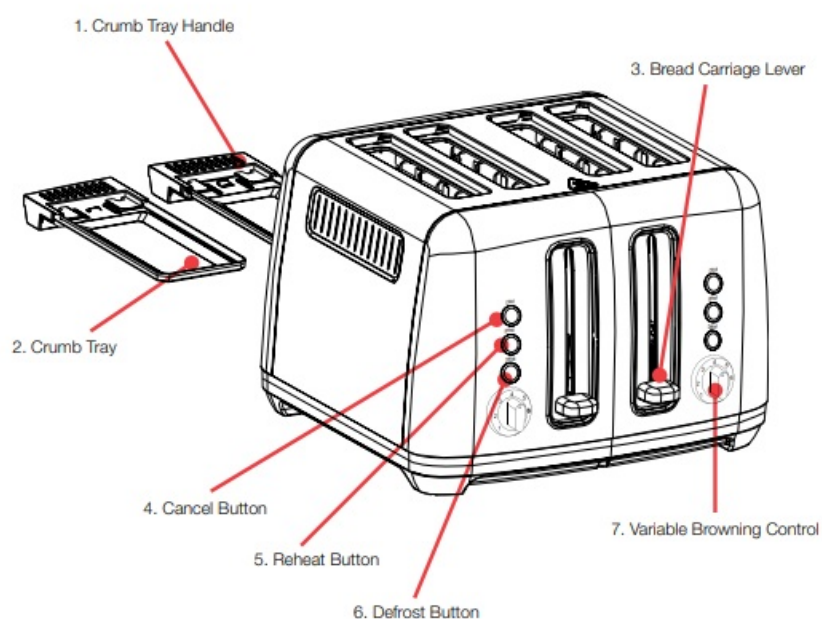

BEFORE FIRST USE

- As manufacturing residue or oil remains in the toaster and on the heating element, it can emit a 'new' odor when first used. This is normal and will not occur after the first few uses. NOTE: Before toasting the first slice of bread it is strongly suggested to operate the appliance following the below operating instructions, except without bread.
- On four-slice models, the toaster has two sides with controls repeated for each half. Each half can be used together or independently.
- Only regular sliced bread should be placed into the toaster.

USING YOUR TOASTER

- Place the sliced bread into the Bread Slots.

- Adjust the Variable Browning Control (7) to the desired setting.
- Depress the Bread Carriage Lever (3). The toaster will begin toasting the bread and the Cancel button (4) light will illuminate.
- NOTE: The carriage lever will only depress and hold in place when the appliance is connected to the power supply.
- When completed, the Bread Carriage Lever (3) will automatically rise and lift the toast from the toaster.
- During the toasting process, you may stop this at any time by pressing the Cancel button (4).
- To toast frozen bread, do not adjust the Variable Browning Control (7) from your normal setting. Place the frozen bread in the bread slots, depress the Bread Carriage Lever (3), and press the Defrost Button (6). The button will illuminate and the toaster will operate for a longer period defrosting and toasting the bread.
- If you want to reheat bread that was previously toasted but gone cold. Press the Bread Carriage Lever (3) down vertically until it is positioned in place, then press the Reheat button (5). The Reheat button (5) will illuminate and the toaster will operate for a short period reheating the bread.
- If the toaster starts to smoke, press the Cancel button (4) to stop toasting immediately.

CLEANING

WARNING: Crumbs will accumulate in the Crumb Trays (2) and could catch fire if not emptied regularly.

- Disconnect the power supply before cleaning.
- When the appliance has cooled down completely, tap the sides of the case lightly to dislodge any crumbs lodged in the toaster. Pull out the Crumb Trays (2) on the bottom of the toaster by the Crumb Tray Handles (1) and empty. If the toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the Crumb Trays (2) are completely closed before using the toaster again.
- **NOTE:** Never operate the appliance without the Crumb Trays (2) fitted.
- Wipe the outside chassis with a soft dry cloth after the toaster cools down. Never use polish.
- When not in use or when being stored for extended periods, the power cord may be wound under the bottom of the toaster.

WARRANTY

Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre below.

Recycling: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater, polluting the food chain and damaging health and wellbeing. Expanded Polystyrene Disposal: The websites listed below can assist in the responsible disposal of EPS (Expanded Polystyrene) packaging products.

CONTACT

- **Australia:** <https://recyclingnearyou.com.au/polystyrene> and/or <http://epsa.org.au>
- **New Zealand:** <https://greenbusinesshq.com/epsrecycling> and/or <https://www.plastics.org.nz/environment/recycling-disposal/eps-recycling>
- Glen Dimplex Australia Pty Ltd 8 Lakeview Drive,


- Scoresby 3179, Victoria Australia
- **Ph:** 1300 556 816
- Glen Dimplex New Zealand Ltd 38 Harris Road, East Tamaki, Auckland 2013
- New Zealand
- **Ph:** 0800 666 2824
- **Email:** seasonal.support@glendimplex.com.au
- **Web:** www.morphyrichards.com.au

For product hints and tips plus more join us at www.morphyrichards.com.au






- facebook.com/MorphyRichardsAUS
- instagram.com/morphyrichardsau

© Glen Dimplex Australia. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex Australia.

Documents / Resources

 <p>The image shows the front cover of a Morphy Richards instruction manual. At the top, the Morphy Richards logo is displayed with the tagline 'smart ideas for your home'. Below this, the product name 'Ascend 4 Slice Toaster' is written. A small image of the toaster is shown. Underneath, the model numbers 'Models: MRAT4UB / MRAT4RG' are listed. The title 'INSTRUCTION MANUAL' is prominently displayed. Below the title, there is a note: 'Read these instructions carefully before using the appliance for the first time. STORE THESE INSTRUCTIONS CAREFULLY'. At the bottom, there are social media icons for Facebook, Twitter, and YouTube.</p>	<p>morphy richards MRAT4UB Ascend 4 Slice Toaster [pdf] Instruction Manual MRAT4UB, MRAT4RG, MRAT4UB Ascend 4 Slice Toaster, MRAT4UB, Ascend 4 Slice Toaster, 4 Slice Toaster, Slice Toaster, Toaster</p>
---	---

References

-  [Home - Expanded Polystyrene Australia](#)
-  [Login • Instagram](#)
-  [Homepage | Morphy Richards](#)
-  [EPS Recycling - Green Business HQ](#)
-  [EPS Recycling | Plastics New Zealand](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.