



## morphy richards MRET02B Equip 2 Slice Toaster Instruction Manual

[Home](#) » [morphy richards](#) » morphy richards MRET02B Equip 2 Slice Toaster Instruction Manual 

### Contents

- 1 [morphy richards MRET02B Equip 2 Slice Toaster](#)
- 2 [SPECIFICATIONS](#)
- 3 [TOASTER PARTS](#)
- 4 [IMPORTANT SAFETY INSTRUCTIONS](#)
- 5 [OPERATING INSTRUCTIONS](#)
  - 5.1 [CLEANING](#)
- 6 [Documents / Resources](#)
  - 6.1 [References](#)
- 7 [Related Posts](#)

**morphy richards®**


**morphy richards MRET02B Equip 2 Slice Toaster**



## SPECIFICATIONS

- Model: MRET02B
- Colour: Black
- Rated Voltage: 220-240V~50-60Hz
- Rated Power: 950-1150W
- Capacity: 2 Slice Toaster
- External Dimensions (L x W x H): 292 x 186 x 215mm
- Net Weight: 1.66kg

## TOASTER PARTS

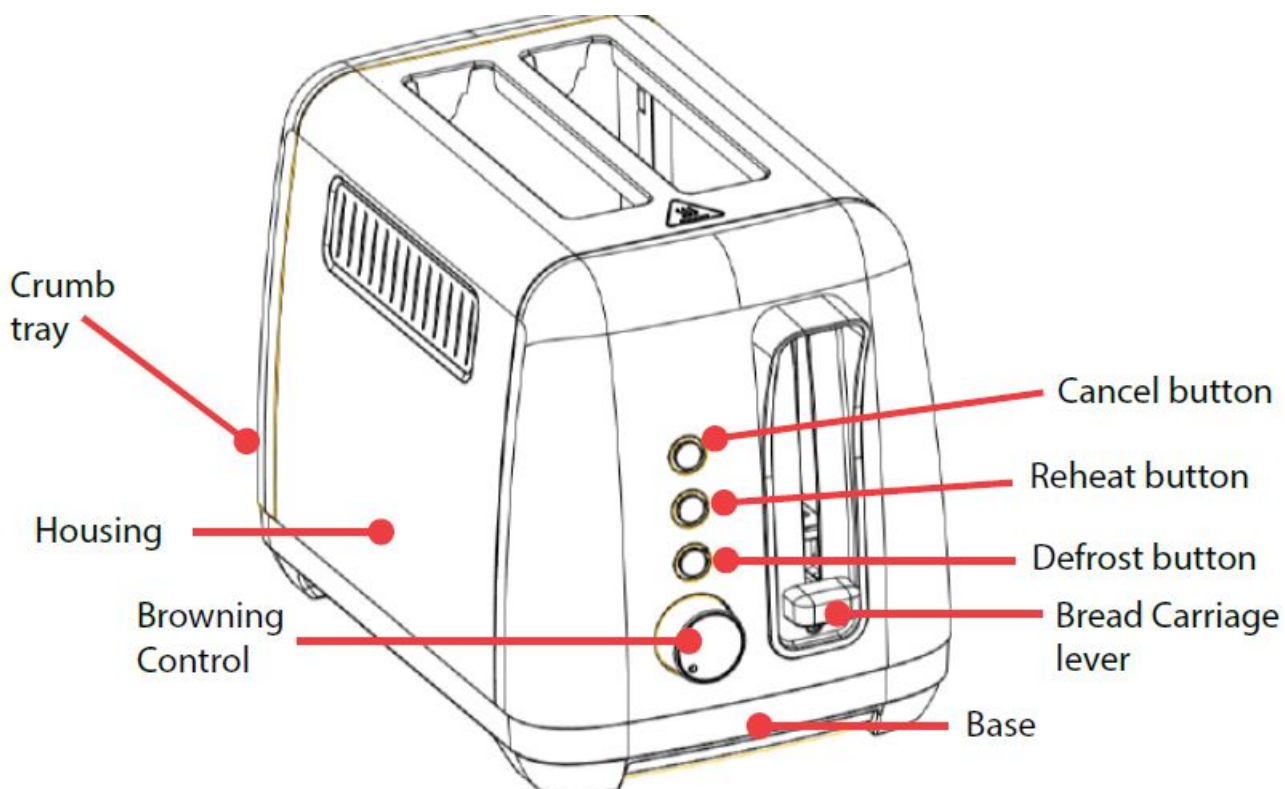

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** The use of any electrical appliance requires the following common sense safety rules.

- Please read these instructions carefully before using the product.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children.
- Keep the appliance and its cord out of reach of children.
- This appliance is intended to be used in household and similar applications such as: farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments. It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING:** Misuse of the appliance could cause personal injury.
- The bread may burn, therefore do not use the appliance near or below combustible material such as curtains.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- Do not let the cable run across a cooker or hot area which might damage the cable.

## **OTHER SAFETY CONSIDERATIONS**

Only use for intended purpose.

## **PERSONAL SAFETY**

- Do watch your appliance during use.
- **WARNING:** Do not touch the top of the appliance or other hot parts during or after use, use handles or knobs. The temperature of accessible surfaces may be high when the appliance is operating.
- Do not wrap the cable around the main body of the appliance during or immediately after use.
- Do not use under cupboards.
- Do not insert oversize foods, metal, foil packages or utensils into the toaster.
- Do not attempt to dislodge food when the appliance is plugged in and never insert cooking utensils into the slots.
- **IMPORTANT:** Do not place bread or other items on top of the slots as this may damage the appliance and creates a fire hazard.
- Never use the appliance when it is empty (when there is no bread inside) except on first use.
- Do not use very thin or broken slices of bread.
- Do not insert other foods that may drip during the cooking process. In addition to making the cleaning procedure more difficult, these may cause fires.
- Clean the crumb tray regularly: crumbs can smoke or burn.
- Do not insert (by force) foods that are too big for the slots.
- Do not insert forks or other utensils into the toaster in order to remove bread. As well as damaging the toaster, there is a high risk of electric shock.
- Should some toast remain blocked in the toaster, remove the plug from the mains, wait for the toaster to cool

down until it is safe to touch, then turn the toaster over and shake it gently.

- This appliance must be used in accordance with the instructions and must not be used for other purposes.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

## OPERATING INSTRUCTIONS

As there is manufacturing residue or oil remaining in the toaster and on the heat element, it usually emits a 'new' odor when first used. This is normal and will not occur after the first few uses.

**NOTE:** Before toasting the first slice of bread it is strongly suggested to operate the appliance following below instructions, except without bread.

1. Place the sliced bread into the Bread Slots.
2. Adjust the Browning Control to the desired setting.
3. Depress the Bread Carriage Lever. The toaster will begin toasting the bread.
4. When completed, the Bread Carriage Lever will automatically rise and lift the toast from the toaster.

**Note:** The carriage handle will only depress when the appliance is connected to the power supply.

5. During the toasted process, you may interrupt the toasting process at any time by pressing the Cancel button.
6. To toast frozen bread, do not adjust the Browning Control from your normal setting. Place the frozen bread in the Bread Slots, depress the Bread Carriage Lever and press the Defrost Button. The button will illuminate and the toaster will operate for a longer period defrosting and toasting the bread.
7. If you want to reheat bread that was previously toasted but gone cold. Press the Bread Carriage handle down vertically until it is positioned in place, then press REHEAT button. The REHEAT button will be illuminated and the toaster will operate for a short period reheating the bread.

## CLEANING

**WARNING:** Crumbs will accumulate in the Crumb Tray and could catch fire if not emptied regularly.

1. Disconnect the power supply before cleaning.
2. When the appliance has cooled down completely, tap the sides of the case lightly to dislodge any crumbs lodged in the toaster. Pull out the crumb tray on the bottom of toaster by crumb tray handle and empty. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.

**NOTE:** Never operate the appliance without the Crumb Tray fitted.

3. Wipe the outside with soft dry cloth after toaster cools down.
4. When not use or when being stored for extended periods, the power cord may be wound under the bottom of toaster.

## MAINTENANCE

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling your local after sales service agent or the

**Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).**



## WARRANTY

Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre below.

**Glen Dimplex Australia Pty Ltd 8 Lakeview Drive,**  
Scoresby 3179, Victoria Australia  
Ph: 1300 556 816

**Glen Dimplex New Zealand Ltd 38 Harris Road, East Tamaki, Auckland 2013**  
NewZealand  
Ph: 0800 666 2824

**Documents / Resources**

  Equip 2 Slice Toaster INSTRUCTION MANUAL Models: MRET02B  Read these instructions carefully before using the appliance for the first time. STORE THESE INSTRUCTIONS CAREFULLY  <a href="http://www.morphyrichards.com.au">www.morphyrichards.com.au</a>	<a href="#">morphy richards MRET02B Equip 2 Slice Toaster</a> [pdf] Instruction Manual MRET02B, Equip 2 Slice Toaster
  Equip 2 Slice Toaster INSTRUCTION MANUAL Models: MRET02B  Read these instructions carefully before using the appliance for the first time. STORE THESE INSTRUCTIONS CAREFULLY  <a href="http://www.morphyrichards.com.au">www.morphyrichards.com.au</a>	<a href="#">morphy richards MRET02B Equip 2 Slice Toaster</a> [pdf] Instruction Manual MRET02B, Equip 2 Slice Toaster, MRET02B Equip 2 Slice Toaster, Slice Toaster, Toaster

**References**

-  [Homepage | Morphy Richards](#)