



# **morphy richards MRRGT4BLK Ascend 4 Slice Toaster Instruction Manual**

[Home](#) » [morphy richards](#) » morphy richards MRRGT4BLK Ascend 4 Slice Toaster Instruction Manual 

## **Contents**

- [1 morphy richards MRRGT4BLK Ascend 4 Slice Toaster](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Safety Instructions](#)
- [5 Warranty](#)
- [6 INSTRUCTION MANUAL](#)
- [7 SPECIFICATIONS](#)
- [8 NAMES OF PARTS AND ACCESSORIES](#)
- [9 IMPORTANT SAFETY INSTRUCTIONS](#)
- [10 BEFORE FIRST USE](#)
- [11 OPERATING INSTRUCTIONS](#)
- [12 CLEANING](#)
- [13 Documents / Resources](#)
  - [13.1 References](#)
- [14 Related Posts](#)

**morphy richards®**

**morphy richards MRRGT4BLK Ascend 4 Slice Toaster**



## Product Information

The Ascend 4 Slice Toaster comes in two colors: black and white. It has a rated voltage of 220-240V~50-60Hz and a rated power of 1680-2000W. The toaster has a capacity of 4 slices and its external dimensions are 308 x 280 x 215mm. The net weight of the toaster is 2.65 Kg.

The toaster has the following parts and accessories:

- Crumb Tray Handle
- Crumb Tray
- Bread Carriage Lever
- Cancel Button
- Reheat Button
- Defrost Button
- Variable Browning Control

## Product Usage Instructions

1. Before first use, read the instructions carefully.
2. Place the toaster on a flat and stable surface.
3. Insert the mains cable into an electrical outlet.
4. Select the desired browning level using the variable browning control

5. Place bread slices in the bread carriage.
6. Select the desired function using the corresponding button:
  - Cancel: to stop toasting at any time
  - Reheat: to warm up previously toasted bread
  - Defrost: to defrost frozen bread before toasting
7. The bread carriage lever will automatically lower the bread into the toaster.
8. The toaster will automatically turn off once the toasting process is complete.
9. Use the crumb tray handle to remove the crumb tray and dispose of any crumbs.
10. Clean the toaster regularly using a damp cloth. Do not use abrasive cleaners or scourers.

## Safety Instructions

Be aware of hot surfaces when handling the toaster. Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and wellbeing.

## Warranty

Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre below.

Glen Dimplex Australia Pty Ltd Glen Dimplex New Zealand Ltd 8 Lakeview Drive, 38 Harris Road, East Tamaki, Scoresby 3179, Victoria Auckland 2013 Australia New Zealand Ph: 1300 556 816 Ph: 0800 666 2824

### Warranty Information

Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre.

- Glen Dimplex Australia Pty Ltd
  - 8 Lakeview Drive, Scoresby 3179, Victoria Australia
  - Ph: 1300 556 816
  - **Email:** [sales@glendimplex.com.au](mailto:sales@glendimplex.com.au)
  - **Website:** [www.morphyrichards.com.au](http://www.morphyrichards.com.au)
- Glen Dimplex New Zealand Ltd
  - 38 Harris Road, East Tamaki, Auckland 2013 New Zealand
  - Ph: 0800 666 2824

## INSTRUCTION MANUAL

**Model:** MRRGT4BLK / MRRGT4WTE

Read these instructions carefully before using this appliance for the first time.

STORE THESE INSTRUCTIONS CAREFULLY


For product hints and tips plus more join us at

- [www.morphyrichards.com.au](http://www.morphyrichards.com.au)
- [facebook.com/MorphyRichardsAUS](https://facebook.com/MorphyRichardsAUS)
- [instagram.com/morphyrichardsau](https://instagram.com/morphyrichardsau)

## SPECIFICATIONS

Model:	MRRGT4BLK	MRRGT4WTE
Colour:	<b>Black</b>	<b>White</b>
Rated Voltage:	220-240V~50-60Hz	
Rated Power:	1680-2000W	
Capacity:	4 Slice	
External Dimensions (L x W x H):	308 x 280 x 215mm	
Net Weight:	2.65 Kg	

## NAMES OF PARTS AND ACCESSORIES

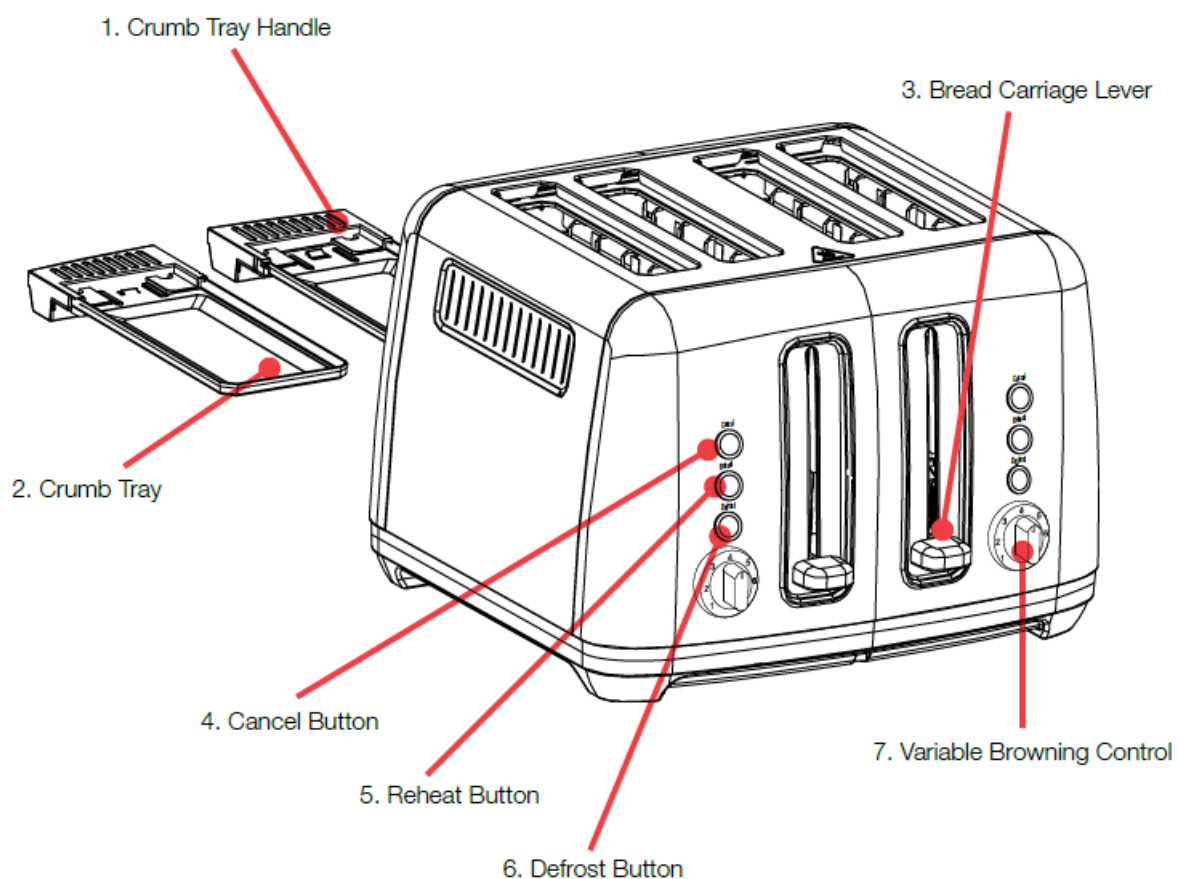

## IMPORTANT SAFETY INSTRUCTIONS

**CAUTION:** HOT SURFACE PLEASE BE AWARE OF HOT SURFACES HANDLE WITH CARE The use of any electrical appliance requires the following common sense safety rules. Please read these instructions carefully before using the product.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of reach of children.
- Cleaning and user maintenance shall not be done by children.
- **WARNING:** Misuse of appliance could cause personal injury.
- This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Bread may burn, therefore toasters must NOT be used near or below curtains and other combustible materials.
- The use of attachments or tools not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
- Do NOT attempt to remove food with forks or other utensils into the toaster. As well as damaging the toaster, there is a high risk of electric shock.
- Should some toast remain blocked in the toaster, remove the plug from the mains, wait for the toaster to cool down until it is safe to touch, then turn the toaster over and shake it gently.
- **WARNING:** Avoid using small bread slices less than 85mm length, you must pay attention to the potential risk of burning when taking out the bread.
- Clean the crumb trays regularly, as crumbs can smoke or burn.
- Over-sized food, metal foil packages or utensils must NOT be inserted in the toaster as they may cause fire or electric shock.

## Location

- This appliance is intended to be used in household and similar applications such as: farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments. It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat surface.
- Do NOT use the appliance outdoors or near water.

## Mains cable

- Do NOT let the mains cable hang over the edge of the worktop where a child could reach it.
- Do NOT let the mains cable run across an open space e.g. between a low socket and a table.
- Do NOT let the mains cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.
- If the mains cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

## Personal safety

- **WARNING:** To protect against fire, electric shock and personal injury do not immerse cord, plug and appliance in water or any other liquid.

- Do NOT touch the hot surface. Use handles, levers or knobs only.
- Unplug from the outlet before cleaning and when not in use.
- Allow to cool before putting on or taking off parts and before cleaning.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Surfaces are liable to get hot during use.

### **Other safety considerations**

- Do NOT place the appliance on or near a hot gas or electric burner or in a heated oven.
- **WARNING:** The appliance must not be immersed for cleaning.
- **CAUTION:** To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning. Use a soft cloth and detergent.

### **Electrical requirements**

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A. C. (Alternating Current).
- This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
- **WARNING:** This appliance must be earthed.

### **BEFORE FIRST USE**

- As there is manufacturing residue or oil remaining in the toaster and on the heat element, it usually emits a 'new' odour when first used. This is normal and will not occur after the first few uses.

**NOTE:** Before toasting the first slice of bread it is strongly suggested to operate the appliance following below operating instructions, except without bread.

- On four slice models, the toaster has two sides with controls repeated for each half. Each half can be used together or independently.
- Only regular sliced bread can be placed into the toaster.
- Make sure the crumb trays (2) are completely positioned in place before using.
- Plug the power cord into the outlet.

### **OPERATING INSTRUCTIONS**

- Place the sliced bread into the Bread Slots.
- Adjust the Variable Browning Control (7) to the desired setting.
- Depress the Bread Carriage Lever (3). The toaster will begin toasting the bread and the Cancel button (4) light will illuminate.

**NOTE:** The carriage lever will only depress and hold in place when the appliance is connected to the power supply.

- When completed, the Bread Carriage Lever (3) will automatically rise and lift the toast from the toaster.
- During the toasting process, you may stop this at any time by pressing the Cancel button (4).
- To toast frozen bread, do not adjust the Variable Browning Control (7) from your normal setting. Place the frozen bread in the bread slots, depress the Bread Carriage Lever (3) and press the Defrost Button (6). The button will illuminate and the toaster will operate for a longer period defrosting and toasting the bread.
- If you want to reheat bread that was previously toasted but gone cold. Press the Bread Carriage Lever (3) down vertically until it is positioned in place, then press the Reheat button (5). The Reheat button (5) will illuminate and the toaster will operate for a short period reheating the bread.
- If the toaster starts to smoke, press the Cancel button (4) to stop toasting immediately.

## CLEANING

**WARNING:** Crumbs will accumulate in the Crumb Trays (2) and could catch fire if not emptied regularly.


- Disconnect the power supply before cleaning.
- When the appliance has cooled down completely, tap the sides of the case lightly to dislodge any crumbs lodged in the toaster. Pull out the Crumb Trays (2) on the bottom of toaster by the Crumb Tray Handles (1) and empty. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the Crumb Trays (2) are completely closed before using the toaster again.

**NOTE:** Never operate the appliance without the Crumb Trays (2) fitted.

- Wipe the outside chassis with a soft dry cloth after toaster cools down. Never use polish.
- When not in use or when being stored for extended periods, the power cord may be wound under the bottom of toaster.

Recycling: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and wellbeing. Glen Dimplex Australia Pty Ltd 8 Lakeview Drive Scoresby VIC 3179 Phone: 1300 556 816 Email: [sales@glendimplex.com.au](mailto:sales@glendimplex.com.au) Web: [www.morphyrichards.com.au](http://www.morphyrichards.com.au) © Glen Dimplex Australia. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex Australia.

## Documents / Resources

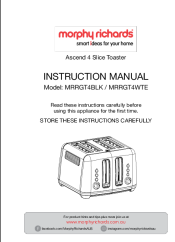	<p><a href="#">morphy richards MRRGT4BLK Ascend 4 Slice Toaster</a> [pdf] Instruction Manual MRRGT4BLK Ascend 4 Slice Toaster, MRRGT4BLK, Ascend 4 Slice Toaster, Slice Toaster</p>
---	---

## References

-  [Login • Instagram](#)

- [m Homepage | Morphy Richards](#)

Manuals+.