



motionics BlueDial-LT Bluetooth Digital Indicator Lite User Guide

[Home](#) » [motionics](#) » motionics BlueDial-LT Bluetooth Digital Indicator Lite User Guide 

Contents

- [1 motionics BlueDial-LT Bluetooth Digital Indicator Lite](#)
- [2 Important Notes](#)
- [3 Important Notes](#)
- [4 Description](#)
- [5 Included in the box](#)
- [6 Compatible Software](#)
- [7 Quick Start](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



motionics BlueDial-LT Bluetooth Digital Indicator Lite



Important Notes

Do **NOT** open the device. Opening causes permanent damage and voids the warranty.

BlueDial-LT transmitter & digital indicator should be both on before pairing.

BlueDial-LT operates on two separate batteries:

1. Rechargeable built-in Li-Po battery for the Bluetooth transmitter
2. Coin SR44 or LR44 battery for the digital dial

Description

Included in the box:

- BlueDial-LT
- 1X USB Charging Cable
- 1X USB Power Adapter
- 1X User Guide

Compatible Software:

- iOS: MultiGage Reader (download for FREE from the App Store)
- Android: MultiGage Reader (download for FREE from the Play Store)
- Windows: MultiGage Reader (BLE dongle required, download for FREE from www.motionics.com
Go to Resources > Download > Software)

Quick Start:

1. Turn on BOTH Dial indicator and Bluetooth transmitter.
2. Plug in USB Bluetooth dongle if using Windows PC.
3. Run the software, tap Scan/+ button to enter pairing page.
4. Connect to BlueDialLTXXX. Connection may take a few seconds, once paired, BlueDial-LT reading shows in the software.

Contact Information:

Website: www.motionics.com




Email: info@motionics.com

Made in the U.S.A.

Important Notes

- Turn off the device (1 and 5) after use. It will NOT turn off automatically.
- Do NOT open the device. Opening causes permanent damage and voids the warranty.
- BlueDial-LT transmitter & digital indicator should be both on before pairing.
- BlueDial-LT operates on two separate batteries:
 - Rechargeable built-in Li-Po battery for the Bluetooth transmitter
 - Coin SR44 or LR44 battery for the digital dial

Description

1. Dial On/Off – press to turn dial on/off
2. Origin Button – press to zero dial reading; this can also be done in the App
3. Unit Button – select reading in inch/mm
4. Dial Battery – insert coin battery SR44 or LR44 for digital dial
5. BLE On/Off – press to turn Bluetooth transmitter on/off
6. Status LED
 -  Bluetooth transmitter is on
 -  BlueDial-LT is in charge
 -  BlueDial-LT is fully charged
7. Micro USB Port – connect to USB cable to charge BlueDial-LT



Included in the box

- BlueDial-LT 1X
- USB Charging Cable 1X
- USB Power Adapter 1X
- User Guide 1X

Compatible Software

- **iOS:** MultiGage Reader (download for FREE from the App Store)
- **Android:** MultiGage Reader (download for FREE from the Play Store)
- **Windows:** MultiGage Reader (BLE dongle required, download for FREE from www.motionics.com Go to Resources > Download > Software)




MultiGage Reader App
iPhone/iPad

MultiGage Reader APP
Android



Quick Start


Insert SR44 or LR44 coin battery to dial indicator if it's first time use.

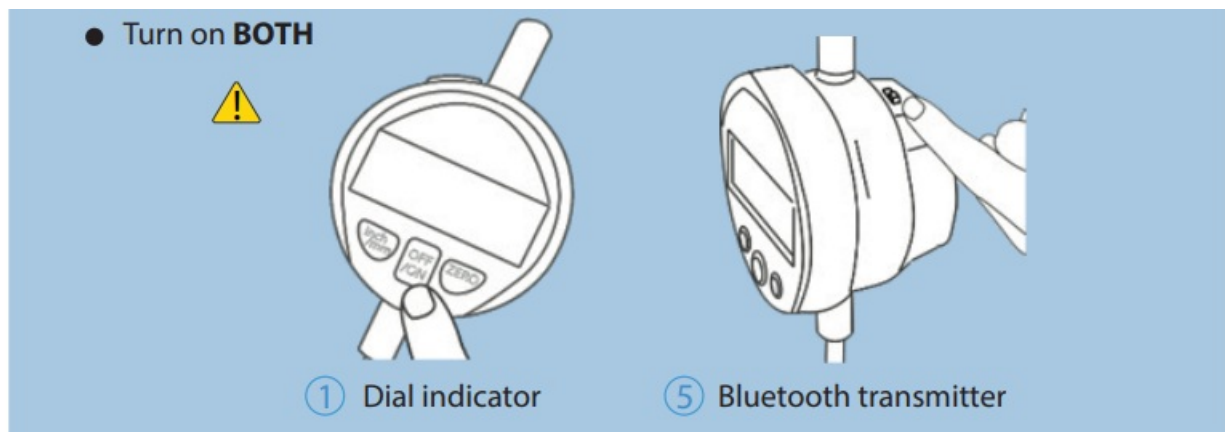

- Plug in USB Bluetooth dongle if using Windows PC.
- Run the software, tap Scan/+ button to enter pairing page.
- Wait for the software to finish scanning nearby devices, select BlueDialLTXXX to connect.
- Connection may take a few seconds, once paired, BlueDial-LT reading shows in the software.

Motionics, LLC
 © 2023 Motionics, LLC
www.motionics.com
 All Rights Reserved.
info@motionics.com
 Made in the U.S.A.

Documents / Resources

	<p>motionics BlueDial-LT Bluetooth Digital Indicator Lite [pdf] User Guide BlueDial-LT Bluetooth Digital Indicator Lite, BlueDial-LT, Bluetooth Digital Indicator Lite, Digital I ndicator Lite, Indicator Lite, Lite</p>
---	---

References

- [Motionics LLC – Smart Tools for Monitoring and Diagnostics of Machinery](#)