




## Contents [ [hide](#) ]

- [1 MotoMotion WRC18TM Remote Control](#)
- [2 Specifications](#)
- [3 Product Overview](#)
- [4 Directions for Operation](#)
- [5 How to pair the bed with the remote control](#)
- [6 How to charge the remote control](#)
- [7 Matters needing attention](#)
- [8 FCC STATEMENT](#)
- [9 Additional attention for the user](#)
- [10 FAQs](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)



## MotoMotion WRC18TM Remote Control

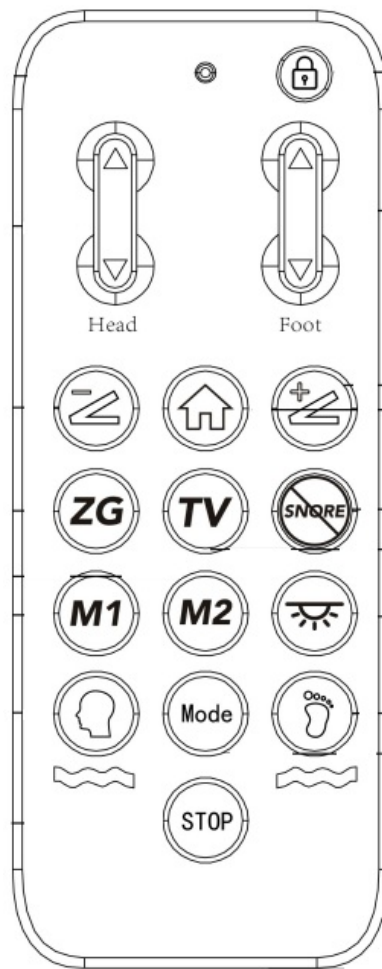

## Specifications

- **Product Name:** Remote Control
- **Product Model No.:** WRC18TM
- **FCC ID:** 2BA76WRC18MNT016
- **Operation Temperature:** +10°C to +40°C
- **Storage Temperature:** 10°C to 65°C
- **Operating Humidity:** 10% to 80% RH non-condensing
- **Storage Humidity:** 10% to 85% RH non-condensing

## Product Overview


- **Product Name** Remote Control
- **Product Model No** WRC18TM
- **FCC ID:** 2BA76WRC18MNT016

## Environment requirement

- **Operation temperature:** +10°C~ +40°C.

- **Storage temperature:** 10°C~65°C.
- **Operating Humidity:** 10% ~80% RH non-condensing.
- **Storage Humidity** 10%~ 85%RH non-condensing.

## Directions for Operation

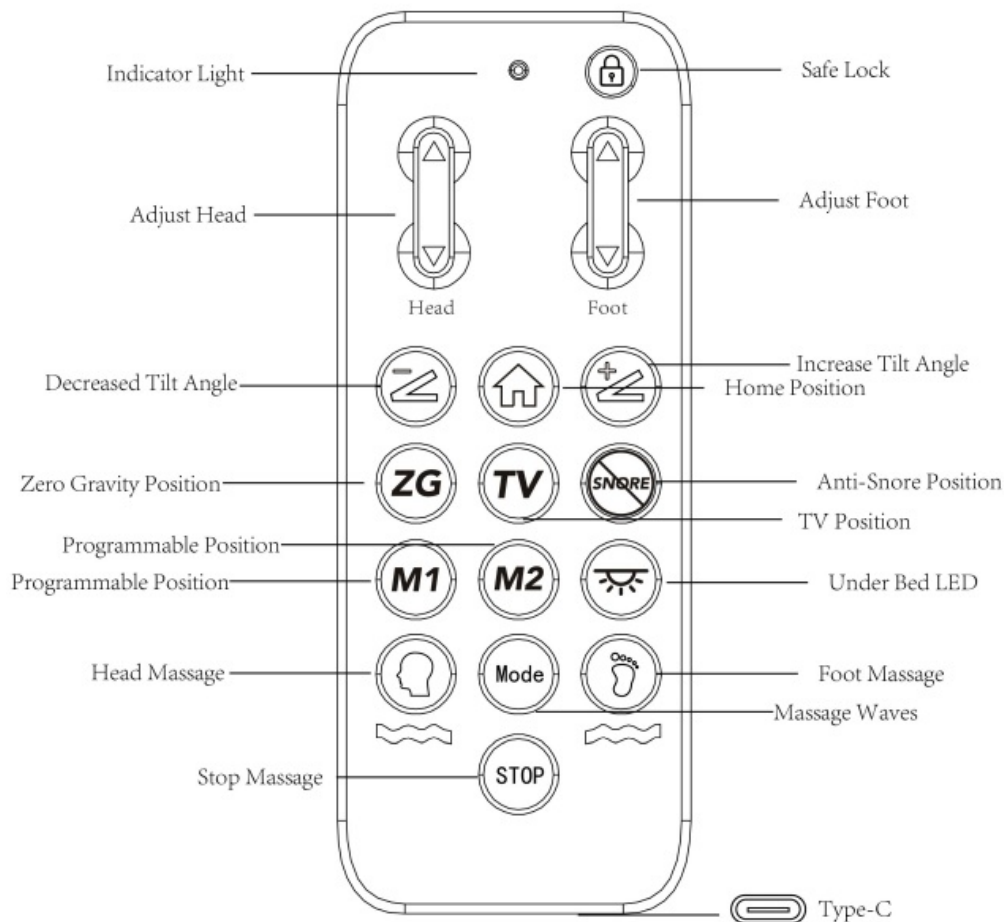

## How to pair the bed with the remote control

- **STEP 1** Ensure that the remote control is functioning properly.
- **STEP 2** Unplug the AC power cord from the power source. If 9V backup batteries (6LR61 alkaline batteries) were installed in the power supply, remove them.
- **STEP 3** Simultaneously press the head up and down buttons for a period of time until the remote control indicator light flashes.

## How to Setting Programmable Position

- **STEP 1** Adjust the bed to the desired memory location.
- **STEP 2** Press and hold the button in the upper left corner for about 3 seconds, and the indicator light will change from constantly on to flashing. During the flashing

process, press

M1 or M2 button to complete the position memory, and the indicator light will turn off.

## **How to charge the remote control**

There is a USB port on the lower end of the remote control, which can be plugged in to charge the remote control.

## **How to use a massage**

Press the massage button on the handle (head massage or leg massage), press it again to adjust to the second mode, and press it again to adjust to the third mode (a total of three gears can be adjusted). The current specific gear can be seen from the light bar indicator.

## **Matters needing attention**

1. The function will only work normally in proper working power conditions.
2. Remote Control needs DC 3.7- 3.85V powered by Lion batteries.
3. The control box is needed for proper control.
4. If problems are identified, they must be treated by professional personnel.

## **FCC STATEMENT**

### **Additional attention for the user**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/ TV technician for help.
1. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
  2. For Intentional and unintentional radiators, the manual shall caution the user and manufacturer that changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

## FAQs


### **Q: How do I know if my remote control is charging?**

A: When the remote control is plugged in for charging, a charging indicator light usually turns on to show that it is receiving power.

### **Q: Can I use rechargeable batteries in the remote control?**

A: It is recommended to use Lion batteries within the specified voltage range for optimal performance.

## Documents / Resources

|   |  |
|---|--|
|  | <p><a href="#">MotoMotion WRC18TM Remote Control [pdf]</a> Instructions</p> <p>WRC18TM, 2BA76WRC18MNT016, WRC18TM Remote Control, WRC18 TM Remote Control, Remote Control, Control</p> |
|---|--|

## References

- [User Manual](#)

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.