

MOTOROLA SOLUTION R7 Portable Two Way Radios User Guide

Home » MOTOROLA SOLUTION » MOTOROLA SOLUTION R7 Portable Two Way Radios User Guide 🖺



Contents

- 1 MOTOROLA SOLUTION R7 Portable Two Way **Radios**
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 Important Safety Information**
- **5 Radio Controls**
- 6 Attaching the Battery
- **7 LED Indicators**
- **8 Lightbar Color Indicators**
- 9 Display Icons
- 10 FAQ
- 11 Documents / Resources
- 11.1 References
- 12 Related Posts





Product Information

Specifications:

• Model: MOTOTRBOTM R7

• Type: Portable Two-Way Radios

• Language Options: en-US, es-LA, pt-BR

• Release Date: December 2024

Product Usage Instructions

Attaching the Battery:

- 1. Align the battery with the rails on the back of the radio.
- 2. Press the battery firmly and slide upwards until the latch snaps into place.
- 3. Slide the battery latch into the lock position.

Attaching the Antenna:

- 1. Turn off the radio.
- 2. Set the antenna in the receptacle and turn clockwise to attach it securely.

Turning the Radio On and Off:

Rotate the On/Off/Volume knob clockwise or counterclockwise until a click sound is heard to turn the radio on or off.

Adjusting the Volume:

To adjust the volume, rotate the On/Off/Volume knob clockwise or counterclockwise as needed.

LED Indicators:

- **Blinking Red:** Indicates various conditions such as failed self-test, out of range, Mute mode, emergency transmission, low battery, or battery mismatch.
- Solid Green: Indicates powering up, transmitting, Call Alert, or emergency transmission.
- Blinking Green: Indicates receiving a call or data, detecting activity, or retrieving OTA transmissions.
- Double Blinking Green: Indicates receiving a privacy-enabled call or data.
- Solid Yellow: Indicates monitoring a channel or in Bluetooth Discoverable Mode.

Your Quick Reference Guide

This Quick Reference Guide covers the basic operation of the radio.

Check with your dealer or system administrator because your radio may have been customized for your specific needs. Your radio will need to be provisioned before use. This is typically done by your dealer or system administrator and customized for your specific needs. For more information, refer to the following link: https://learning.motorolasolutions.com.

R7 Series User Guide MN007848A01 R7 Provisioning Guide MN007868A01

Important Safety Information

RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios

Product Safety and RF Exposure Compliance

CAUTION: Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet. Refer to booklet 6881095C98, RF Energy Exposure Training and Product Safety Information for Portable Two-Way Radios at https://learning.motorolasolutions.com/.

ATTENTION!

This radio is restricted to Occupational use only. Before using the radio, read the RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios which contains important operating instructions for safe usage and RF energy awareness and control for Compliance with applicable standards and Regulations.

Computer Software Copyrights


The Motorola Solutions products described in this manual may include copyrighted Motorola Solutions computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola Solutions certain exclusive rights for copyrighted computer programs including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program.

Accordingly, any copyrighted Motorola Solutions computer programs contained in the Motorola Solutions products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any

manner without the express written permission of Motorola Solutions. Furthermore, the purchase of Motorola Solutions products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola Solutions, except for the normal nonexclusive license to use that arises by operation of law in the sale of a product.

Radio Controls

- 1. Antenna
- 2. LED Indicator
- 3. Front Microphone
- 4. 3-Dot Programmable Feature button
- 5. Push-to-Talk (PTT) button
- 6. 1-Dot Programmable Feature button
- 7. 2-Dot Programmable Feature button
- 8. Emergency button
- 9. Display
- 10. Keypad1
- 11. Speaker
- 12. On/Off/Volume knob
- 13. Channel Selector knob
- 14. Rear Microphone
- 15. Belt Clip Slot
- 16. Charging Contacts
- 17. Charging Rail
- 18. Device Labeling Area
- 19. Accessory Connector
- 20. Lanyard Hole

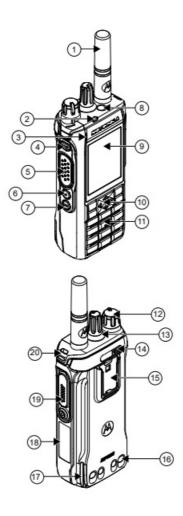

Attaching the Battery

NOTE:

For optimal performance, charge a new battery 14 to 16 hours before initial use.

- 1. Align the battery with the rails on the back of the radio.
- 2. Press the battery firmly, and slide upwards until the latch snaps into place.
- 3. Slide battery latch into lock position.

Attaching the Antenna

- 1. Turn off the radio.
- 2. Set the antenna in the receptacle and turn clockwise.

Turning the Radio On and Off

Rotate the On/Off/Volume knob clockwise or counterclockwise until a click sounds.

Adjusting the Volume

Rotate the On/Off/Volume knob clockwise or counterclockwise.

LED Indicators

Blinking Red

Radio has failed the self-test upon powering up, has moved out of range if Auto-Range Transponder System is configured, has Mute mode enabled, is receiving an emergency transmission, is transmitting in low battery state, or is indicating a battery mismatch.

Solid Green

Radio is powering up, transmitting, or sending a Call Alert or an emergency transmission.

Blinking Green

Radio is receiving a call or data, detecting activity over the air, or retrieving Over-the-Air Programming transmissions.

Double Blinking Green

Radio is receiving a privacy-enabled call or data.

Solid Yellow

Radio is monitoring a conventional channel or in Bluetooth Discoverable Mode.

Blinking Yellow

Radio is scanning for activity, has Flexible Receive List enabled, has yet to respond to a Call Alert, or all Capacity Plus-Multi-Site channels are busy.

Double Blinking Yellow

Radio has Auto Roaming enabled, has yet to respond to a Group Call Alert, is actively searching for a new site, is not connected to the repeater while in Capacity Plus, is locked, or all Capacity Plus channels are busy.

Lightbar Color Indicators


The following color indicators appear on the home screen at the left side of the radio display.

- Light Blue Radio is available for call.
- Yellow Radio is receiving call.
- Red Radio is transmitting call.
- Grey Radio is unprogrammed or not connected.

Display Icons

The following icons appear on the status bar at the top of the radio display. The icons are arranged left most in order of appearance or usage, and are channel-specific.

\triangle	Emergency
Z	Scan
Ü	Notification
X	Tone Disabled
	Battery
O	Secure
ò₹	Unsecure

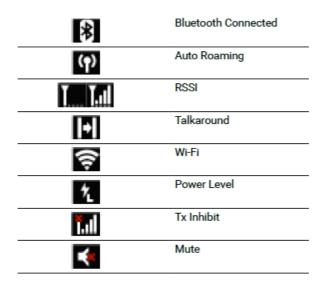

Faixa	SAR W/Kg (Cabeça)	SAR W/Kg (Corpo)
VHF	2,030	2,130
UHF	3,705	3,230
350 MHz	5,040	6,560
800 MHz	1,750	3,960

www.motorolasolutions.com/mototrbo

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2024 Motorola Solutions, Inc. All Rights Reserved.

FAQ

Q: How long should I charge a new battery before initial use?

A: For optimal performance, charge a new battery for 14 to 16 hours before initial use.

Q: What does a blinking red LED indicator mean?

A: A blinking red LED can indicate various conditions like a failed self-test, out of range, Mute mode, emergency transmission, low battery, or battery mismatch.

Documents / Resources



MOTOROLA SOLUTION R7 Portable Two Way Radios [pdf] User Guide

R7, R7 Portable Two Way Radios, R7, Portable Two Way Radios, Two Way Radios, Way Radios , Radios

References

- MOTOTRBO Digital Mobile Radios (DMR) Motorola Solutions
- User Manual

Manuals+, Privacy Policy

SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsem	nent.