MOTOROLA SOLUTIONS MXP7000 Tetra and LTE Android Portable Device



MOTOROLA SOLUTIONS MXP7000 Tetra and LTE Android Portable Device Installation Guide

Home » Motorola Solutions » MOTOROLA SOLUTIONS MXP7000 Tetra and LTE Android Portable Device Installation Guide ™

Contents

- 1 MOTOROLA SOLUTIONS MXP7000 Tetra and LTE Android Portable Device
- 2 Specifications
- **3 Product Usage Instructions**
- **4 Knowing Your Radio**
- **5 Getting Started**
- 6 Indication
- 7 FAQ
- 8 Documents / Resources
 - 8.1 References



MOTOROLA SOLUTIONS MXP7000 Tetra and LTE Android Portable Device



Specifications

- Submersible with battery and antenna attached (IP67 standard compliant)
- Front Camera, Rear Camera with Flash
- Front Microphone, Rear Microphone
- Touch Screen Display, LTE/Device Status LED, TETRA Status LED
- Power Button, Push-To-Talk Button, Emergency Button
- USB-C Connector, GCAI-Mini Connector
- · Lithium-Ion Battery

Product Usage Instructions

Attaching the Antenna

- 1. Insert the threaded base of the antenna into the antenna terminal on top of your radio.
- 2. Turn the antenna clockwise until it is tight.

Installing the Battery

- 1. Insert the battery into the compartment until the contacts align and the battery hooks in place.
- 2. Speak into the top microphone and listen through the speaker.

Removing the Battery

- 1. Slide the Battery Latch to the right and hold it until you can lift the battery out.
- 2. Lift the battery from the top and pull it upwards to disengage it from the hooks.
- 3. Remove the battery from the compartment.

Inserting MicroSD and SIM Cards

- 1. Remove the battery.
- 2. Flip open the MicroSD/TETRA SIM/LTE SIM card door using the finger scoop area.
- 3. Slide the cardholder and insert the card with gold contacts facing down.

Turning the Radio On/Off

- 1. To turn it on, press and hold the Power button for 3 seconds.
- 2. To turn it off, press and hold the Power button until the power menu appears, then tap the Power off button.

Knowing Your Radio



- 1. Antenna
- 2. LTE/Device Status LED
- 3. TETRA Status LED
- 4. Front Camera
- 5. Front Microphone
- 6. Ambient Light Sensor (ALS)
- 7. Earpiece Speaker
- 8. Touch Screen Display
- 9. Front Speaker and Microphone
- 10. Rotary Knob
- 11. Emergency Button
- 12. Rear Microphone Rear Camera with Flash
- 13. Battery Latch
- 14. Lithium-Ion Battery
- 15. Lanyard Hole



- 16. Power Button and Screen Lock/Unlock
- 17. GCAI-Mini Connector
- 18. Push-To-Talk Button (PTT)
- 19. One Touch Button 1
- 20. One Touch Button 2
- 21. USB-C Connector
- 22. Charging Contacts

Getting Started

Looking After Your Radio

• Never leave your radio or battery in extreme temperatures (over +85°C). For example, behind a windscreen in


direct sunlight.

- The radio is submersible (compliant with the IP67 standard), but only with the battery and antenna attached.
- To clean your radio, use a moistened or antistatic cloth. Ensure that no contamination is on the gore port membrane which is the area labelled as VENT on the back of the radio chassis.

Optimal Audio Performance

The radio has three microphones:

- A top front microphone for Simplex group, dispatcher, or private calls.
- A top back microphone for optional noise cancellation.
- A bottom microphone for Duplex, telephone-like calls.
- 1. When using high audio, hold your radio vertically with the top microphone 5–10 cm away from your mouth.
- 2. Speak into the top microphone.
- 3. Listen through the speaker.

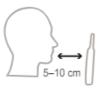

Simplex Calls

- 1. When using low audio, hold your radio as you would a telephone.
- 2. Speak into the bottom microphone.
- 3. Listen through the earpiece.



Duplex Calls

Attaching the Antenna

- 1. Insert the threaded base of the antenna into the antenna terminal on top of your radio.
- 2. Turn the antenna clockwise until it is tight.




Installing the Battery



- 1. Insert the battery into the compartment until the contacts align and the battery hooks in place.
- 2. Press down on the battery until it clicks in place.


Removing the Battery

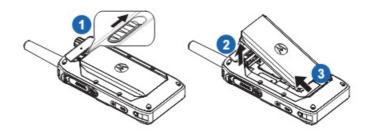

- 1. Slide the Battery Latch to the right and hold it until you can lift the battery out.
- 2. Lift the battery from the top and pull the battery upwards to disengage it from the battery hooks.
- 3. Remove the battery from the compartment.

Inserting the MicroSD and SIM Cards

- 1. Remove the battery.
- 2. Flip open the MicroSD/TETRA SIM/LTE SIM card door using the finger scoop area.
- 3. Slide the MicroSD/TETRA SIM/LTE SIM card holder then flip it open.
- 4. Insert the MicroSD/TETRA SIM/LTE SIM card into the card holder ensuring that the gold contact area is facing down.

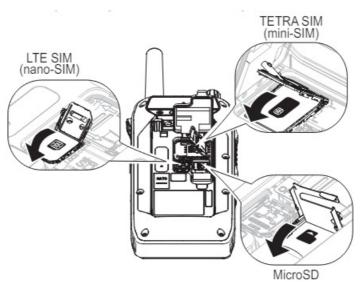

- 5. Close the MicroSD/TETRA SIM/LTE SIM card holder and slide it into the lock position.
- 6. Close the MicroSD/TETRA SIM/LTE SIM door.
- 7. Install the battery.

Turning the Radio On

• Press and hold the Power button for 3 seconds to turn on the radio.

Turning the Radio Off

- Press and hold the Power button until the Power Menu appears.
- Tap the Power off button to turn off the radio.





Indication

Transmit and Receive Indicator

Call State	Lightbar Color	Lightbar Indicator	
		Group Call	Broadcast Call
Available or Idle	Gray or light blue	MO Folder	◀ H DMO Folder DMO1
Receiving	Amber	MO Folder DMO 1 005	E. ◀ Broadcast Ennequency Call 905
Receiving hangtime	Amber	MO Folder	L. ◀ Broadcast Emergency Cal
Transmitting	Green	→ H DMO Folder DMO1 Talking	Not applicable
Transmiting hangtime	Green	MO Folder	Not applicable

Indication	LTE/Device LED	TETRA LED
Solid green Battery is fully charged when connected to USB/MUC/SUC		In use Repeating call
Blinking green	Battery is > 90%	TMO Service Idle Switching modes TMO to DMO
Solid red	Battery is charging	Out of service
Blinking red	Not applicable	Connecting to a network Switching modes from DMO to TMO
Slow blinking red	Battery is very low (<15%)	Not applicable
Fast blinking red	Charging error Too high or too low battery charging temp Invalid battery	Not applicable
Solid orange	Not applicable	Radio is powering on Transmit inhibit mode in service Channel busy in DMO Radio interference in DMO
Blinking orange	Not applicable	Incoming private
Blinking blue	New app notification New SMS/MMS New email Missed call	Not applicable
No indication	Radio not charging No new notification Radio powered off	Radio powered off

More Information on the Radio
 Visit the Motorola Solutions Web site at: http://www.motorolasolutions.com/

• Learning Experience Portal

User documentation is available at: https://learning.motorolasolutions.com/

• Open Source Software Legal Notices

Available in Integrated Terminal Management (iTM)

This document is copyright-protected. Duplications for the use of Motorola Solutions products are permitted to an appropriate extent. Duplications for other purposes, changes, additions or other processing of this document are not permitted. Only this electronically-saved document is considered to be the original. Duplications are considered merely copies. Motorola Solutions, Inc., and its subsidiaries and affiliates do not vouch for the correctness of such kinds of copies.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and are used under license. All other trademarks are the property of their respective owners.

© 2023 Motorola Solutions, Inc. All rights reserved.

www.motorolasolutions.com

FAQ

- · Q: Is the radio submersible?
 - A: Yes, it is submersible with the battery and antenna attached, compliant with IP67 standards.
- · Q: How do I clean the radio?
 - A: Use a moistened or antistatic cloth to clean the radio.
- Q: How do I ensure optimal audio performance?
 - A: Hold the radio properly for low audio and speak into the correct microphone for simplex and duplex calls.

Documents / Resources



MOTOROLA SOLUTIONS MXP7000 Tetra and LTE Android Portable Device [pdf] Installation Guide

MXP7000 Tetra and LTE Android Portable Device, MXP7000, Tetra and LTE Android Portable Device, Android Portable Device, Portable Device, Device

References

- Anatel Agência Nacional de Telecomunicações
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.