

 **MOTOROLA SOLUTIONS**
**T600 Series Two Way
Radio**



MOTOROLA SOLUTIONS T600 Series Two Way Radio User Guide

[Home](#) » [Motorola Solutions](#) » **MOTOROLA SOLUTIONS T600 Series Two Way Radio User Guide** 

Contents

- [1 MOTOROLA SOLUTIONS T600 Series Two-Way Radio](#)
- [2 Radio Overview](#)
- [3 Radio Set-Up](#)
- [4 Navigating the Menu Pages](#)
- [5 Radio usage](#)
- [6 Headset Usage](#)
- [7 Additional Information](#)
- [8 General Safety Information](#)
- [9 Licensing Information](#)
- [10 Warranty](#)
- [11 How to Obtain More Information](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)

 


MOTOROLA SOLUTIONS T600 Series Two-Way Radio



MOTOROLA, MOTO, MOTOROLA SOLUTIONS, and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC, and are used under license. All other trademarks are the property of their respective owners. © 2024 Motorola Solutions, Inc. All Rights Reserved.

Radio Overview

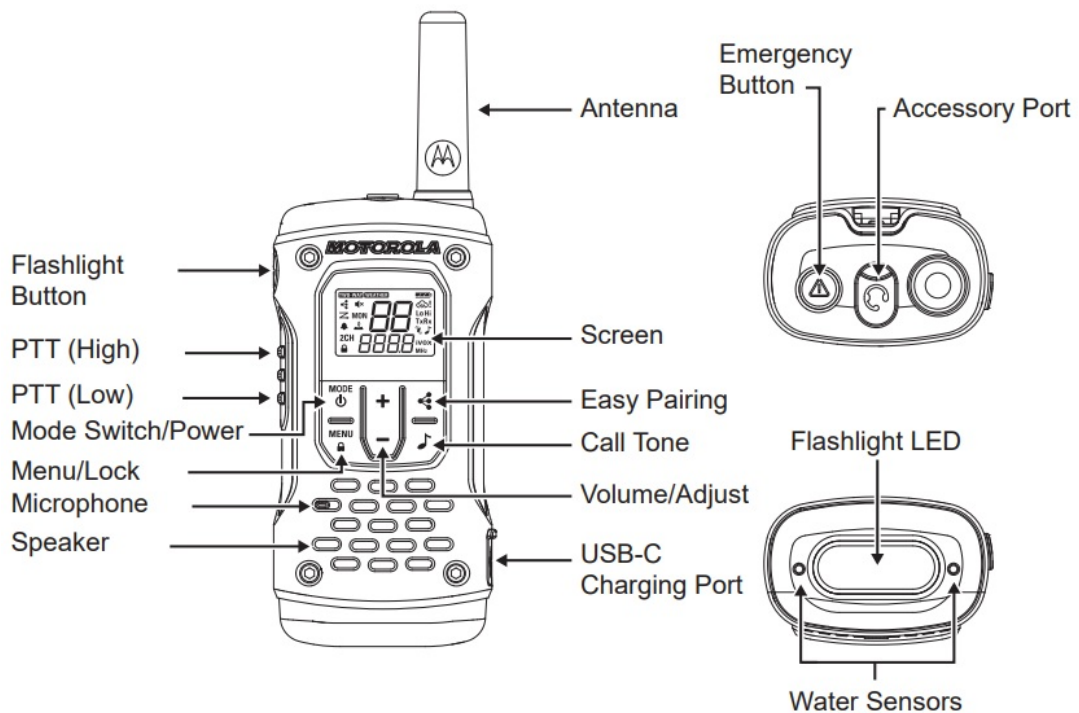

Icons	Descriptions
<p>The diagram shows a radio display with two rows of four-digit numbers. Above the top row are icons for Mute, Easy Pairing, Scan, Roger Tone, and Dual Channel Monitor. Above the bottom row are icons for Lock, Keypad Tone, Sub Code, Frequency, VOX or iVOX, Silent Mode (Vibrate Alert), Call Tone, Transmit and Receive, Low or High Power, Weather Alert, Battery, Channel, Weather Radio (HOME), and Two-Way Mode. The display also shows 'TWO-WAY WEATHER', 'MON', '2CH', 'Lo Hi', 'TxRx', 'iVOX', and 'MHz'.</p>	<ol style="list-style-type: none"> 1. Mute 2. Easy Pairing 3. Scan 4. Roger Tone 5. Dual Channel Monitor 6. Lock 7. Keypad Tone 8. Sub Code 9. Frequency 10. VOX or iVOX 11. Silent Mode (Vibrate Alert) 12. Call Tone 13. Transmit and Receive 14. Low or High Power 15. Weather Alert 16. Battery 17. Channel 18. Weather Radio (HOME) 19. Two-Way Mode

Buttons	Functionality
Mode Switch/ Power	<ul style="list-style-type: none"> ● Toggle between Two-Way and Weather modes by pressing the Mode Switch/Power button. ● Turn on or off the radio by pressing and holding the Mode Switch/ Power button.
Menu/Lock	<ul style="list-style-type: none"> ● Enter and scroll through the menu by pressing the Menu/Lock button. ● Lock or unlock the Menu/Lock button by pressing and holding the Menu/Lock button.
Volume/Adjust	<ul style="list-style-type: none"> ● Adjust the volume level by pressing the + or - button. ● Change the settings or trigger actions in the menu screen by pressing the + or - button.
PTT High/ PTT Low Button	<ul style="list-style-type: none"> ● Talk by pressing and holding the PTT High/PTT Low button. You can release the PTT High/PTT Low button to stop transmission. ● Exit the menu screen and return to the home screen by pressing the PTT High/PTT Low button. <p>NOTE: The PTT Low button always transmits at 0.5 W. The PTT High button transmits at a higher power when you select a high-power channel (channels 1–7 and channels 15–22).</p>

Easy Pairing	<p>Copy the channel and subcode settings from Radio A to Radio B.</p> <ul style="list-style-type: none"> ● Prepare Radio B for pairing by pressing and holding the Easy Pairing button until you hear a beep. ● Broadcast the channel and subcode settings by pressing and holding the Easy Pairing button on Radio A until you hear a double beep. <p>NOTE: You can copy from one radio to multiple radios simultaneously.</p>
Call Tone	<p>Send call tone (ring tone) to other radios by pressing the Call Tone button.</p>
Emergency	<p>Activate the Emergency Alert function by pressing and holding the Emergency button.</p>
Flashlight	<p>Turn on or off the flashlight and change the light color between red and white by pressing the Flashlight button.</p> <p>NOTE: Red light helps preserve vision in the dark. The flashlight turns off automatically after 30 minutes of non-activity or if the battery level is below 50 %.</p>

Radio Set-Up

Installing and Charging Batteries

 
1. Turn off the radio.
2. Observe for polarity before installing the batteries.
3. Charge the battery by using the standard USB power source.
4. Charging is complete when the battery icon on the radio stops blinking. Charging takes up to 8 hours.

NOTE

- You can use Alkaline AA batteries.
- Motorola Solutions recommends that you use only the battery that comes with your radio. Otherwise, your radio might sink.

Inserting and Removing the Belt Clip

- To insert or remove the belt clip, refer to the following images:

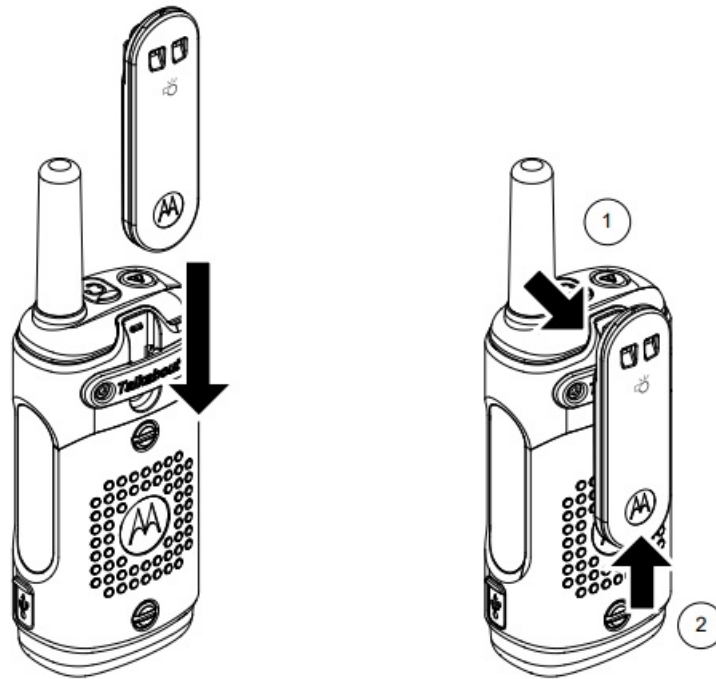

Turning the Radio On and Off

 
- To turn the radio on or off, press and hold the Mode Switch/Power button. The LCD turns on or off.

Channels and Sub Codes


 
 

 

 




 
- Set your radios with the same channel and subcode setting to enable communication with other radios.
- The channel setting controls the radio frequency. To avoid jamming, select a channel that is not used by others in your area. For more information on selecting unused channels, see Scan on page 1.
- Match the subcode setting on the transmitting and receiving radios. Otherwise, the receiving radio blocks the received signals. This feature helps you to mute unwanted voices from other radio users transmitting on your channel.
- When the code is set to zero, the radio does not block any signals. Everything that is picked up on the channel is sent to the speaker. Motorola Solutions recommends setting your subcode to zero if you are using T600 series radios with radios that do not support the subcode feature. For detailed instructions on ways to change settings, see Navigating the Menu Pages on page 1. You can copy channel and subcode settings from one radio to multiple radios simultaneously with the Easy Pairing feature. For ways to copy channel and subcode settings, see Radio Overview.

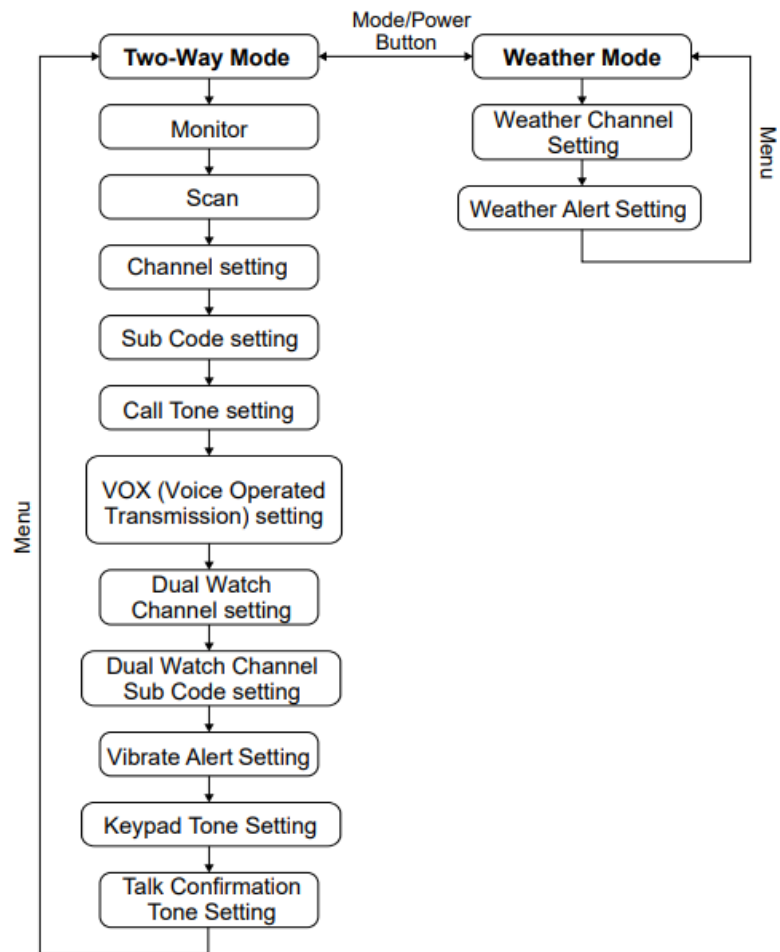Navigating the Menu Pages

1. Use the Menu button to scroll through the menu options.
2. Press the PTT button to return to the home screen.



Operations in the Menu Screen

Menu Screen	Use the + or - button to do the following:
Two-Way Mode 	<ul style="list-style-type: none"> Two-Way mode is the Home screen that you receive and transmit two-way radio calls. Change the volume setting by pressing the + or - button.
Monitor 	Start or stop monitoring the airwave. You can hear signals transmitted on the channel setting of your radio. If there is no signal, you can hear static.
Scan 	Start or stop scanning the airwave. Radio scans all the channels one after another. When a signal is detected, you hear the signal on the speaker, and the radio displays the channel of the detected signal.
Channel Setting (Channel number blinks)	Change the radio channel settings.
Sub Code Setting (Sub Code number blinks)	Change the radio sub code setting.
Call Tone Setting 	Change the call tone sound. There are 20 different sounds available.
VOX Setting 	To change the Voice Operated Transmission (VOX) setting, select OFF or L1 to L3 . L3 is the most sensitive. Use L3 in quiet environments.
Vibrate Alert Setting 	Turn the Vibrate Alert on or off. When you turn on the Vibrate Alert, the radio vibrates when call is received. Vibration is paused for 30 seconds after each vibration.
Dual Watch Channel Setting  (Channel number blinks)	In Dual Scan mode, the radio toggles between the main Channel/Sub Code setting and the Dual Scan Channel/Sub Code setting. <ul style="list-style-type: none"> After you adjust the Dual Scan settings in Menu, do not push any button. Allow the radio to time out to Dual Scan mode. From Dual Scan mode, press the Menu button to exit to Home screen. From Dual Scan mode, the PTT button does not exit to Home screen.
Dual Watch Sub Code Setting  (Sub code number blinks)	
Keypad Tone Setting 	Turn on or off the click sound when a key or a button is pressed.
Talk Confirmation Tone Setting 	Turn the Talk Confirmation Tone on or off. This tone is transmitted when you release the PTT button, similar to saying "Roger" or "Over." This tone indicates to others that you have finished talking.
Weather Mode 	<ul style="list-style-type: none"> In this mode, you can listen to weather broadcast from NOAA or Environment Canada. Adjust the volume setting by pressing the + or - button. The radio switches to Two-Way mode if no button is pressed for five minutes.
Weather Channel Setting (Weather Channel Setting blinks)	Change the weather channel setting by pressing the + or - button.
Weather Alert Setting 	Turn on or off the weather alert feature by pressing the + or - button.

Radio usage

Ensure that you are in the Two-Way mode by looking for the Two-Way icon on the LCD. You can return to the Two-Way mode by pushing the PTT button briefly.

Talking or Transmitting

Ensure that you are in the Two-Way mode by looking for the Two-Way icon on the LCD. You can return to the Two-Way mode by pushing the PTT button briefly.

1. Press and hold the PTT button, then start talking into the microphone.
2. Release the PTT button to stop transmission.

NOTE: Do not press the PTT button when others are talking. When more than one radio transmits on the same channel, the airwave is jammed, and all transmissions are lost.

Listening or Receiving

1. Set the radio to the same channel and code as the transmitting radio for the radio speaker to receive the signal automatically.
2. Ensure that the speaker volume is set to an appropriate level.

Adjusting Speaker Volume

- Press the + or – button from the home screen.

Listening to Weather Broadcast

1. Navigate to the Weather Radio page to listen to the weather broadcast.

NOTE: Your radio does not receive signal from other two-way radios when in the Weather Radio page.

2. From the Weather Radio page, press the Menu/Lock button.
3. Change the Weather Channel Setting and Weather Alert Setting.

Setting the Weather Alert

Your radio can be set to respond to the National Oceanic and Atmospheric Administration (NOAA) Weather Radio emergency messages. A special alarm tone sounds an alert and turns on the weather receiver to give you immediate weather and emergency information.

- To turn the Weather Alert on or off, navigate to the Weather Alert menu page.

Headset Usage

- When a headset is connected to the radio, the radio speaker is disabled. Wear the connected headset to monitor and receive messages.
- If your headset has the PTT button, you can use the button to make a transmission with the microphone on the headset.
- You can still use the PTT button on the radio to make a transmission with the microphone on the radio.

Additional Information

Internal Voice Operated Transmission (iVOX)/Voice Operated

Transmission (VOX)

The microphone detects if you are talking when using iVOX or VOX. If you are talking, the radio triggers the transmission automatically.

- When iVOX is displayed, the radio uses the built-in microphone to detect your voice.
- When a VOX headset is connected to the radio, VOX is displayed and the headset microphone is used to detect your voice.

To select the VOX/iVOX sensitivity level, select the following settings:

Level	Descriptions
OFF	Turn off the VOX or iVOX settings.
L3	High Sensitivity for quiet environments. Speaking softly is enough to trigger the VOX or iVOX transmission.
L2	Medium Sensitivity for most environments.
L1	Low Sensitivity for noisy environments. Speak up to trigger the VOX or iVOX transmission.

NOTE: Pressing the PTT button cancels the VOX or iVOX transmission.

Scan

Radio scans for voice activity by cycling through the channels. When signals are detected, the signal is sent to the speaker. Scan feature allows you to find out the channel that is used by other groups and has heavy traffic. Scan feature helps you to avoid busy channels when deciding the channel to use for your group.

Monitor

You can hear everything including noise on your current radio channel. This feature allows you to monitor a channel for weak signals.

IP-67 Waterproof Rating

This radio is waterproof to IP-67 standards. The radio can withstand submersion up to 1 meter of water for up to 30 minutes, but only when the battery cover and headset accessory port are sealed. Open the battery compartment door or headset port cover only when the radio is dry. Installation of batteries and accessories must be in dry environments only. Ensure that the battery compartment and accessory port seals are free of all dirt and debris. To maintain audio quality, if the radio is submerged in water, shake the radio briskly to remove water trapped inside the speaker grille and microphone port. Motorola Solutions recommends rinsing the radio with fresh water if the radio is exposed to salt water to preserve the life of the radio.

Water Sensor

When the radio comes in contact with water, the white LED begins to flash until the battery is dead. Pressing the Flashlight button turns off the flashing LED.

Emergency Alert Mode

You can use the Emergency alert feature to signal members in your group if you require urgent help. After pressing the Emergency button, an alert tone is emitted from your radio and transmitted to the radios in your group. The T600 series radios in your group automatically advance the speaker volume to the maximum setting and sound an alert tone for 8 seconds. After 8 seconds, the alert tone stops. Then, the radio is in hands-free mode for 22 seconds, allowing you to talk without pressing the PTT button. For the 30-second duration of the Emergency alert mode, T600 series radio controls and buttons are locked to maximize reception of the emergency message.

WARNING: Use the Emergency alert feature in case of emergency only. Motorola Solutions is not responsible if there is no response to the emergency alert from the receiving group.

Battery Information

The rated battery life is measured under industrial standard 5-5-90 duty cycle under lab conditions, 5 % of the time transmitting, 5 % receiving with speaker on, 90 % waiting for incoming call.

Battery Capacity Maintenance

- Charge the NiMH batteries once every three months when not in use.
- Do not leave the radio connected to a charger permanently.

- Remove the battery from the radio after using for storage purposes.
- Store the NiMH batteries in a temperature between –20 °C to 35 °C and in low humidity.

Push-to-Talk Time-Out Timer

To avoid airwave traffic congestion, transmission ends after one minute even if the PTT button is still pressed. You can reset the timer by releasing the PTT button briefly.

Weather Channels and Frequencies

Weather Channel	Frequency (MHz)	Weather Channel	Frequency (MHz)
WX1	162.550	WX7	162.525
WX2	162.400	WX8	161.650
WX3	162.475	WX9	161.775
WX4	162.425	WX10	161.750
WX5	162.450	WX11	162.000
WX6	162.500	–	–

Channels and Frequencies

This section shows the channels and frequencies available for the radio.

Channel	Frequency (MHz)	Power (W)	Channel	Frequency (MHz)	Power (W)
1	462.5625	2.0	12	467.6625	0.5
2	462.5875	2.0	13	467.6875	0.5
3	462.6125	2.0	14	467.7125	0.5
4	462.6375	2.0	15	462.5500	2.0
5	462.6625	2.0	16	462.5750	2.0
6	462.6875	2.0	17	462.6000	2.0
7	462.7125	2.0	18	462.6250	2.0
8	467.5625	0.5	19	462.6500	2.0
9	467.5875	0.5	20	462.6750	2.0
10	467.6125	0.5	21	462.7000	2.0
11	467.6375	0.5	22	462.7250	2.0

NOTE: The power refers to the maximum allowable power defined by FCC/ISED for each channel under FRS rules for the USA and Family Radio Service (FRS)/General Mobile Radio Service (GMRS) for Canada, and is not a reflection of the power specification of the radio.

General Safety Information

CAUTION: Before using this radio, read this booklet which contains important operating instructions. For information on product details, brochures, user manuals, and approved accessories, please refer to <http://www.motorolasolutions.com>.

Compliance with RF Exposure Standards

National and international regulations require manufacturers to comply with the RF energy exposure limits for portable two-way radios before they can be marketed. Your Motorola Solutions two-way radio is designed, manufactured, and tested to comply with all applicable national and international regulations for human exposure to radiofrequency electromagnetic energy.

RF Energy Exposure Awareness and Control Information and Operational Instructions for General Population and Uncontrolled Environment Use

NOTE: This device is intended for use in general population conditions where radiofrequency (RF) exposure meets the requirements of national and international regulations.

For more information on what RF energy exposure is, see the following websites:

- <https://www.fcc.gov/>
- <https://www.osha.gov/>
- <https://osha.europa.eu/en>
- <https://www.who.int/health-topics/electromagnetic-fields/>
- <http://www.ic.gc.ca/eic/site/smt-gst.nsf/eng/sf11467.html>
- <http://www.ic.gc.ca/eic/site/smt-gst.nsf/eng/sf01904.html>

For additional user training information on exposure requirements, consult the following websites:

- <http://learning.motorolasolutions.com>
- https://www.motorolasolutions.com/en_us/about/company-overview/corporateresponsibility.html.

Notice to Users (FCC and ISED)

This device complies with Part 15 of the FCC rules and Innovation, Science, and Economic Development Canada (ISED) license-exempt RSS's per the following conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications made to this device, not expressly approved by Motorola Solutions, could void the authority of the user to operate this equipment.

Class B Digital Device

For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

- Supplier's Declaration of Conformity Per FCC CFR 47 Part 2
- Section 2.1077(a)
- Responsible Party
- Name: Motorola Solutions, Inc.
- Address: 2000 Progress Pkwy, Schaumburg, IL 60196.
- Phone Number: 1-[800-927-2744](tel:800-927-2744)
- Hereby declares that the product:
- Model Name: T600 and T605.
- Conforms to the following regulations:
- FCC Part 15, subpart B, section 15.107(a), 15.107(d), and
- section 15.109(a).

Operating Instructions

- Transmit no more than 50 % of the time. To transmit (talk), press the Push-To-Talk (PTT) button. To receive calls, release the PTT button. Transmitting more than 50 % of the time may cause RF exposure compliance requirements to be exceeded.
- Hold the radio in a vertical position in front of the face with the microphone (and other parts of the radio including the antenna) at least 1 in. (2.5 cm) away from the nose or lips. Antenna should be kept away from the eye.
- When worn on the body, always place the radio in a Motorola Solutions-approved clip, holder, holster, case, or body harness for this product.
- DO NOT hold the antenna when the radio is transmitting.
- DO NOT use any portable radio that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.
- To ensure continued compliance with applicable RF exposure limits, use only Motorola Solutions approved, supplied, or replacement antennas, batteries, and accessories.
- For a list of Motorola Solutions-approved accessories please refer to your user manual or visit www.motorolasolutions.com.

Acoustic Safety

Exposure to loud noises from any source for extended periods may temporarily or permanently affect your hearing. The louder the volume of the radio, the sooner your hearing will be affected. Hearing damage from loud noise is sometimes undetectable at first, and can have a cumulative effect.

To protect your hearing

- Use the lowest volume necessary to do your job.
- Turn up the volume only if you are in noisy surroundings.
- Turn down the volume before adding headset or earpiece.
- Limit the amount of time you use headsets or earpieces at high volume.
- When using the radio without a headset or earpiece, do not place the radio's speaker directly against your ear.

Medical Devices

If you use a personal medical device, such as a pacemaker or hearing aid, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Safety Instructions for Power Supply

1. The power supply is for use with equipment according to IEC/EN/UL 62368-1/60950-1.
2. The power supply is for indoor use in dry locations.
3. The equipment shall be connected to a nearby and easily accessible socket outlet.
4. If the power supply is damaged or defective, do not repair or use the power supply.
5. For more details, please refer to https://www.motorolasolutions.com/en_xu/support/EMEA-compliance.html#phnnav_other-products.

Operational Warnings

The following explains the operational warnings:

For Vehicle With Air Bags

WARNING:

- Refer to vehicle manufacturer's manual prior to installation of electronic equipment to avoid interference with air bag wiring.
- DO NOT mount or place a mobile radio in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a radio is placed in the air bag deployment area and the air bag inflates, the radio may be propelled with great force and cause serious injury to occupants of the vehicle.

Blasting Caps and Blasting Areas

WARNING: To avoid possible interference with blasting operations, turn off your radio when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Potentially Explosive Atmospheres

WARNING:

- Do not carry a radio that is not certified for Hazardous Locations into a potentially explosive atmosphere. It could result in serious injury or death. You should only use a radio certified for hazardous locations in potentially explosive atmospheres.

- Explosive atmospheres refer to hazard-classified locations that may contain hazardous gas, vapors, or dust, such as fueling areas below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often, but not always, posted.
- DO NOT remove, install, or charge batteries in such areas, or remove or install antennas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Batteries

CAUTION: Use only Motorola Solutions-approved batteries.

- Risk of explosion if the battery is replaced by an incorrect type.
- Charge your battery using the approved Motorola Solutions charger.
- Connect the charger/power supply to a nearby and easily accessible power outlet.
- Charge only Li-Ion type rechargeable batteries. Other types of batteries may burst, causing personal injury or damage. Turn off the radio before charging.
- Use the battery by its water and/or dust Ingress Protection (IP) rating.
- Do not discard your battery into a fire.
- Do not replace the battery in any area labeled “Hazardous Atmosphere”.
- Do not disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.
- Do not dry a wet battery with an appliance or heat source, such as a hair dryer or microwave oven.
- Do not allow conductive material such as jewelry, keys, or beaded chains to touch exposed battery terminals.
- Do not dispose of batteries with household waste.

Do Not Substitute Options or Accessories

The Motorola Solutions communications equipment certified as intrinsically safe by the approving agency (UL, CSA, CENELEC) is tested as a complete system that consists of the listed agency-approved portable, Approved battery, Approved accessories or options, or both. This Approved portable and battery combination must be strictly observed. There must be no substitution of items, even if the substitute has been previously Approved with a different Motorola Solutions communications equipment unit. Approved configurations are listed by the Approving Agency (UL, CSA, CENELEC). The Hazardous Location-Approved Label affixed to the radio refers to the intrinsically safe classification of that radio product and the approved batteries that can be used with that system. The manual PN referenced on the Hazardous Location-Approved Label identifies the approved Accessories and or options that can be used with that portable radio unit. Using a non-Motorola Solutions-Hazardous Location-Approved battery and/or accessory with the Motorola Solutions-approved radio unit will void the Hazardous Location approval of that radio unit.

Licensing Information

USA (FCC)/CANADA(ISED)

According to FCC Part 95, FRS devices do not require a license. Use of Motorola Solutions radio in Canada is subject to the rules and regulations in ISED RSS 210 and do not require a license. Changes or modifications not expressly approved by Motorola Solutions may void the user authority granted by the FCC or ISED to operate this radio and should not be made. To comply with FCC or ISED requirements, transmitter adjustments should be made only by or under the supervision of a person certified as technically qualified to perform transmitter maintenance and repairs in the private land mobile and fixed services as certified by an organization representative of the user of those services. Replacement of any transmitter component (crystal, semiconductor, etc) not authorized by the FCC or ISED equipment authorization for this radio could violate FCC or ISED rules.

NOTE: Use of this radio outside the country where it was intended to be distributed is subject to government regulations and may be prohibited

Mexico and Panama

Mexico and the Republic of Panama do not require authorization to use FRS radio equipment frequencies.

Warranty

Consumer Two-Way Radio Products and Accessories Purchased in the United States or Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola Solutions, Inc. ("Motorola") warrants the Motorola branded consumer two-way radios that operate via Family Radio Service or General Mobile Radio Service ("Products"), the Motorola branded or certified accessories sold for use with these Products ("Accessories") to be free from defects in materials and workmanship under normal consumer usage for the periods outlined below. This limited warranty is the exclusive remedy of a consumer, and applies as follows to new Products and Accessories and purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Who Is Covered?

This warranty extends only to the first consumer purchaser and is not transferable.

What will MOTOROLA SOLUTIONS, INC. do?

Motorola Solutions, Inc., will replace any Products or Accessories that do not conform to this warranty. We may use functionally equivalent Products or Accessories.

What Other Limitations Are There?

Any Implied Warranties, Including Without Limitation. The implied warranties of merchantability and fitness for a particular purpose shall be limited to the duration of this limited warranty, otherwise, the repair, replacement, or refund as provided under this express limited warranty is the exclusive remedy of the consumers and is provided in place of all other warranties, express or implied. In no event shall Motorola Solutions be liable, whether in contract or tort (including negligence) for damages above the purchase price of the product or accessory, or for any indirect, incidental, special, or consequential damages of any kind, or loss of revenue or profits, loss of business, loss of information or other financial loss arising out of or in connection with the ability or inability to use the products or accessories to the full extent these damages may be disclaimed by law. Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

USA and Canada

Products Covered	Length Of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	Two (2) years from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Products and Accessories that are repaired or replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Latin America

Products Covered	Length Of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Batteries whose fully charged capacity falls below 80 % of their rated capacity and batteries that leak.	
Products and Accessories that are repaired or replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

How to Obtain Warranty Service or Other Information?

To obtain service or information, see the following table.


Country	Service Information
USA and Canada Two- Way Radios	<ul style="list-style-type: none"> ● 1-800-448-6686. ● http://www.motorolasolutions.com/talkabout
Latin America	Toll Free: <ul style="list-style-type: none"> ● Mexico 001-855-241-8253 ● Panama 001-800-205-3867 Toll or long distance: <ul style="list-style-type: none"> ● Spanish +1 630-203-5826 ● English +1 630-203-5824

For Accessories


Call the telephone number designated above for the Product with which they are used. You will receive instructions on how to ship the Products or Accessories at your expense, to Motorola Solutions or a Motorola Solutions Authorized Repair Center. To obtain service, you must include the following:

- a copy of your receipt, bill of sale or other comparable proof of purchase
- a written description of the problem
- the name of your service provider (if applicable)
- the name and location of the installation facility (if applicable)
- Your address and telephone number.



How to Obtain More Information

	http://www.motorolasolutions.com/talkabout
	https://www.facebook.com/MotorolaTalkaboutWalkieTalkies
	http://bit.ly/Talkabout

Documents / Resources

	MOTOROLA SOLUTIONS T600 Series Two Way Radio [pdf] User Guide T600 Series, T600 Series Two Way Radio, Two Way Radio, Way Radio, Radio
---	--

References

-  [YouTube](#)
-  [Electromagnetic fields](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.