

MOTREX HUD Software



MOTREX HUD Software User Guide

[Home](#) » [MOTREX](#) » MOTREX HUD Software User Guide 

Contents

- 1 [MOTREX HUD Software](#)
- 2 [Product Specifications](#)
- 3 [Product Usage Instructions](#)
- 4 [USB Photo](#)
- 5 [AV-In / HDMI](#)
- 6 [AV-In](#)
- 7 [Sounds of Nature](#)
- 8 [Screen Sharing](#)
- 9 [News Reader / podcasts and more](#)
- 10 [News Reader](#)
- 11 [Documents / Resources](#)
 - 11.1 [References](#)
- 12 [Related Posts](#)

MOTREX

MOTREX HUD Software



Product Specifications

- Product Name: USB Photo Display
- Supported Functions: USB Photo Display, Slideshow, Zoom In/Out, List Display
- Connectivity: USB Port
- Control: Touch Screen
- Additional Features: Screen Sharing, Sounds of Nature Playback

Product Usage Instructions

Playing USB Photo

To play USB photos on the device:

1. Press the “USB” button.
2. Press the “Photo” button.
3. Press the desired file to display it.

Displaying Control Panel

To display the control panel while viewing photos:

- Touch anywhere on the play screen.
- The control panel will disappear if no operations are made for 5 seconds.

Frequently Asked Questions (FAQ)

- **Q: How can I adjust the brightness and contrast in AV-In mode?**


A: In AV-In mode, press the corresponding buttons to adjust the Brightness, Contrast, and Hue levels. Confirm your settings by pressing the “Confirm” button.

- **Q: How do I stop Screen Sharing?**

A: To stop Screen Sharing, go to the Home screen and press the “Screen Sharing” button. This will disable the sharing feature.

USB Photo

Playing USB Photo

 
Press the  button → Press **USB** → Press **Photo** → Press the desired file.



Displaying Control Panel

Touch anywhere in the play screen to display control panel.

The control panel will disappear if operations are not made for 5 seconds while the control panel is showing.

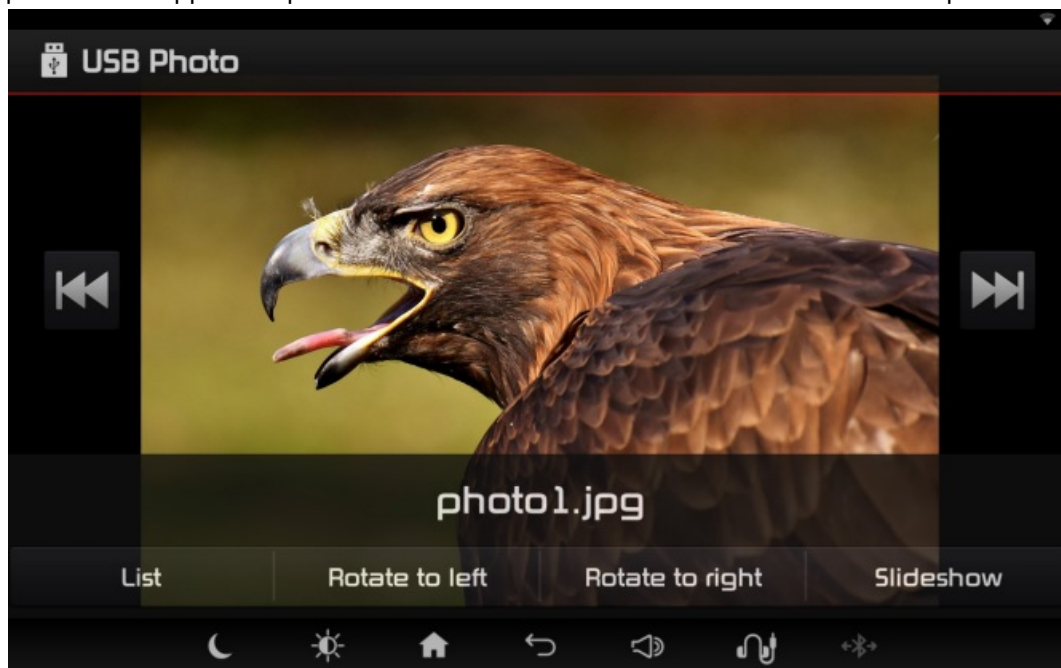

Playing the Previous/Next File

Press the   button to play the previous/next file.

Rotate

Press the **Rotate to left** or **Rotate to right** button.
Each time the button is pressed, the image is rotated by $0^\circ \rightarrow 90^\circ \rightarrow 180^\circ \rightarrow 270^\circ$ degrees.

Slideshow

Press the **Slideshow** button to images as a slideshow that slides in 5 second intervals.
Touch anywhere to stop the slideshow.

Zoom In/Out

In the play screen, pinch using two fingers to zoom in or out.



 
List

Press the **List** button to display the USB Photo list screen.




Press the directory name to move to the higher directory.

Basic Screen

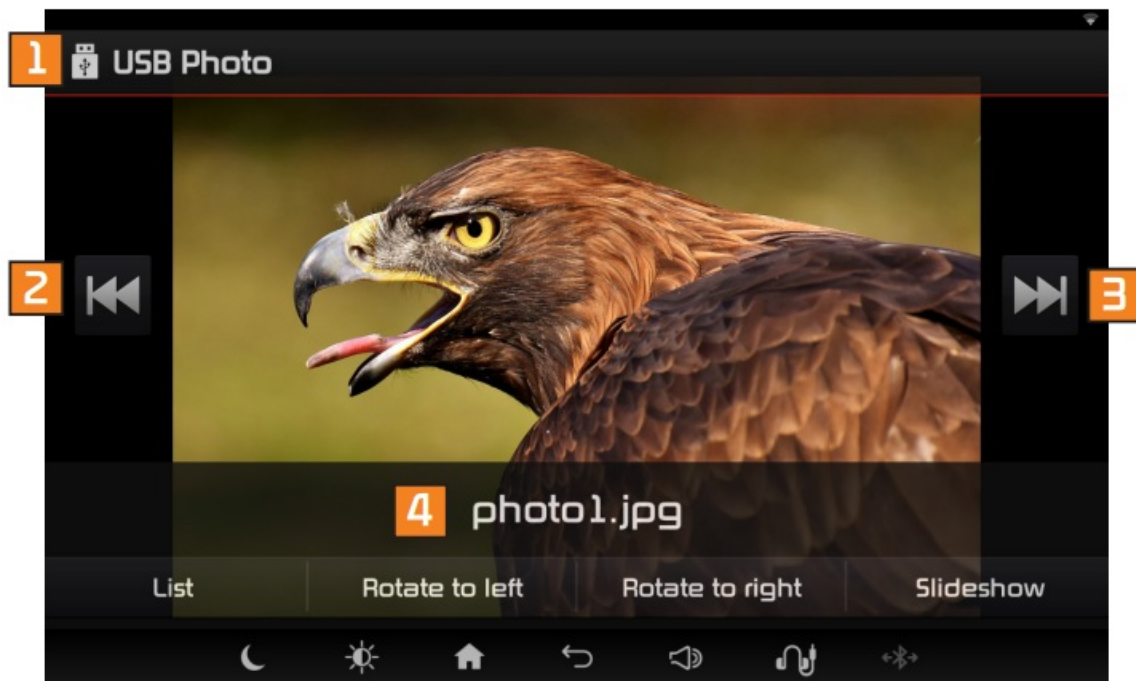

Name and Icon	Details
1 Mode	Displays current mode.
2 Previous File	Moves to the previous file.
3 Next File	Displays current file name.
4 File Info	Displays current file name.

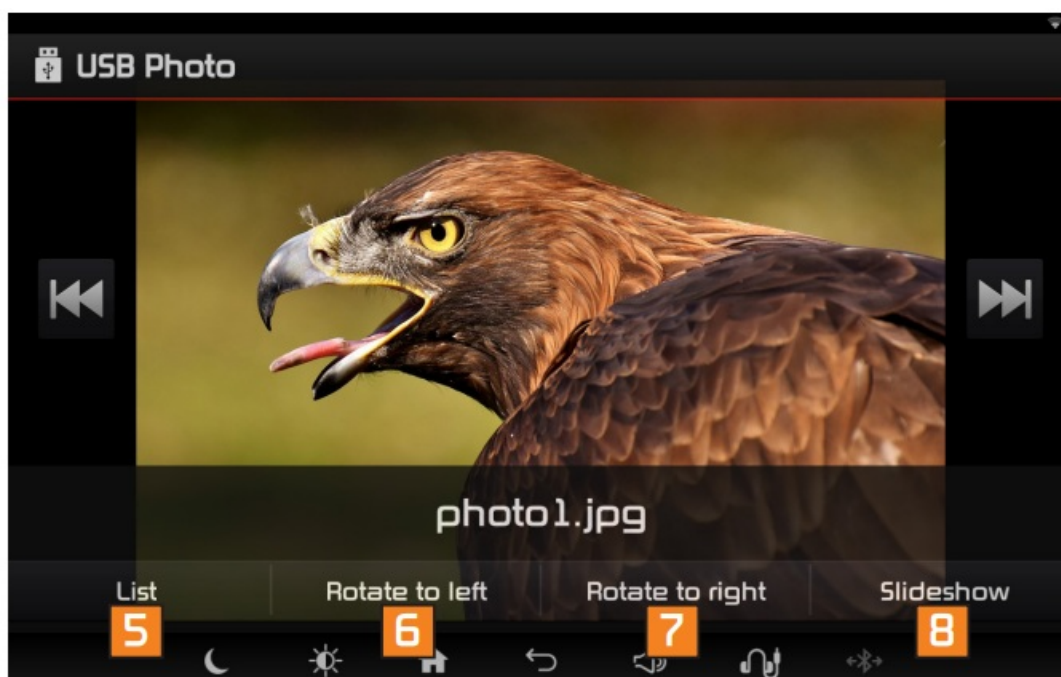 

Name and Icon	Details
5 List	Moves to the list screen.
6 Rotate to left	Rotates image in counter-clockwise direction.
7 Rotate to right	Rotates image in clockwise direction.
8 Slideshow	Displays images in a slideshow in 5 second intervals.

AV-In / HDMI

Playing an External Source

AV-In or HDMI mode can be used when an external device player is connected and operating. Use an AV or HDMI cable to connect the external device.

 
Press the **AV-In** or **HDMI** button to play the auxiliary device.



AV-In

Adjusting Video

In AV-In mode, press the **:** button → Adjust the Brightness, Contrast, and Hue to the desired levels → Press **Confirm**.

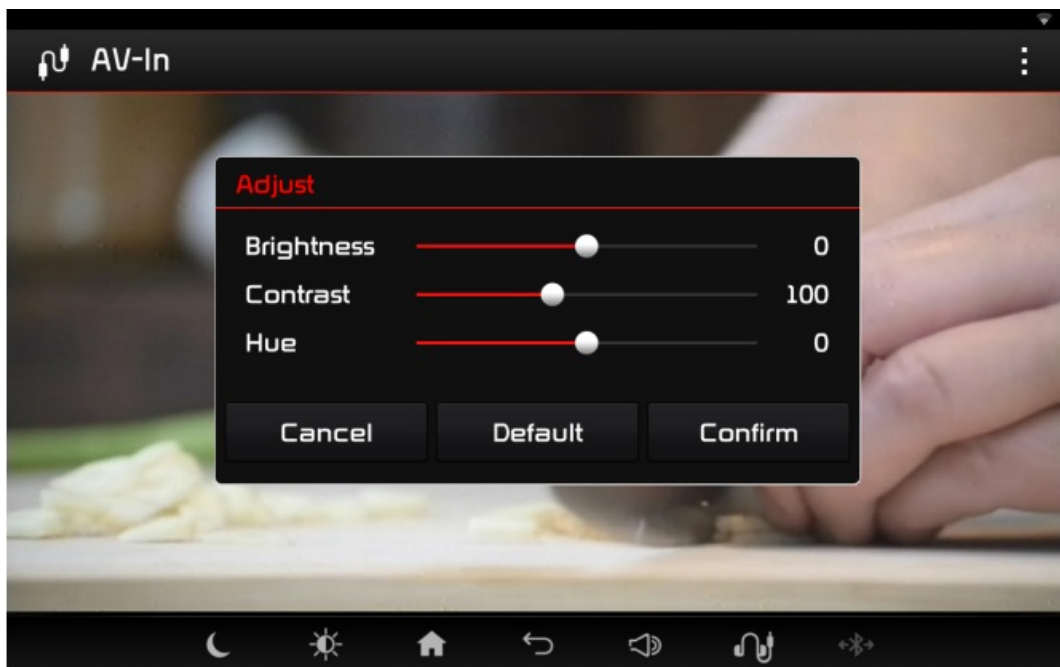



Note

The Video Adjust feature is not supported when using HDMI.


Sounds of Nature

Playing the Sounds of Nature.

  Press the  button → Press **Sounds of Nature** → Selects the sound you want to listen to.

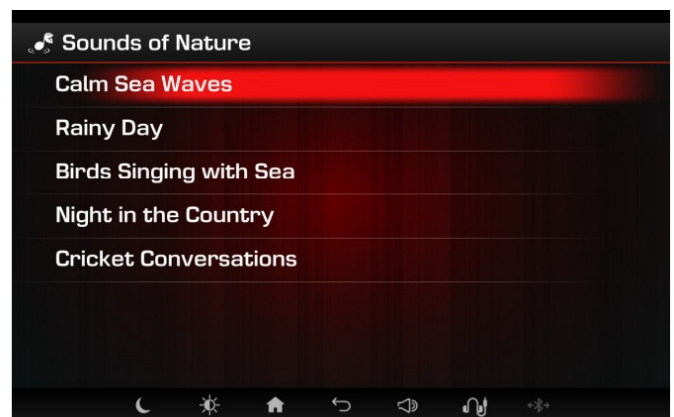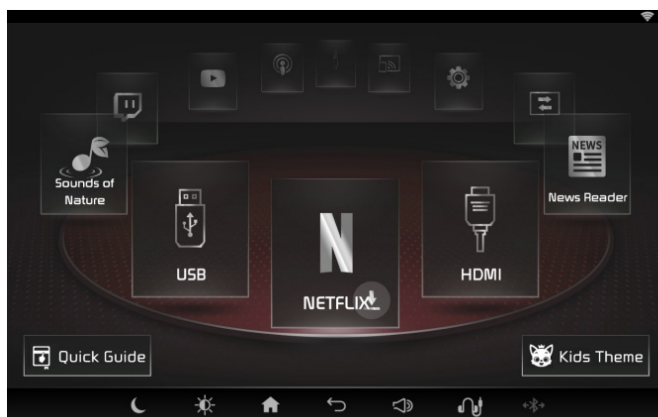

Basic Screen

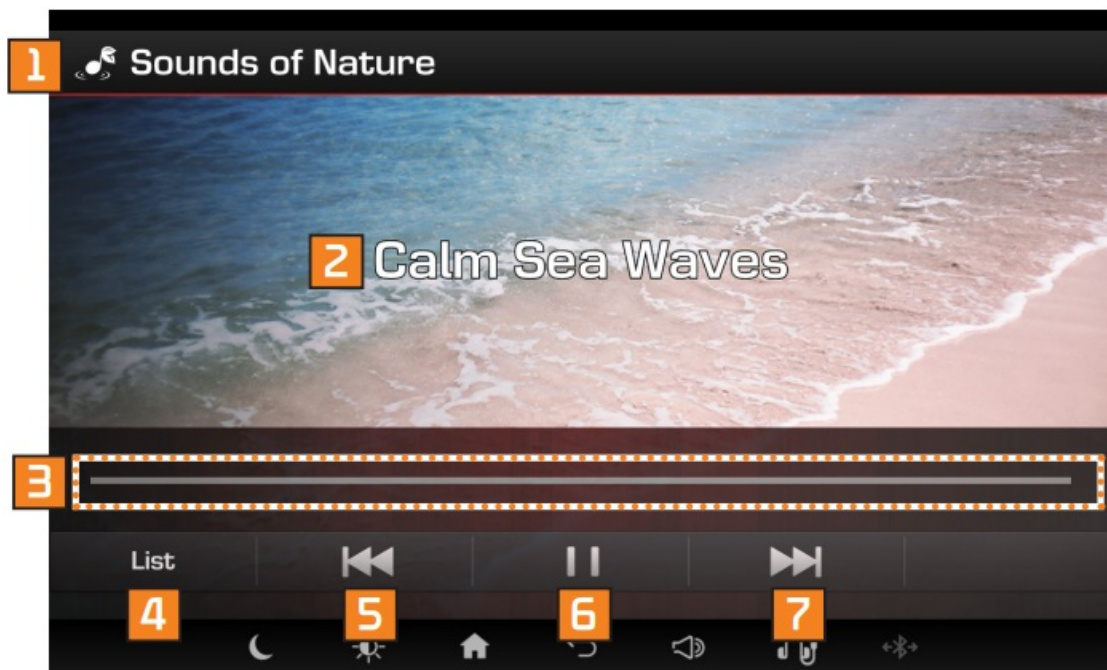 


Name and Icon	Details
1 Mode	Displays current mode.
2 Play Screen	Displays the file name/photo information for the current music.
3 Play Bar	Displays the current play location.
4 List	Moves to the list screen.
5 Previous File	Moves to the previous file.
6 Play/ Pause	Plays/pauses the current file.
7 Next File	Moves to the next file.

Using the Screen Sharing feature

Press  → Press **Screen Sharing**

 When Screen Sharing is turned on, the screen currently displayed on the next seat screen is shared, and the media can be controlled on both seat.

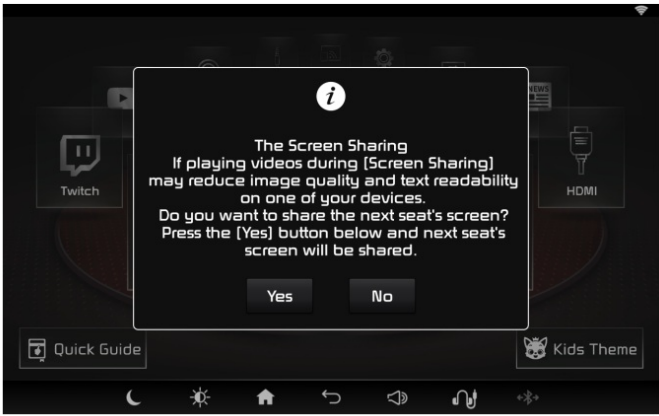

Note
Voice is not shared when Bluetooth audio is output.

Screen Sharing

Using Screen Sharing Menu


To use the menu buttons while screen sharing is in use, quickly tap the the screen twice.



Button	Description
1	Plays/pauses screen sharing.
2	Stops screen sharing.

Using the Screen Sharing

 If the screen sharing failed, go to the home screen and retry Screen Sharing.

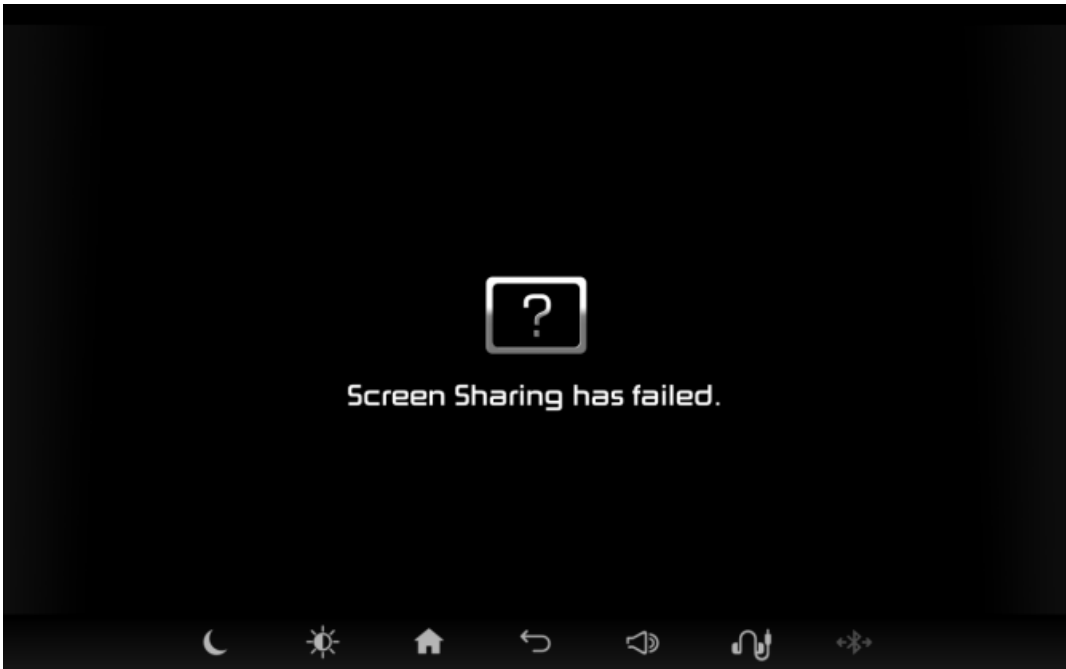

Turning Off Screen Sharing

To stop Screen Sharing, go to the Home screen and press the Screen Sharing button.



Note

When sharing the screen, the sound icon at the bottom of the screen must be changed to an ear jack for normal voice output.

News Reader / podcasts and more

Before Starting News Reader / podcast / YouTube / Twitch / NETFLIX / YouTube Kids

 
News Reader / podcast / YouTube / Twitch / NETFLIX / YouTube kids modes will be disabled when Wi-Fi is disconnected.

The first connect a Wi-Fi network.

Note

- Internet is based on Chromium, an open source software available for use through a BSD license.
- The scope of support may change according to the policy change of the service provider.


Press the  button → Press  → Press 

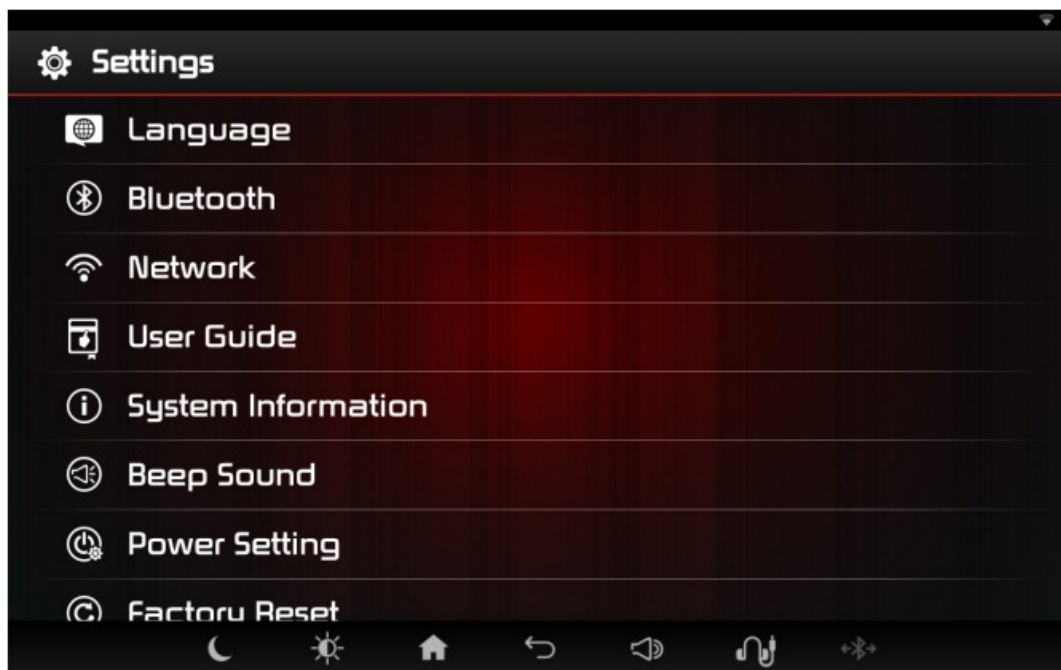


For subsequent operations, refer to the “Network” section.

News Reader


Starting News Reader

 
Select  → Select **News Reader**

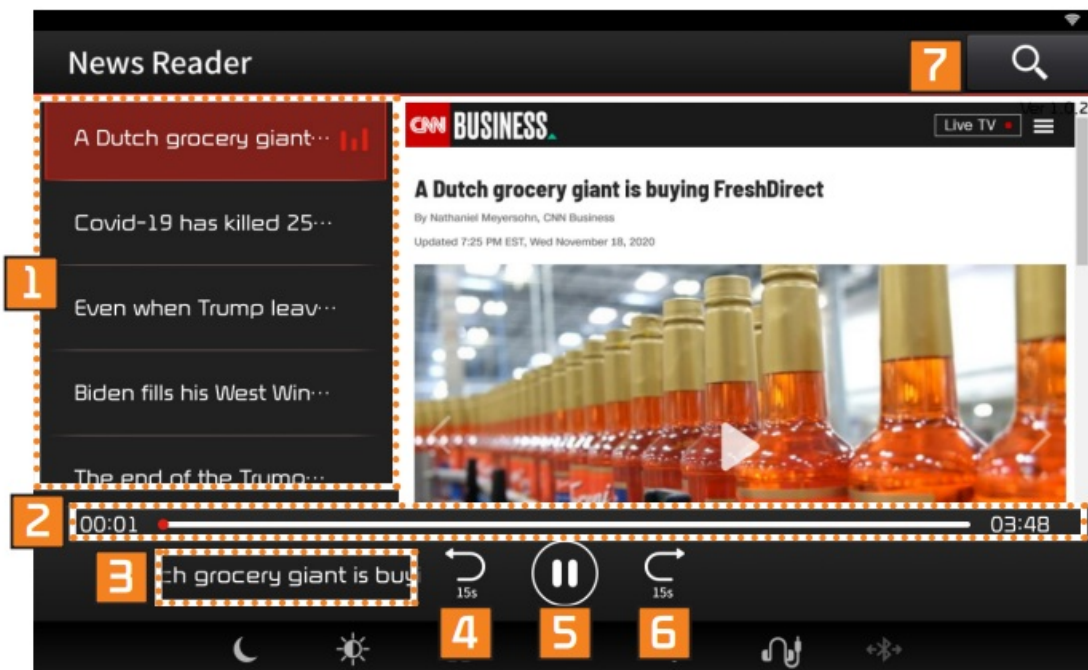

Button	Description
1 News Name	News name for each category
2 Playtime / regenerative bar	Displays the current play time and the total play time
3 News Name	Displays the currently played news
4 Previous	Moves to 15 seconds ago
5 Play / Pause	Plays or pauses the current file
6 Next	Moves to 15 seconds later
7 Search	Search for the desired news

Search

 Press the  button to search for the desired news.

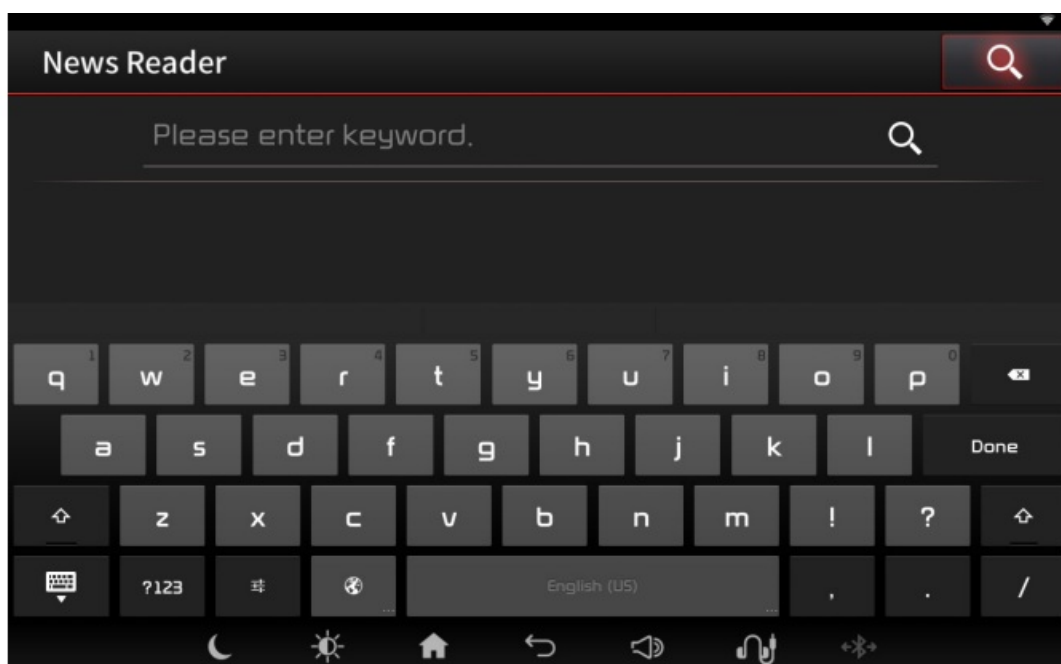

Documents / Resources



[MOTREX HUD Software](#) [pdf] User Guide
BP9-RS210A, BP9RS210A, rs210a, HUD Software, Software

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.