



MOULTRIE MCG-14059 Micro Series Game Camera Instructions

[Home](#) » [MOULTRIE](#) » MOULTRIE MCG-14059 Micro Series Game Camera Instructions 

Contents

- [1 MOULTRIE MCG-14059 Micro Series Game Camera](#)
- [2 PRODUCT DESCRIPTION](#)
- [3 EASY SETUP INSTRUCTIONS](#)
- [4 MOUNTING CAMERA](#)
 - [4.1 CAMERA OPTIONS SETUP](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



MOULTRIE MCG-14059 Micro Series Game Camera



Thank you for your purchase of a Micro Series Digital Game Camera. Please read this booklet before using the unit. If you have any questions about this product or any other Moultrie product, please contact us using the information provided on page 7 of this booklet.

PRODUCT DESCRIPTION

 


EASY SETUP INSTRUCTIONS

Open the camera cover and install four (4) AA batteries in the battery compartment. Follow the + and – polarities as indicated.

- Insert the SD Card into the SD Card slot as shown.
- You will hear an audible click when the card is fully inserted.

- Slide the Mode switch to the SETUP position, press the ENTER button to begin editing the time. Use the (V UP) / V (DOWN) buttons to adjust the hour digits. Press ENTER to select. Repeat to set minutes, press ENTER to set correct time. Select AM/PM, press ENTER to continue.
- Slide the Mode switch to the ON position. The battery level will appear on the LCD screen and the camera is ready for use.

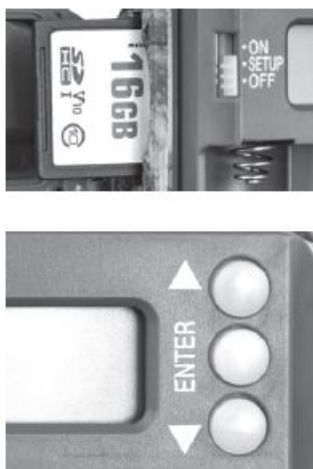

Important Notes:

- We recommend the use of SDHC Class 10 SD cards up to 32 GB; camera will not operate without an SD card installed.
- If you have a 6V power source plugged into bottom of unit, leave batteries installed. They will act as a backup if power is lost.
- If the camera detects the battery level is 15% or below, the Low Battery screen (bL:L0) will show on display and the unit will turn off.
- Do not mix old and new batteries. See important battery info on page 7.

Important Battery Information

- – Only use Alkaline or Lithium batteries. We recommend the use of Energizer™ or Moultrie batteries.
- Do not mix old and new batteries. Do not mix alkaline, lithium, or rechargeable batteries. Always replace ALL the batteries at the same time.
- When the camera is not in use, please remove the batteries.

Moultrie Limited Warranty

This product has been thoroughly tested and inspected before shipment. It is guaranteed from defects in material and workmanship from the date of purchase for one (1) year. The warranty is extended to two (2) years if the product is registered within 60 days of purchase. Under this limited guarantee we agree to replace or repair free of charge any parts which have been found to be defective in original material or workmanship. Should you require in-warranty service, contact us at www.moultriefeeders.com/support.

You must register your camera at www.moultriefeeders.com/warranty to activate your 2-year warranty.

Troubleshooting

Please visit www.moultriefeeders.com/support for troubleshooting and helpful tips.

Returns and Repairs

Please visit www.moultriefeeders.com/return-policy and complete return form. Additional support options are

available.

Moultrie Mobile® Compatibility

Your camera is compatible with our Moultrie Mobile® cellular service when combined with the Moultrie® Field Modem. Please visit www.moultriemobile.com for more information.

- **CAMERA ID**

Use the V (UP)/ V (DOWN) buttons to choose between 1-9 to set a camera ID number. Images captured via your camera will display the camera ID number. Press ENTER to lock in your selection.



- **MANAGED MEMORY**

Select "ON" or "OFF". Selecting "ON" will cause the oldest files to be overwritten with new images when the SD card reaches full capacity. Selecting "OFF" will disable the camera from saving images once SD Card capacity is full.



- **Erasing Images/Resetting Picture Count**

Use the V (UP)/ V (DOWN) buttons to change the display to "dELY" (Delete Yes). When the display shows "dELY" pressing ENTER will reformat and delete all images stored on the SD card.



MOUNTING CAMERA

 
 
Mounting with Strap

- Thread mounting strap through slots on back of camera case.
- Mount camera to a tree or pole approximately three (3) feet from ground. May need to adjust for uneven terrain.



Tips:

- Face the camera North or South to avoid overexposure from the sun.
- Clear brush away from the front of the camera to avoid false-movement triggers.
 - When covering a game trail, face camera looking down the trail instead of directly at it (see graphics below).

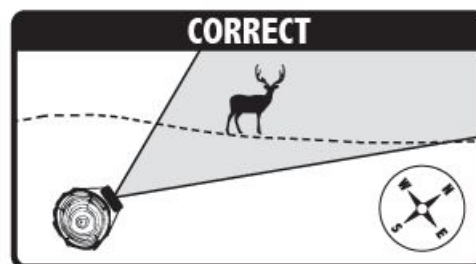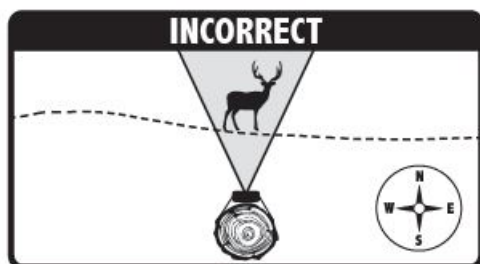

CAMERA OPTIONS SETUP

• POWER ON

Slide the Mode Switch to the ON position. The battery level (bL) will appear on the LCD screen for two seconds then the camera will display a countdown. When the countdown reaches 00:00 the display will turn off and the camera will be in Capture Mode.



• SETUP MODE

Slide the Mode Switch to the SETUP position.



NOTE: While in SETUP mode, the camera will turn on the STATUS LED for one second when motion is detected. You can use this feature to ensure the camera is properly aimed to detect movement in the desired target area.

Setup Mode Menu Guide

SET TIME	ENTER	00	Hour	ENTER	:00	Minute	ENTER	AM/PM	ENTER	Time Set	
SET DATE	ENTER	00	Month	ENTER	:00	Day	ENTER	0000	Year	ENTER	Date Set
OPTIONS	ENTER	Detection Delay	ENTER	Capture Mode	ENTER	Camera ID	ENTER	Managed Memory	ENTER	Erase Images	

• TIME AND DATE

  Once time is displayed, press the ENTER button to begin editing time. Use the V (UP) / V (DOWN) buttons to adjust the hour digits. Press ENTER to select. Repeat to set minutes, press ENTER to set time entered. Select AM/PM, press ENTER to continue. Repeat to set the month, day and year.

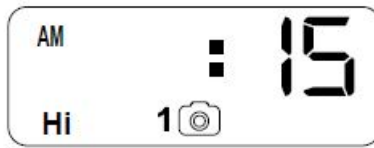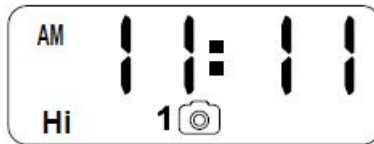

• **DETECTION DELAY**


Next, set the amount of time between pictures when motion is detected. Use the (UP)/ V (DOWN) buttons to choose between 0, 15, or 30 seconds and 1 or 5 minutes. Press ENTER to lock selection and continue setup.

• **CAPTURE MODE**

Use the V (UP) / V (DOWN) buttons to change the camera capture mode. Press ENTER to lock selection and continue to Camera ID setup.

Capture Mode Options		
Lo	1	1 Photo, Low Resolution
Hi	1	1 Photo, High Resolution
Lo	3	3 Photos, Low Resolution
Hi	3	3 Photos, High Resolution
		Video

 Documents / Resources



[MOULTRIE MCG-14059 Micro Series Game Camera](#) [pdf] Instructions
MCG-14059, MCG-14060, MCG-14074, Micro Series Game Camera

References

- [New Item Warranty | Moultrie Warranty Policy | Learn More](#)
- [Moultrie Mobile | Cellular Trail Cameras, Plans & Accessories](#)