



MOXA MGate MB3280 Series 1-2-and 4-Port Standard Serial-to-Ethernet Modbus Gateways Installation Guide

[Home](#) » [MOXA](#) » MOXA MGate MB3280 Series 1-2-and 4-Port Standard Serial-to-Ethernet Modbus Gateways Installation Guide 



MGate MB3280 Series
Quick Installation Guide
Version 4.2, January 2021
@ 2021 Moxa Inc. All rights reserved.

Contents

- [1 Overview](#)
- [2 Package Checklist](#)
 - [2.1 Optional Accessory](#)
- [3 Hardware Introduction](#)
- [4 Hardware Installation Procedure](#)
- [5 Software Installation](#)
- [6 Pin Assignments](#)
 - [6.1 Ethernet Port \(RJ45\)](#)
 - [6.2 Serial Port \(Male DB9\)](#)
- [7 Environmental Specifications](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

Overview

The MGate MB3280 is a 2-port Modbus gateway that converts between Modbus TCP and Modbus ASCII/RTU protocols. It can be used to allow Ethernet masters to control serial slaves, or to allow serial masters to control Ethernet slaves. Up to 16 TCP masters and 62 serial slaves can be connected simultaneously.

Package Checklist

Before installing the MGate MB3280 Modbus gateway, verify that the package contains the following items:

- 1 MGate MB3280 Modbus gateway
- Power adapter
- 4 Stick-on pads
- Quick installation guide (printed)
- Warranty card

Optional Accessory

- **DK-35A:** DIN-rail mounting kit (35 mm)
- **Mini DB9F-to-TB Adapter:** DB9 female to terminal block adapter


Notify your sales representative if any of the above items are missing or damaged.

NOTE This product is designed to be powered by a listed power source marked “LPS” and is rated 12 to 48 VDC and 0.25 A minimum.

The device’s operating temperature when using the power adapter is 0 to 40°C (32 to 104°F), and 0 to 60°C (32 to 140°F) when using an alternative DC power source. If you need additional assistance purchasing a power source, please contact Moxa for more information.

Hardware Introduction

As shown in the following figures, the MGate MB3280 has two DB9 male ports for transmitting serial data.

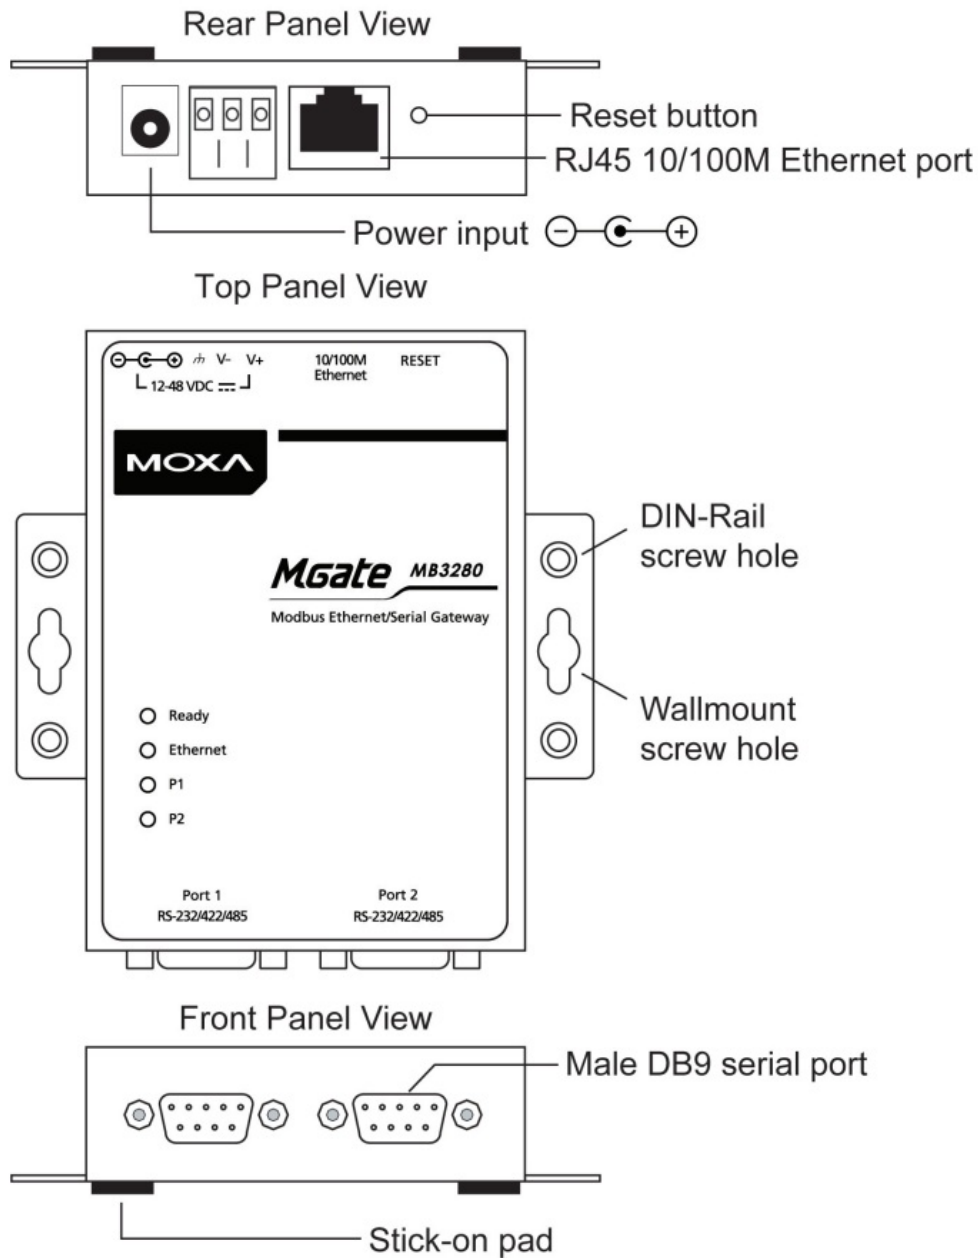

Reset Button—The reset button is used to load factory defaults. Use a pointed object such as a straightened paper clip to hold the reset button down for five seconds. Release the reset button when the Ready LED stops blinking in order to load the factory defaults.

LED Indicators—Four LED indicators are located on the top panel:

Name	Color	Function	
Ready	Red	Steady on:	The power is on and the unit is booting up.
		Blinking:	IP conflict exists, or the DHCP or BOOTP server is not responding properly.
	Green	Steady on:	The power is on and the unit is functioning normally.
		Blinking:	The unit has been found by the Location command in MGate Manager.
	Off	Power is off or power error condition exists.	
Ethernet	Orange	10 Mbps Ethernet connection.	
	Green	100 Mbps Ethernet connection.	
	Off	The Ethernet cable is disconnected or has a short.	
P1/P2	Orange	The unit is receiving data from the device.	
	Green	The unit is transmitting data to the device.	
	Off	No data is being exchanged with the device.	

Hardware Installation Procedure

STEP 1: After unpacking the MGate MB3280, connect the power adapter. Make sure that the adapter is connected to an earthed socket outlet.


STEP 2: Use a standard straight-through Ethernet cable to connect the MGate MB3280 to a network hub or switch. Use a cross-over Ethernet cable if you are connecting the gateway directly to a PC.

STEP 3: Connect your device(s) to the MGate MB3280's serial port.

STEP 4: Place or mount the MGate MB3280. The unit may be placed on a horizontal surface such as a desktop, mounted on a DIN rail, or mounted on the wall.

Wall or Cabinet Mounting


Mounting the MGate MB3280 onto a wall requires two screws. The head of the screws should be 5.0 to 7.0 mm in diameter, the shaft should be 3.0 to 4.0 mm in diameter, and the length of the screws should be at least 10.5 mm.

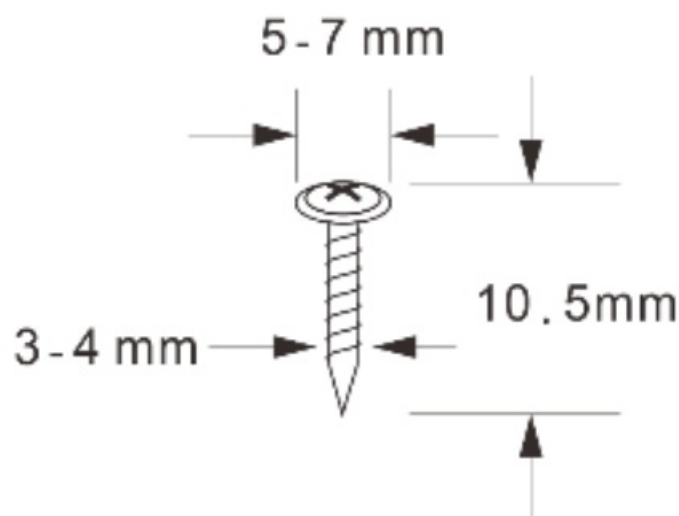


DIN-rail Mounting

DIN rail attachments can be purchased separately to mount the MGate MB3280 on a DIN rail.

Wall Mounting

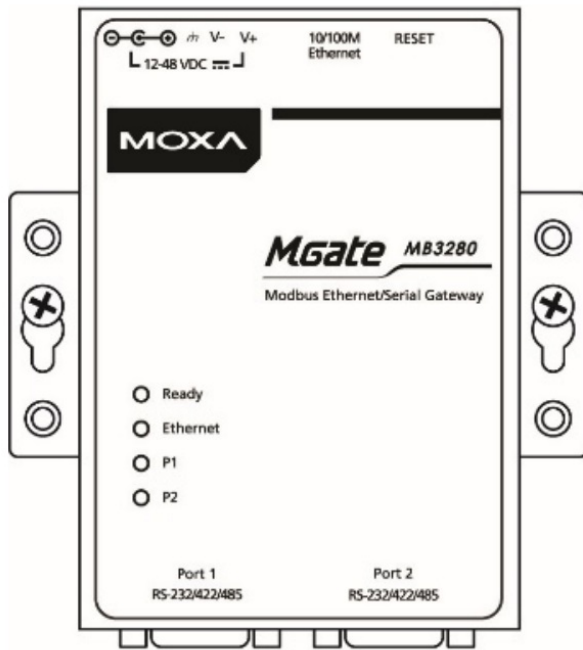

DIN-rail Mounting

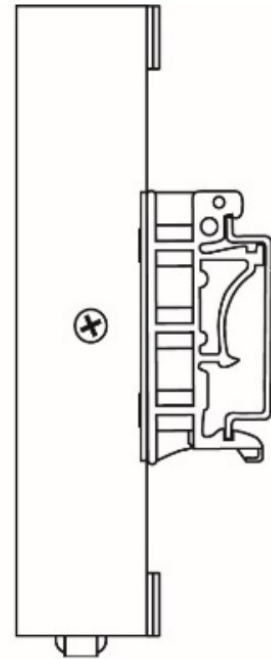

Termination Resistor and Adjustable Pull High/Low Resistors

For some RS-485 environments, you may need to add termination resistors to prevent the reflection of serial signals. When using termination resistors, it is important to set the pull high/low resistors correctly so that the electrical signal is not corrupted. For each serial port, DIP switches are used for termination resistor and pull high/low resistor settings. To enable the 120 Ω termination resistor, set switch 3 on the assigned DIP switch to ON; set it to OFF (the default setting) to disable the termination resistor. To set the pull high/low resistors to 150 K Ω (the default setting), set switches 1 and 2 on the assigned DIP switch to the OFF position; set them both to ON for 1 K Ω .

Pull High/low Resistors for the RS-485 port

Default

SW	1	2	3
	Pull High	Pull Low	Terminator
ON	1 K Ω . 2	1 K Ω .	120 K Ω
OFF	150 K Ω .	150 K Ω	

Software Installation

You can download the MGate Manager, User's Manual, and Device Search Utility (DSU) from Moxa's website: www.moxa.com. Please refer to the User's Manual for additional details on using the MGate Manager and DSU.

The MGate MB3280 also supports login via a web browser.


Default IP address: **192.168.127.254**

Default account: **admin**

Default password: **moxa**


Pin Assignments

Ethernet Port (RJ45)

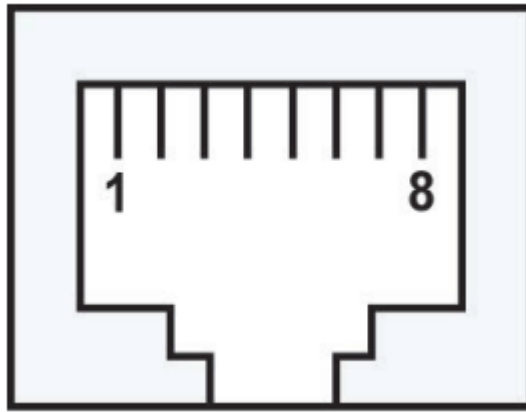

Pin	Signals
1	Tx+
2	Tx-
3	Rx+
6	Rx-

Serial Port (Male DB9)

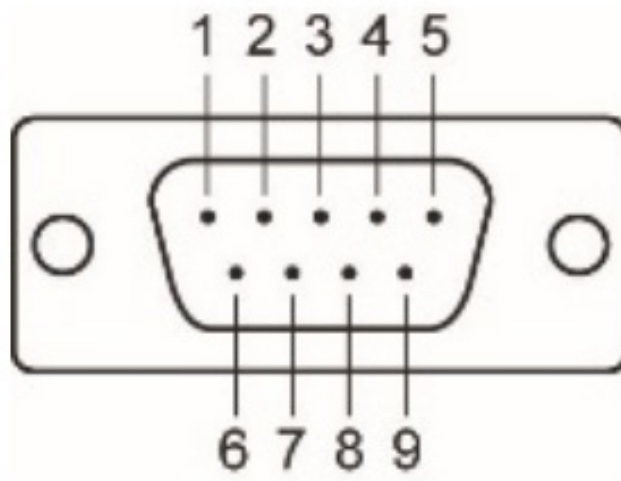

Pin	RS-232	RS-422/485 (4-Wire)	RS-485 (2-Wire)
1	DCD	TxD-(A)	—
2	RDX	TxD+(B)	—
3	TxD	RxD+(B)	Data+(B)
4	DTR	RxD-(A)	Data-(A)
5	GND	GND	GND
6	DSR	—	—
7	RTS	—	—
8	CTS	—	—
9	—	—	—

Environmental Specifications

Power Requirements	
Power Input	12 to 48 VDC
Power Consumption	12 to 48 VDC, 250 mA (max.)
Operating Temperature	0 to 60°C (32 to 140°F)
Storage Temperature	-40 to 85°C (-40 to 185°F)
Operating Humidity	5 to 95% RH
Dimensions With ears: Without ears:	22 x 100 x 111 mm (0.87 x 3.94 x 4.37 inch) 22 x 77 x 111 mm (0.87 x 3.03 x 4.37 inch)



P/N: 1802032800015

Documents / Resources

<p>MGate MB3280 Series Quick Installation Guide</p> <p>Version 4.2, January 2021</p> <p>For more support resources, visit www.moxa.com/support</p> <p>MOXA © 2021 Moxa Inc. All rights reserved.</p> <p>MOXA TECHNOLOGIES CORPORATION</p>	<p>MOXA MGate MB3280 Series 1-2-and 4-Port Standard Serial-to-Ethernet Modbus Gateways [pdf] Installation Guide</p> <p>MGate MB3280 Series, 1-2-and 4-Port Standard Serial-to-Ethernet Modbus Gateways</p>
--	--

References

- [M Moxa - Your Trusted Partner in Automation](#)
- [M Moxa - Support](#)

Manuals+.