



MPK TT270 Record Player with Hi-fi Bookshelf Speakers Bluetooth Turntable User Manual

[Home](#) » [MPK](#) » MPK TT270 Record Player with Hi-fi Bookshelf Speakers Bluetooth Turntable User Manual 

Contents


- [1 MPK TT270 Record Player with Hi-fi Bookshelf Speakers Bluetooth Turntable](#)
- [2 TURNTABLE PARTS](#)
- [3 Getting Started](#)
- [4 Phono Mode—vinyl! playback](#)
- [5 Bluetooth Mode—connecting to BT devices](#)
- [6 HOW TO REPLACE THE NEEDLE](#)
- [7 TIPS FOR BETTER TURNTABLE PERFORMANCE](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



MPK TT270 Record Player with Hi-fi Bookshelf Speakers Bluetooth Turntable



TURNTABLE PARTS

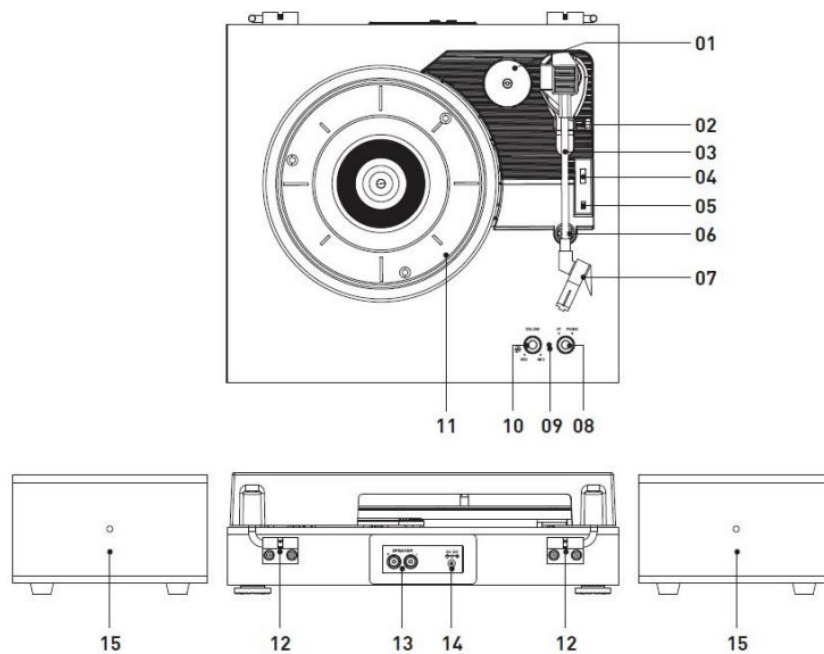

1. 45RPM adaptor
2. Lift Lever
3. Tone-arm
4. Speed Control Selection Switch
5. AUTO STOP ON/OFF Switch
6. Tone Arm Lock
7. Stylus Cartridge
8. Function Mode Knob
9. LED Indicator
10. Power Switch(VOLUME CONTROL KNOB)
11. Turntable Platter
12. Hinges
13. L/R RCA Output Jack
14. DC IN Power Jack
15. Hinges

15. Speaker Box

Getting Started

Connect the main unit and the speaker boxes with the RCA cable(white to white, red to red). Fix the dust cover onto the hinges of the main unit. Firmly and securely insert the DC plug of the adaptor to the DC IN Jack on the back of the unit. Plug the adaptor's AC plugs into a power outlet.

Phono Mode—viny! playback

1. Switch the function mode knob to PHONO mode. Turn on the power switch knob. The LED indicator will become red colour.
2. Place a record on the turntable platter and select the desired speed (33/45/78) according to the record.
NOTE: when playing a 45RPM record, use the included 45RPM adaptor.
3. Remove the stylus protector. Open the tone-arm lock to release the tone-arm. Push the lift lever backward to raise the tone arm and gently move the tonearm to the desired position over the record. The turntable will begin to spin when the arm is moved toward the record. Push the lift lever forward to lower the tone arm slowly onto the desired position on the record to begin playing the record. Please note: The record will begin to spin only when the tone arm is moved toward the record if the Auto Stop is turned on.
4. If the Auto Stop Control Switch is turned ON, the record will stop automatically when finished. If the Auto Stop Control Switch is turned OFF, the record will NOT stop automatically when finished.
Remark: The AUTO STOP function applies to most 33RPM vinyl records. However, for very few vinyl records, it will stop when it does not come to the end(in this case, turn the AUTO STOP switch to OFF position and then it will continue playback), or it will not stop when it comes to the end when AUTO STOP is ON.
5. Turn the VOLUME CONTROL KNOB to adjust the volume.

Bluetooth Mode—connecting to BT devices

1. Switch the function mode knob to BT. The LED indicator will become blue colour with flashing.
2. Turn on your Bluetooth function on your mobile phone or tablet PC and then search for the turntable player with its name MPK Turntable. After pairing and connection, the LED indicator will become blue colour without flashing, and you can play your music on your mobile phone or tablet PC on this turntable player.
3. Turn the VOLUME CONTROL KNOB to adjust the volume. Remark: the mobile phone or tablet PC's volume level also impacts the overall volume; please adjust that as well to have a satisfying sound.

HOW TO REPLACE THE NEEDLE

To replace the needle, please refer to the instructions below. Removing the needle from the cartridge


1. Place a screwdriver at the tip of the stylus and push downward as shown in direction "A". 2. Remove the stylus by pulling the stylus forward and pushing downward. Installing the Stylus
2. Hold the tip of the stylus and insert the stylus by pressing as shown in direction "B". 2. Push the stylus upward as in direction "C" until the stylus locks into the opposition.



TIPS FOR BETTER TURNTABLE PERFORMANCE

1. Choose a safe and horizontal location and avoid placing the unit in direct sunlight or near any heat source. Avoid environments subject to vibration, excessive dust, cold or moisture.
2. Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
3. Frequently clean the needle tip-use a soft brush in a “back-to-front” motion only.
4. Gently wipe the turntable player housing with a soft cloth. Use only a small amount of mild detergent to clean the turntable player.
5. Due to the risk of electrical shock, do not open the cabinet. Should a foreign object accidentally find its way into the interior of the unit, contact your local dealer.
6. Keep this manual for future reference.

Documents / Resources

	<p>MPK TT270 Record Player with Hi-fi Bookshelf Speakers Bluetooth Turntable [pdf] User Manual</p> <p>TT270 Record Player with Hi-fi Bookshelf Speakers Bluetooth Turntable, TT270, Record Player with Hi-fi Bookshelf Speakers Bluetooth Turntable, Hi-fi Bookshelf Speakers Bluetooth Turntable, Bookshelf Speakers Bluetooth Turntable, Speakers Bluetooth Turntable, Bluetooth Turntable, Turntable, Turntable TT270</p>
---	--

References

- [User Manual](#)