



MPM MBL-11 Hand Blender User Manual

[Home](#) » [MPM](#) » MPM MBL-11 Hand Blender User Manual 



MBL-11 Hand Blender User Manual



INSTRUKCJA OBSŁUGI
MBL-11 Hand blender set

Contents

1 IMPORTANT SAFEGUARDS

2 FEATURES

3 ASSEMBLING AND USING THE APPLIANCE

4 FITTING THE CHOPPING BLADE

5 CLEANING AND MAINTENANCE

6 TECHNICAL SPECIFICATIONS

7 Documents / Resources

7.1 References

IMPORTANT SAFEGUARDS

- Please read all instructions carefully before using your appliance.
- Never touch the appliance with wet hands.
- Keep the appliance away from water.
- Do not immerse the power cord, plug or main body in water or any other liquid.
- Always unplug the appliance from a power outlet when not in use and before cleaning.
- Do not let the power cord hang over sharp edges or touch hot surfaces.
- Do not use the appliance if the power cord or plug is damaged. In such case, return the appliance to an authorised service centre.
- Always wait until the blade has completely stopped before disassembling.
- Take special care when handling the cutting blades, especially during disassembling and washing.
- Using attachments not recommended by the manufacturer may result in damage to the appliance, fire or personal injury.
- Never leave the appliance unattended when in use.
- Never place the appliance on hot surfaces.
- Do not use outdoors.
- When operating the appliance keep your hands away from moving parts.
- Before cleaning the blending attachment, first remove it from the appliance.
- Make sure that all attachments are securely and correctly fitted before operating the appliance.
- Never place the appliance near any electrical devices, burners, cookers, ovens, etc.
- The appliance must only be used for its intended purpose.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Make sure that children do not play with the appliance.
- The appliance has been designed for the use in household only.
- Do not pull the plug by holding the power cord.
- Do not connect the power plug with wet hands.
- Keep your children safe: do not leave any parts of the packaging readily accessible (i.e. plastic bags, cardboard boxes, polystyrene inserts, etc.).

- **WARNING!** Never let children play with plastic film or bags. Choking/asphyxiation hazard!
- **WARNING!** The cutting blades are very sharp, avoid touching them while emptying or cleaning the appliance – it may result in serious injury.

FEATURES



1. Motor body
2. Stainless steel heat-resistant blending attachment
3. Release buttons (on both sides of the motor body)
4. Illuminated ON/OFF button
5. TURBO button
6. Illuminated speed dial
7. 1750ml mixing container with lid
8. Container lid
9. Locking collar

10. Feed tube
 11. 600ml container with lid
 12. Full two-sided coarse slicing/shredding disc
 13. Full two-sided fine slicing/shredding disc
 14. Full potato grating disc
 15. Stainless steel chopping blade
 16. Disc drive shaft
 17. Whisking attachment for beating egg whites and whisking light creams and sauces
- Buttons **4 5** and the speed dial **6** are illuminated blue.

ASSEMBLING AND USING THE APPLIANCE

NOTE! Wash all attachments and containers before first use.

Fit the blending attachment **2** onto the motor body **1** until it locks into place. To remove the blending attachment **2** press the release buttons **3** and slide it out, with the blade pointing downwards. Take care not to hurt yourself or damage any parts of the appliance when removing the attachment.

Model MBL-11 has an additional 1750ml container **7** with a lid and a chopping blade **15** and two-sided slicing/shredding discs **12 13 14** as well as a whisking attachment **17**.

FITTING THE CHOPPING BLADE

Remove the lid **8** from the container **7** , turning it counter clockwise. Fit the chopping blade **15** over the pin in the centre of the container, then close the container so that the end of the chopping blade **15** fits into the lid **8** . Screw on the lid **8** clockwise.

FITTING THE CUTTING DISCS

Remove the lid **8** from the container **7** , turning it counter clockwise. Fit the disc drive shaft **16** onto the pin in the centre of the container, then fit the selected disc **12 13 14** onto the disc drive shaft (**13**) and close the container so that the end of the disc **12 13 14** fits into the lid **8** . Screw on the lid **8** clockwise.

FITTING THE WHISKING ATTACHMENT FOR BEATING EGG WHITES AND WHISKING LIGHT CREAMS AND SAUCES

Fit the attachment for beating egg whites **17** onto the motor body **1** until it locks into place.

To remove the attachment for beating egg whites **17** press the release button **3** and slide it out.

SPEED DIAL

The appliance comes with a variable speed dial **6** which allows adjusting the motor speed to your needs. Rotate the speed dial **6** clockwise for faster blending and counter clockwise for slower blending.

TURBO BUTTON

The TURBO button **5** increases the appliance speed to maximum speed for a short time. The TURBO function is engaged only when the TURBO button **5** is pressed. The TURBO power corresponds to the highest speed that can be achieved using the speed dial **6** . Press and hold the TURBO button to operate your hand blender at its highest speed.

CLEANING AND MAINTENANCE

1. Make sure the unit is unplugged from the mains supply socket before cleaning.
2. Before and after each use dismantle all parts in contact with food and wash thoroughly in warm soapy water.
Rinse and dry thoroughly.
3. Do not dish wash any of the appliance parts.
4. Inspect the attachments periodically before refitting. Do not use the blender if the blades of the blending attachment **2** are blocked or the motor slows.
5. Never immerse the appliance in water. Unplug the blender from the mains supply socket and then wipe the motor body with a damp cloth.
6. The motor is lubricated for life – no additional lubrication is required.

TECHNICAL SPECIFICATIONS

Power: 800 W

Supply: 220-240 V 50/60 Hz

KB MAX: 30 sec.

Break between work cycles: 30 sec.

Noise (LWA): 80 dB




NOTE! MPM aged S.A. reserves the right to introduce technical modifications!

PROPER DISPOSAL OF THE PRODUCT (waste electrical and electronic equipment)

Poland





Marking on the product indicates that after the service-life of the product expires, it should not be disposed with other type of municipal waste. Used equipment may have a negative impact on the environment and health of people due to potentially containing hazardous substances, mixtures and components. Mixing electric waste with other types of waste or disassembling those in an unprofessional manner may cause a release of substances that are hazardous to the environment and health. Used equipment should be handed-over to a point for collection of electric waste. In order to obtain detailed information regarding the electric waste collection points, the user should contact the municipal point of electric waste collection or used equipment processing department.

We wish you satisfaction from using the product and invite you to check a wide range of other  appliances

MPM aged S.A.
ul. Brzozowa 3, 05-822 Milanese, Polka
tel.: (22) 380 52 34, fax: (22) 380 52 72, BDO: 000027599
www.mpm.pl

Documents / Resources

 INSTRUKCJA OBSŁUGI  BLENDER RĘCZNY ZESTAW MBL-11 Hand Blender set/Przenośny blender z akcesoriami/ Przenośny blender z akcesoriami/Blender MBL-11 Przenośny blender z akcesoriami/Blender MBL-11 Przenośny blender z akcesoriami/Blender MBL-11 Przenośny blender z akcesoriami/Blender MBL-11	MPM MBL-11 Hand Blender [pdf] User Manual MBL-11, MBL-11 Hand Blender, Hand Blender, Blender
---	---

References

-  Pyszniogotuj.pl tworzymy z myślą o Tobie! - Pyszniogotuj.pl tworzymy z myślą o Tobie!