



Mpow Bluetooth Music Receiver BH044D User Manual

[Home](#) » [MPow](#) » Mpow Bluetooth Music Receiver BH044D User Manual 

USER MANUAL



**Bluetooth Music Receiver
Mpow BH044D**

Contents


- 1 SPECIFICATION**
- 2 DIAGRAM**
- 3 POWER ON**
- 4 POWER OFF**
- 5 INSTRUCTION**
- 6 PAIR TO YOUR BLUETOOTH-ENABLED SMARTPHONE**
- 7 PAIR TO TWO SMARTPHONES**
- 8 PLAY MUSIC**
- 9 BLUETOOTH HANDS-FREE CALL**
- 10 CALL/VOICE ASSISTANT MODE**
- 11 CLEAR BLUETOOTH CONNECTION LIST**
- 12 VOICE ASSISTANT**
- 13 LOW POWER WARNING**
- 14 CHARGE THE RECEIVER**
- 15 CONSIDERATION**
- 16 FCC STATEMENT**
- 17 CORRECT DISPOSAL OF THIS PRODUCT**
- 18 Related Posts**

SPECIFICATION

Connection Technology: Bluetooth
Frequency Range: 2.4 GHz
Output Power Category: Class 2
Bluetooth Protocol: HFP/ HSP/ A2DP/ AVRCP
Bluetooth Range: Up to 30 feet
Power Supply: Li-Po 170 mAh
Working Current: 15 mA (MAX)

Charge Voltage: DC 5.0 V

DIAGRAM

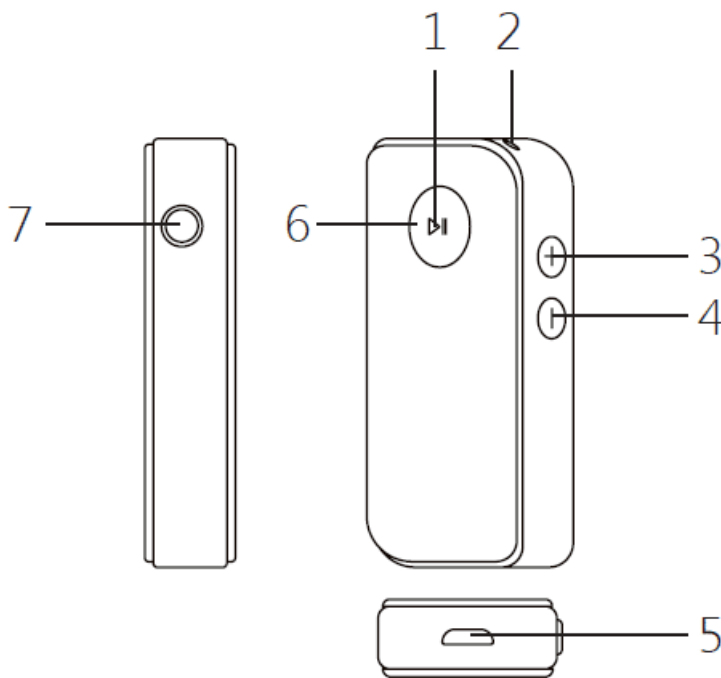

1. Power ON/ OFF; Pause/ Play; Answer/ Hang Up
2. Microphone
3. Next Song/ Volume Up
4. Previous Song/ Volume Down
5. USB Charging Port
6. Indicator Light
7. Audio Output Port

POWER ON

Long press the button “ **Play Button** ” for about 3 s. It will power on automatically with red indicator light staying on for 1 s. Then the red and blue indicator light flashes alternately.

POWER OFF

Long press the button “ **Play Button** ” for about 3s, and the red indicator light will stay on for 1 s. Then it powers off automatically.

INSTRUCTION

1. Connect the receiver to your headphone, Home Speaker or Car Stereo System with a 3.5 mm audio cable.
2. Pair the receiver to your smartphone.
3. Now you can enjoy your music through your Headphone, Speakers, Home Stereo System, Car Stereo System, or answer hands free calls.

PAIR TO YOUR BLUETOOTH-ENABLED SMARTPHONE

1. For the first use, you should pair the receiver to your smartphone.
2. When powering on it, long press the button “ **Play Button**” for about 3 s till the red and blue indicator light flash alternately to enter the pairing mode.
3. Enable Bluetooth on your phone.
4. Search for the Bluetooth device “Stream-bot Mini” and connect to it.
5. Enter the code “0000” if needed.
6. If it pairs successfully, the blue indicator light will flash at interval.

PAIR TO TWO SMARTPHONES

1. Pair the Bluetooth receiver to the first smartphone.
2. After pairing successfully, disable Bluetooth on the first smartphone.
3. The receiver will enter the pairing mode again.
4. Pair the Bluetooth receiver to the second phone.
5. After pairing successfully, enable Bluetooth on the first phone. Select the ” Stream-bot Mini” and click “connect”.
6. Two smartphones will both be connected to the Bluetooth receiver simultaneously.

Note: The receiver will be connected to the last connected smartphone automatically when it powers on (Please enable Bluetooth on your smartphone before turning on the receiver).

PLAY MUSIC

1. Play/Pause: Short press the button “ **Play Button** ”.
2. Next Song: Short press the button “+”.
3. Previous Song: Short press the button “-”.
4. Volume Up: Long press the button “+”.
5. Volume Down: Long press the button “-”.

BLUETOOTH HANDS-FREE CALL

Answer a Call: short press the button “ **Play Button** ” to answer it.

Reject a Call: Long Press the button “ **Play Button** ” for about 1 s.

End a Call: Short press the button “ **Play Button**” or just hang up your smartphone.

Redial the Last Called Number: Double press the button “ **Play Button** ”

Switch to a Private Call: Long press “ **Play Button** ” for 1 s, you can choose to answer the call through the Bluetooth receiver or smartphone.

Answer Two Calls Simultaneously: When answering the handsfree call from phone 1, you can long press the button “ **Play Button** ” for about 1 s to answer a new incoming call from phone 2. Therefore the first call will be placed on hold. Long press the button “ **Play Button** ” for about 1 s again to switch between the two calls.

Answer Two Calls One by One: Short press the button “ ” to hang up the first call and answer the second one.

CALL/VOICE ASSISTANT MODE

1. Volume Up: Long press the button “+”.
2. Volume Down: Long press the button “-”.

CLEAR BLUETOOTH CONNECTION LIST

When the receiver is in power-off state, long press the button “ **Play Button** ” for about 8 s to clear the pairing information and enter pairing mode again with the red and blue indicator.

VOICE ASSISTANT

1. Long Press the button “ **Play Button** ” for about 1 s to enable voice assistant function.
2. Long press the button ” **Play Button** ” for 1 s to disable the voice assistant function.

LOW POWER WARNING

When the receiver is in low power state, it will alarm automatically with the red indicator light flashing quickly; It will be power OFF automatically if the voltage is lower than 3.0 V.

CHARGE THE RECEIVER

When the receiver is in low power state or lacks power, please charge it through USB charging port with DC 5V input power supply. During charging, the red indicator will stay on. When charging is complete, the red indicator will go off.

Please use the micro USB cable to charge the receiver.

CONSIDERATION

1. Please charge it in time when it's in low battery or you do not use it regularly, in case that it won't normally work or damage the battery.
2. Bluetooth signal can be blocked by surrounding objects, which may reduce the audio quality. Please put it in place without barrier between the receiver and your smartphone (or other devices).

FCC STATEMENT

Operation is subject to the following three conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- (3) This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

CORRECT DISPOSAL OF THIS PRODUCT

(Waste Electrical & Electronic Equipment)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

[Mpow-Bluetooth-Music-Receiver-BH044D-Manual-Optimized](#)

Optimized PDF

[Mpow-Bluetooth-Music-Receiver-BH044D-Manual-Original](#)

Download

Questions about your Manual? Post in the comments!