

[Skip to content](#)

[Manuals+](#)

User Manuals Simplified.



MPOW M20 User Manual BH344A

[Home](#) » [MPow](#) » MPOW M20 User Manual BH344A

MPOW M20 TRUE WIRELESS EARBUDS MODEL: MH344A



Contents [[hide](#)

 
- 1 PACKING LIST
- 2 DIAGRAM
- 3 POWER ON
- 4 POWER OFF
- 5 PAIRING
- 6 MUSIC
- 7 INCOMING CALL
- 8 RESET
- 9 CHARGING
- 10 CORRECT DISPOSAL OF THIS PRODUCT
- 11 FCC STATEMENT
- 12 Related Manuals:

PACKING LIST





X1

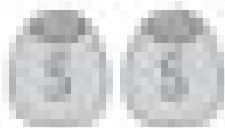

X1



X1



 
X1



X1



X1

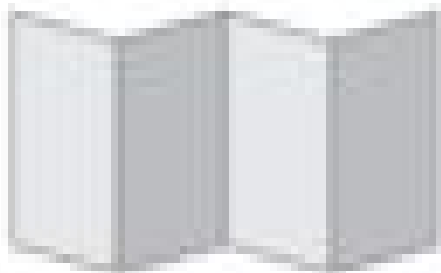

X1

DIAGRAM



Indicator light for charging case



USB charging port



Power bank button

 
 
USB-A



LED(Red/Blue)


Mic



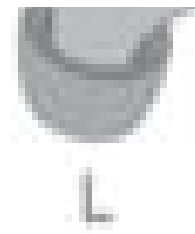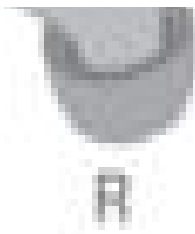


POWER ON

 Mode 1

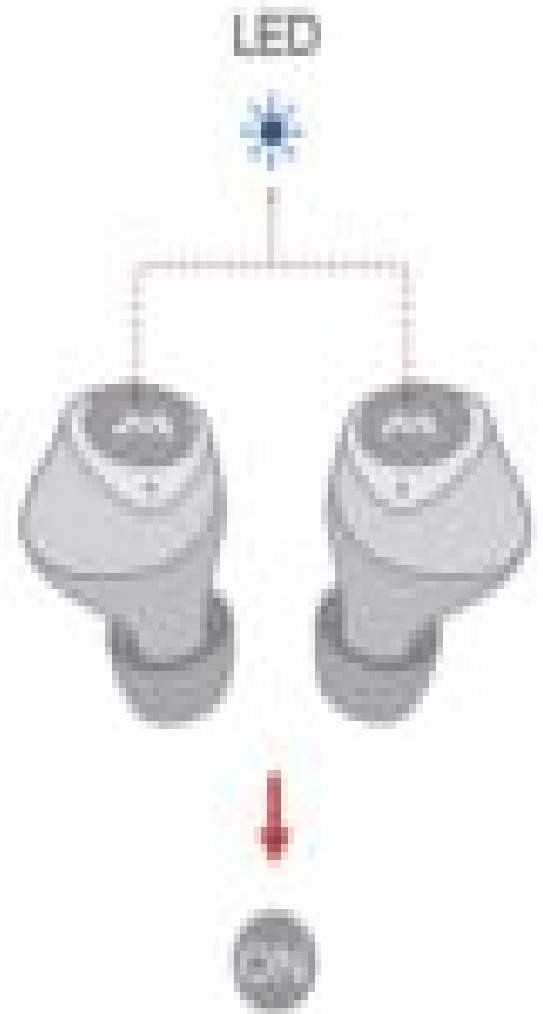

Mode 2



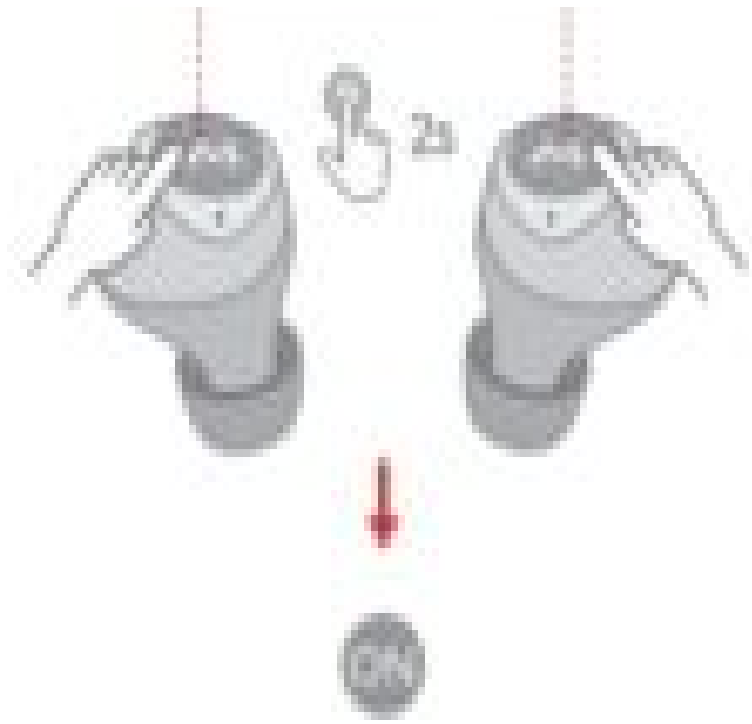 

1. The earphones automatically turn on (with blue LED light flashing) and start pairing when they are taken out from the charging case.
2. In the shutdown status, and when the earphones are not in the charging case, press and hold the MFB button on the Right and Left earphones for 2s to power on (with the blue LED light flashing).

POWER OFF

Mode 1




Mode 2




1. Put the earphones back in the charging case, and they'll shutdown automatically.
2. If the earphones are not in the charging case, just keep pressing the MFB button for 5s on the R/L earphone to power off.

PAIRING

 Mode 1

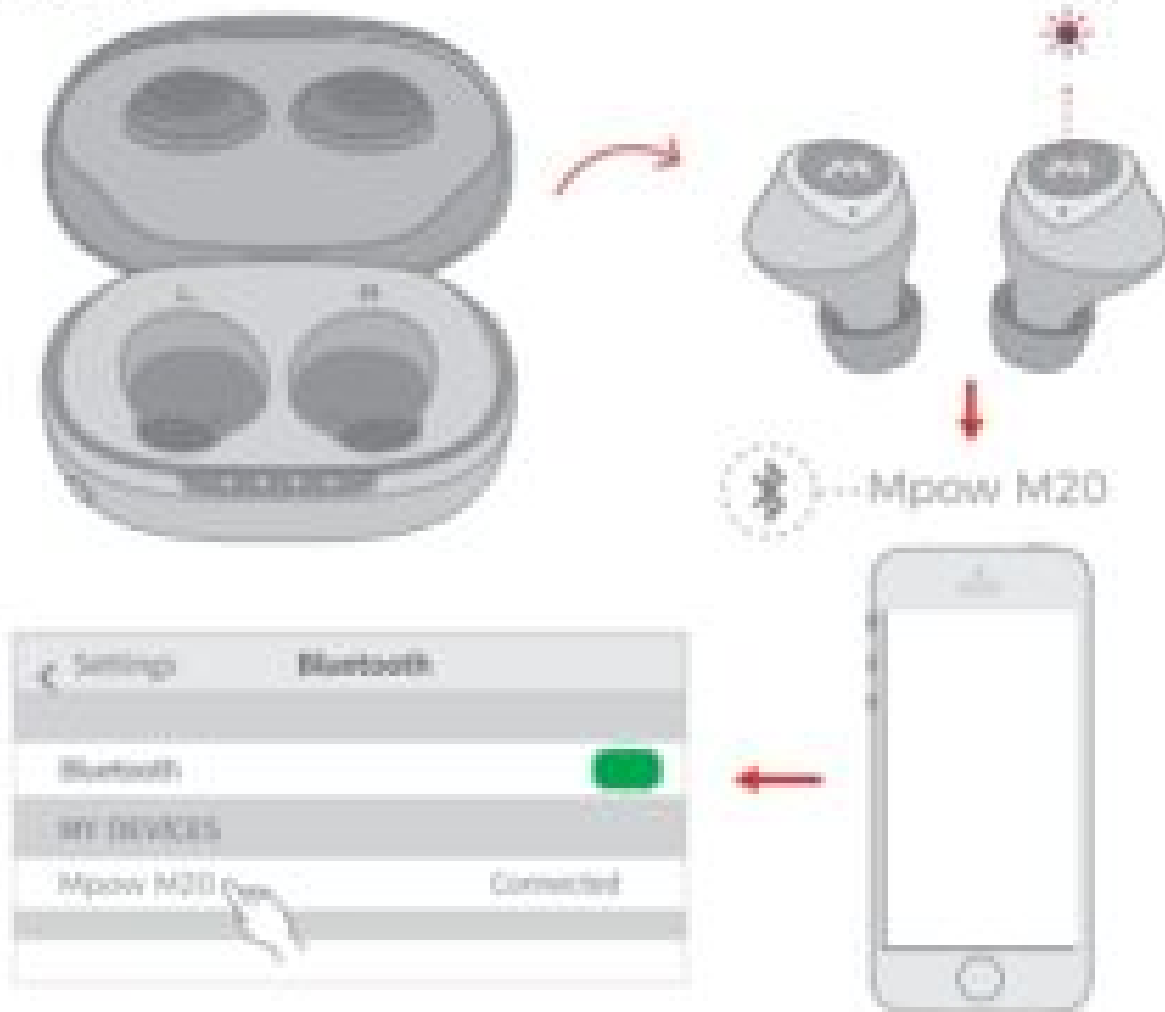

Mode 2

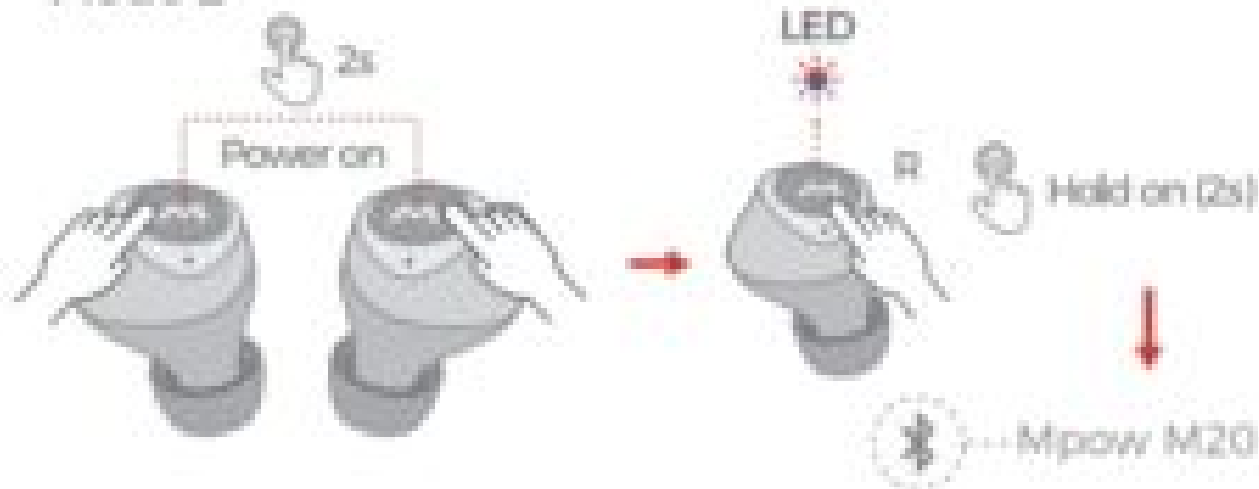 

1. The earphones automatically start pairing (with the red and blue LED light flashing quickly on the right earbud) when they are taken out from the charging case, and choose "Mpow M20" on your device.
2. Turn it on by pressing and holding "L" and "R" earphones simultaneously for 2s then press and hold the "R" earphone for 2s to enter into pairing mode with the red and blue LED light flashing quickly. Next, select "Mpow M20" on your phone.

Note: If one phone is connected with your earbuds, you have to turn off this phone's Bluetooth function before pairing with another Bluetooth enabled phone.

MUSIC

1. **Volume Up/Down**

Volume + : press and hold the MFB button of Right earbud to turn up the volume increasingly.

Volume - : press and hold the MFB button of Left earbud to turn down the volume decreasingly.

2. **Next/Previous Track**

Double click the MFB button on the R/L earphone.

3. **Play/Pause**

Click the MFB button on the Right or Left earphone once.

INCOMING CALL

1. **Answer/Hang up**

Click the MFB button on the Right or Left earphone once.

 
2. **Reject**

Keep pressing the MFB button on the Right or Left earphone for 1s.

3. **SIRI**



triple-click MFB button on the Right earphones.

RESET

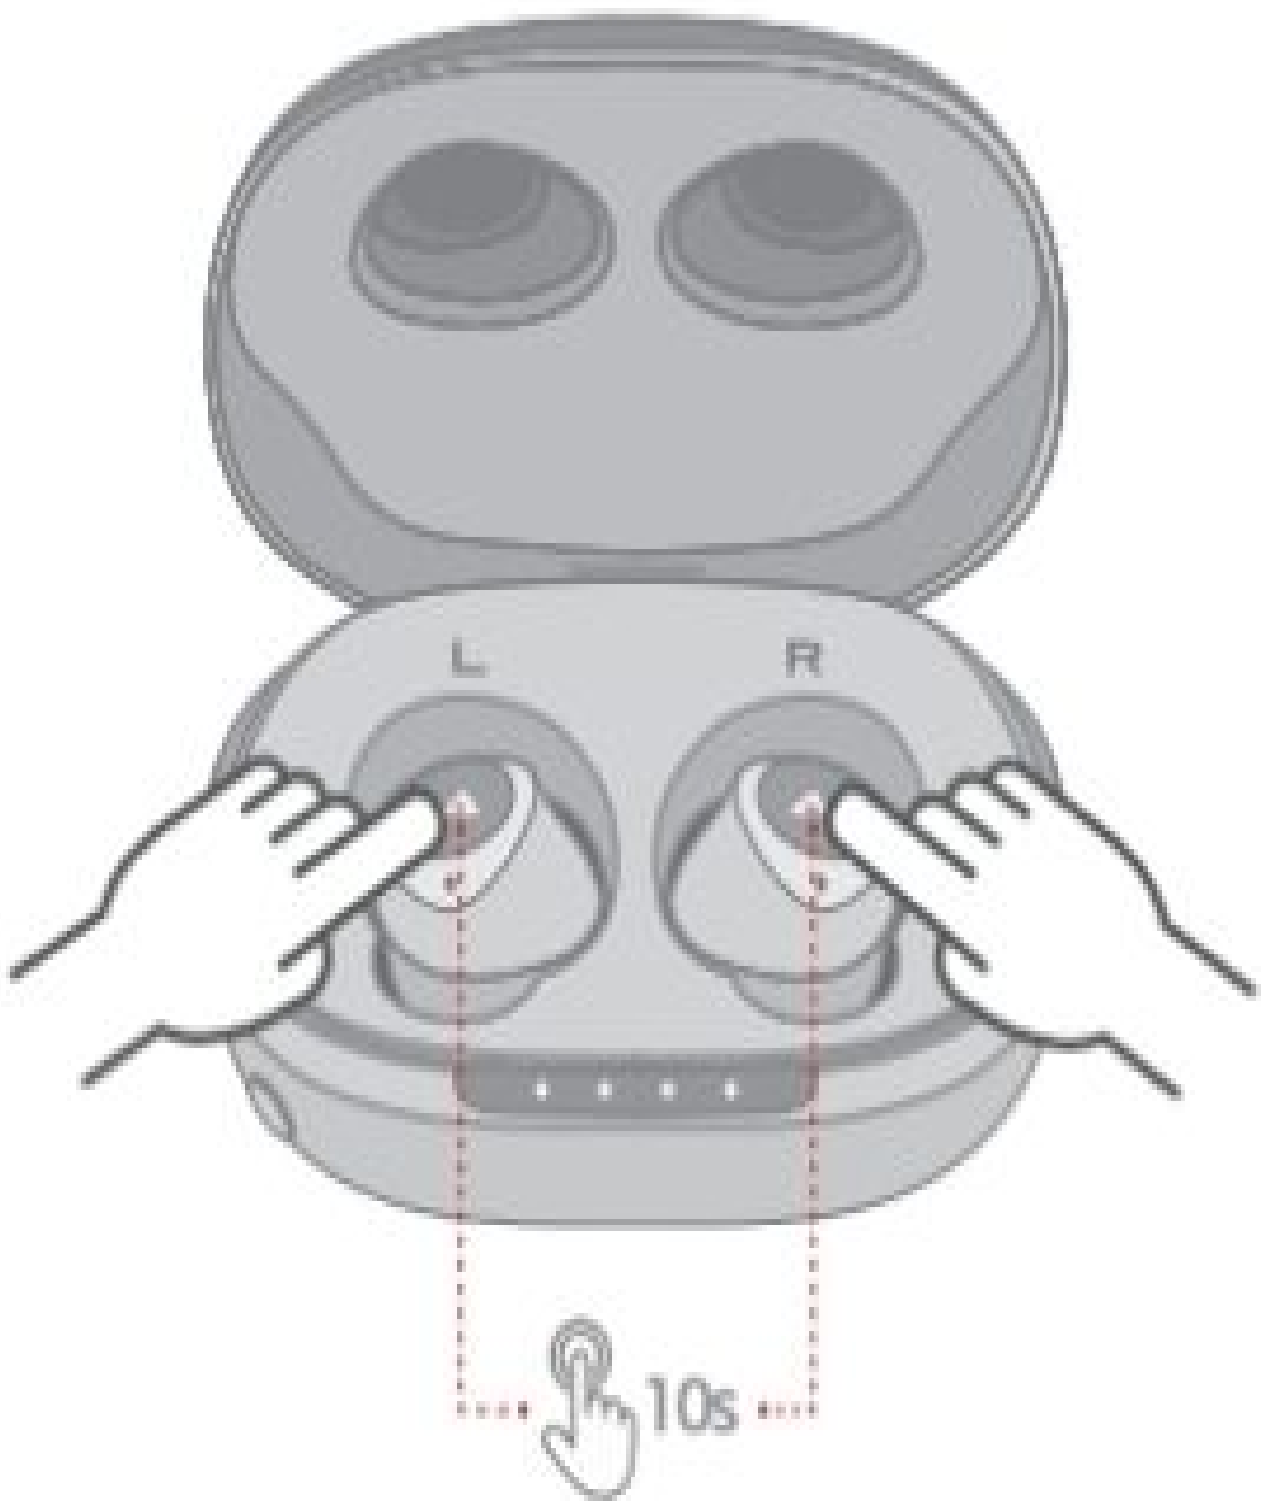

In the state of charging, simultaneously press and hold both MFB buttons for 10s.

  
CHARGING

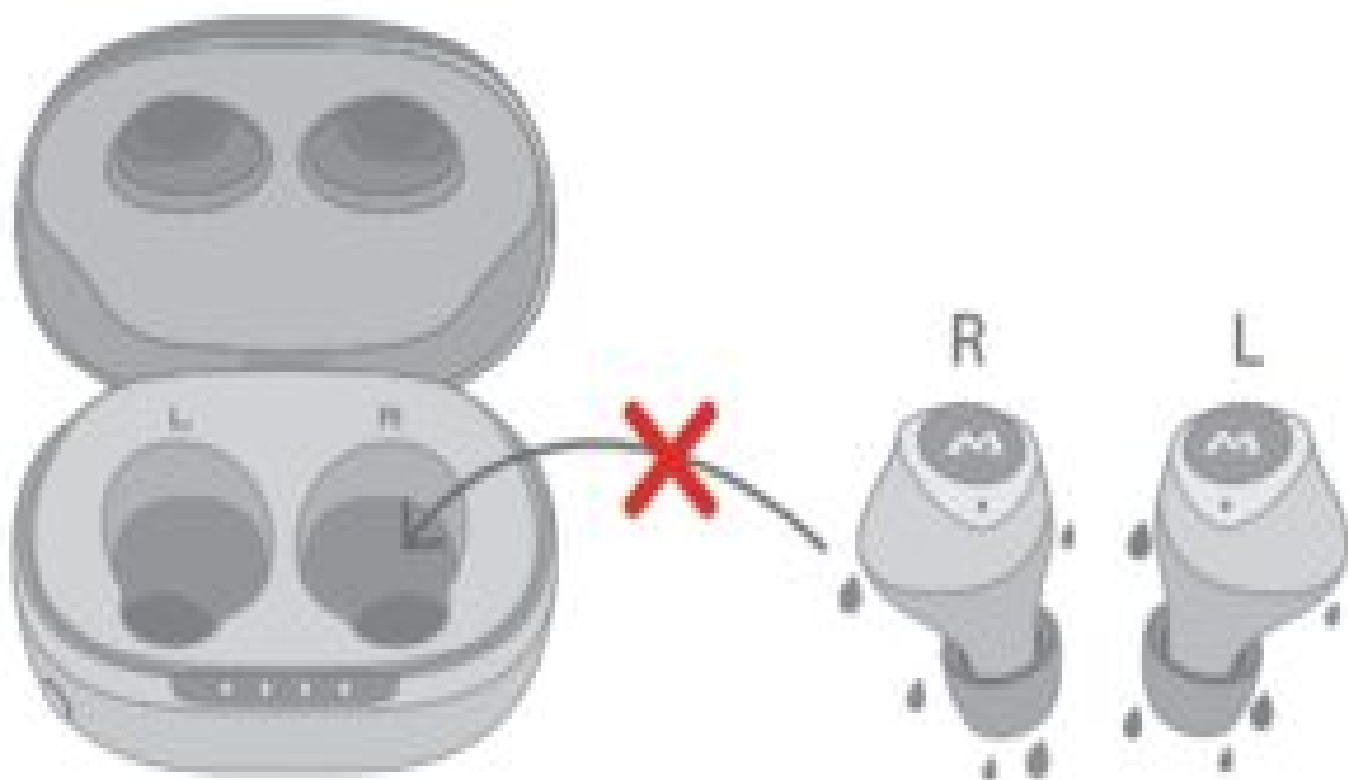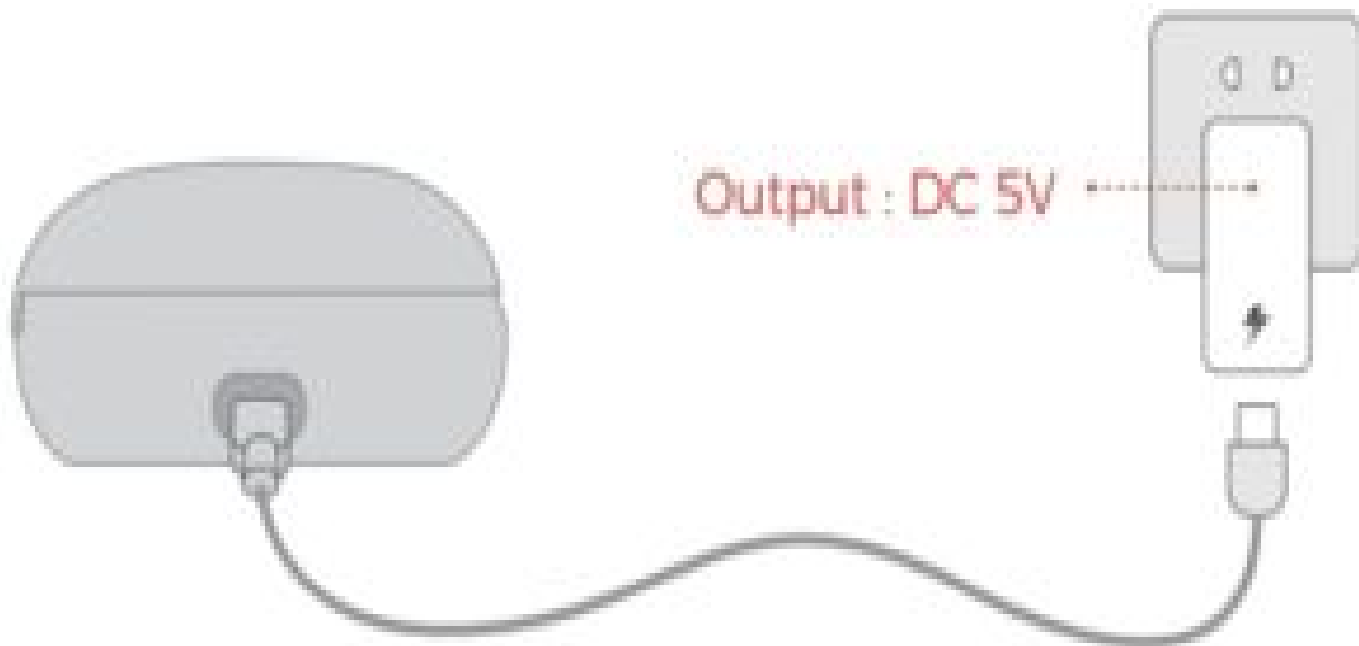

Do not put the earbuds in the charging case when the earbuds are wet.

CORRECT DISPOSAL OF THIS PRODUCT



 (Waste Electrical and Electronic Equipment)

This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contact. This product should not be mixed with other commercial wastes for disposal.

FCC STATEMENT

Operation is subject to the following three conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.
3. This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful in interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct ht interference by on e or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the recceicer is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MPOW M20 User Manual BH344A – [Optimized PDF](#)

MPOW M20 User Manual BH344A – [Original PDF](#)

Related Manuals:

1. [Mpow M20 True Wireless Earbuds BH344A User Manual](#) PACKING LIST DIAGRAM POWER ON THE earphones automatically turn on...
2. [Mpow M30 Plus User Manual](#) Mpow M30 Plus User Manual – Optimized PDF Mpow M30...
3. [MPOW MS1 User Manual](#) MPOW MS1 User Manual – Optimized PDF MPOW MS1 User...
4. [MPOW MX1 User Manual](#) MPOW MX1 TRUE WIRELESS EARBUDS MODEL: BH480A PACKING LIST DIAGRAM POWER...
5. [MPOW T6 Plus User Manual BH333C](#) MPOW T6 PLUS TRUE WIRELESS EARBUDS MODEL : BH333A PACKING...
6. [MPOW MBits S User Manual](#) MPOW MBits S User Manual – Optimized PDF MPOW MBits...