



mPTech BE-570134 Adjustable Wave Maker User Manual

[Home](#) » [mptech](#) » mPTech BE-570134 Adjustable Wave Maker User Manual 

mPTech BE-570134 Adjustable Wave Maker User Manual



Contents

1	Safety of use
2	INTENDED USE
3	IMPORTANT SAFETY INSTRUCTIONS
4	DO NOT RISK
5	SURROUNDINGS
6	WATER AND OTHER LIQUIDS
7	PROFESSIONAL SERVICE
8	Specification
9	Structure of the device
10	Use of the device
11	PREPARATION FOR FIRST USE
12	OPERATION OF THE DEVICE
13	USE OF DEVICE
14	Troubleshooting
15	Cleaning and maintenance of the device
16	Explanation of symbols
17	Use of the manual
18	Warranty and Service
19	Declaration of conformity with EU directives
20	Documents / Resources
20.1	References

Safety of use



WARNING

The surfaces of the device can become very hot! Please use caution during use!

INTENDED USE

The device is designed for waving human hair. The product is not intended for use on animal hair or objects. The device is intended for indoor use only and may not be used for commercial purposes – any other use will be considered inappropriate and therefore dangerous.

The manufacturer is not responsible for injuries resulting from improper use of the device.

IMPORTANT SAFETY INSTRUCTIONS

The device can be operated and cleaned by children over 8 years of age and people with limited mental or physical dispositions only when they are under the supervision of caregivers or after handing over the instructions for use of the device in a safe way, understanding the danger posed by the use of the device.

The device is not a toy for children. Disconnect the appliance from the power grid before cleaning or maintaining it. Maintenance and cleaning of the product should only be carried out by or under the supervision of adults. If the power cord is damaged, it must be replaced by the manufacturer's service, service centre representative or qualified persons.

DO NOT RISK

The device is intended for indoor use. Do not use the device in areas where the use of electrical equipment is prohibited and where it may cause interference or other hazards. Do not switch on or use the appliance near flammable materials.

Do not place any flammable objects on the device – this may damage the device or even cause a fire. Do not move a switched-on device.

Do not touch the area around the heating elements of the product immediately after operation to avoid burns. Residual heat remains on the surface of the heating element even after use.

SURROUNDINGS

Make sure that children under 8 years of age and pets are not left unattended in the vicinity of the operating device, because during operation, the internal and external surfaces of the device heat up strongly – there is a risk of burns, and the power cord may cause tripping, tipping over or other injuries.

WATER AND OTHER LIQUIDS

Do not expose the appliance to water or other liquids. This may adversely affect the operation and service life of electronic and electrical components. Avoid working in an environment with high humidity – steamed kitchens, bathrooms, as well as water droplets from other sources can cause moisture to appear in the housing of the device, and this can lead to damage to the device, and in extreme cases, electric shock.

When using the appliance in the bathroom, unplug the power cord from the power socket after use. Proximity to water poses a risk even if the appliance has been switched off.

PROFESSIONAL SERVICE

This product may only be repaired by a qualified manufacturer's service or an authorised service centre. Repair of the device by an unqualified service or by an unauthorized service point may result in damage to the device and loss of warranty. The manufacturer is not responsible for problems caused by self modifications made by the user.

Specification

Technical data

Adjustable wave maker	
Model	BE-570134
Batch number	613104
Power	100W
Power supply	110-240V ~ 50-60 Hz

Contents

- Adjustable wave maker
- User Manual



If any of the above items are missing or damaged, please contact your dealer.




We recommend to keep the packaging in case of any complaint.

It is possible to download the electronic version of the user manual from the following Internet address:

Or by scanning the QR code:



Structure of the device

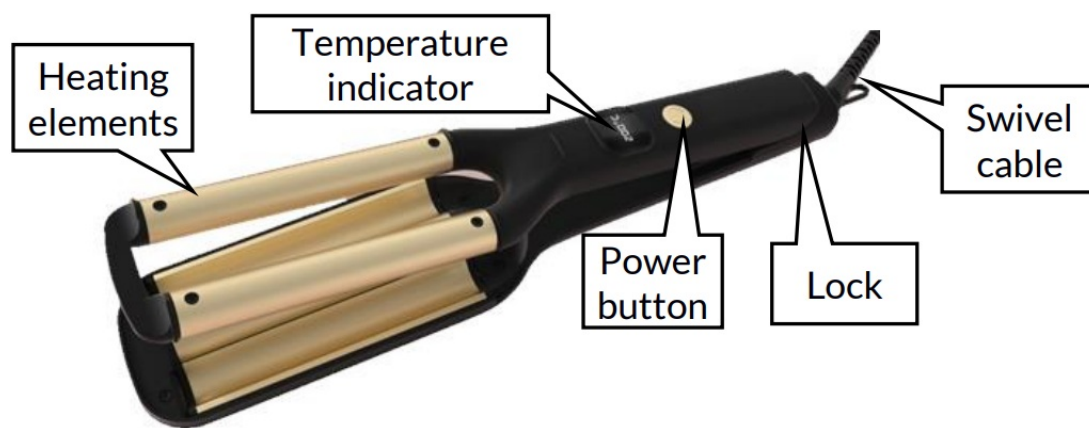

Use of the device



Before operating the device, ensure that your hands are not wet. The device should remain unplugged from the power source.



Ensure that the cord is routed in such a way that it cannot be damaged, cut, bumped or pulled, which could cause damage to the device or injury to the user or bystanders.



If you notice that the housing, cord or power plug is damaged, then do not turn on the device.



Be careful that water does not get inside the housing of the device! This is an electrical appliance, and water can cause a short circuit that can damage the appliance or cause electric shock

PREPARATION FOR FIRST USE

Remove the appliance from the packaging, remove the protective foil bag and unroll the power cord. Make sure that there are no objects and other materials that are not resistant to high temperature in the vicinity of the intended place of use of the product.

If the appliance housing and the power cord have no visible damage, plug the power plug into the mains socket. The device has a rotating power cord for ease of use. The device should be out of reach of children when not in

use.

OPERATION OF THE DEVICE

To turn on the device, press and hold the power button for about 3 seconds.

Immediately after switching on, set the desired operating temperature by briefly pressing the temperature adjustment buttons. Adjustments can be made in the range of four predefined temperature settings – 160-180-200-210 °C. The default operating temperature is 200 °C. After selecting the temperature, the white LED will flash on the temperature scale on the device housing at the selected temperature. When the temperature is reached, the LED will start to illuminate with a continuous light.

In the lower part of the housing there is a slider for adjusting the height of the central heating element. The four levels of adjustment correspond successively to a height of 18-22-26-32 mm. The higher height of the heating element means longer waves.

To turn on the device, press and hold the power button for about 3 seconds. The device switches off automatically 60 minutes after switching on.

After use, disconnect the device from the power source, leave it to cool down, and then store it in a safe place.

USE OF DEVICE



The device should be used on clean and completely dried natural hair.



Take special care when using the device – its surfaces may get very hot. Avoid contact of device plates with exposed skin. Especially around the ears, face and neck.

Wide range of product operating temperature control and instant heating technology ensure versatility of styling for all hair types. If you have thin hair, low temperature will provide the best results. If you have thick hair, set the temperature at a high level

Divide the hair into easy to arrange strands, clamp the top layers on top of the head so that they do not interfere. Turn on the device and set the wavelength.

Take care of the bottom layer first. Open the wave maker and place a strand of hair between the heated heating elements. Grab your hair with the heating plates by firmly squeezing the handles. For convenience, you can use the lock by closing it after clamping the handles. After about 10 seconds (depending on the thickness and density of the hair, this time may be slightly different) release the lock, loosen the handle and move the heating plates further along the hair strand. It is best to start at the root of the hair, moving the wave guide towards the ends of the hair.

It is also worth gently stretching the hair strand, which will make it easier to move the device along this strand.

Repeat for the remaining strands of hair. If necessary, use hairspray to fix the waves. Once your hair has cooled, you can start styling your hair.

After using the product, turn it off, disconnect it from the power source and leave it to cool down in a safe place.

Learning to use the product requires some practice. After using the device several times, you will learn the perfect way to style your hair.

Troubleshooting

In case of problems with the device, please refer to the following tips.



This device does not contain any parts that can be repaired by users.

The device does not switch on even when

Check that the plug or power cord is not damaged.

Check the correct connection of the plug to the mains socket.

plugged into the power grid

Check that the electrical outlet is not damaged – select another one.

If the problem has not been resolved, please contact the manufacturer's service.

Cleaning and maintenance of the device



WARNING! The appliance cannot be immersed in water or washed under running water!



Before cleaning the appliance, make sure that your hands are dry and the appliance is to cool down and disconnected from the power grid.



The device is maintenance-free.

Clean the appliance with a soft cloth slightly dampened with water, then dry with a dry cloth or paper towel. Do not use detergents, solvents or abrasives to clean.

Explanation of symbols



The packaging of the device can be recycled according to local requirements.



PAP

Symbol indicating corrugated board (packaging mat.).



The symbol indicates that the package contains a user manual which must be read before use.



WARNING! Do not use this appliance near baths, showers, sinks or other tanks filled with water.



For indoor use only



Symbol indicating a device of protection class II with double insulation (for the power supply).



The mark placed on the product means that this product complies with the basic requirements and other provisions of the so-called "New Approach" of the European Union.



The device is marked with the symbol of a crossed-out garbage container, in accordance with the European Directive 2012/19/EU on waste electrical and electronic equipment (WEEE). Products marked with this symbol should not be disposed of or disposed of with other household waste after their time of use. The user is obliged to dispose of waste electrical and electronic equipment by delivering it to the designated point at which such hazardous waste is recycled. The accumulation of this type of waste in indicted places and the proper process of its recovery contribute to the protection of natural resources. Proper recycling of waste electrical and electronic equipment has a beneficial effect on human health and the environment. For information on where and how to dispose of waste electrical and electronic equipment in an environmentally safe manner, the user should contact the relevant local authority, waste collection point or point of sale where he purchased the equipment.

Use of the manual

Without the prior written consent of the manufacturer, no part of this manual may be reproduced, distributed, translated or transmitted in any form or by any electronic or mechanical means, including by photocopying, recording or storing in any storage and information-sharing systems.

The illustrations of the device in this user manual may differ from the actual product.

All brands and product names are trademarks or registered trademarks of the respective companies.

Warranty and Service

The product has a 2-year warranty, starting from the date of sale of the product.

In the event of a defect, the product should be returned to the store where it was purchased, remembering the need to present proof of purchase. The product should be complete and preferably placed in its original packaging.

Declaration of conformity with EU directives



Hereby mPTech Sp. z o.o. declares that this product complies with the basic requirements and other provisions of the Directives of the so-called "New Approach" of the European Union.

Equipment Delivery Point:

mPTech Sp. z o.o.
street Krakowska 119
50-428 Wrocław
Poland

Designed in Poland Made In China

Manufacturer:


mPTech Sp. z o.o.
street Nowogrodzka 31
00-511 Warsaw
Poland

Helpline: (+48 71) 71 77 400

Email: pomoc@mpotech.eu

Website: huslog.eu

Documents / Resources

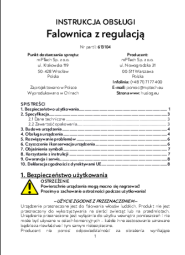	<p>mPTech BE-570134 Adjustable Wave Maker [pdf] User Manual BE-570134, 613104, BE-570134 Adjustable Wave Maker, BE-570134, Adjustable Wave Maker, Wave Maker</p>
---	---

References

- huslog.eu
- mptech.eu/qr/huslog
- [User Manual](#)

[Manuals](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.