



msgrout GTK3 Cordless Grout Tool Kit User Manual

[Home](#) » [msgrout](#) » msgrout GTK3 Cordless Grout Tool Kit User Manual 



User Manual
Cordless Grout Tool Kit for Two-Cartridge Type of Tile Grout
Model: GTK3

Contents

- [1 Safety Instructions](#)
- [2 Specification](#)
- [3 Parts and Functions](#)
- [4 Operation](#)
- [5 Product Disposal](#)
- [6 Warranty](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Safety Instructions

1.1 Battery Pack

- Do not charge a damaged battery pack.
- Do not try to disassemble the battery pack. When maintenance or repair is required, it should be handed over to

professional maintenance personnel, incorrect assembly may create product failure or personal injury.

- Do not drop, vibrate or hit the battery pack.
- The battery pack must be kept away from high temperature or flame. Do not place the battery pack on fire or heater, nor expose it to strong sunlight for a long time.
- Do not expose the battery pack to water or rain.
- The storage ambient temperature range of the battery pack is 30-110°F(0-45°C).

1.2 Charger

 
- Use the original charger for charging.
- The charger can not be placed in water or a humid place.

Important: Under no circumstances will compliance with the information in this manual relieve the user of his/her responsibility to comply with all applicable codes or safety standards.

Specification


Charger	Input: 100-240V, 50/60Hz				
Battery Pack	18V, 4Ah				
Speed Set	1	2	3	4	5
Propulsion Force (unit:N)	500	1000	2000	4000	8000
Net Weight	5.2 lbs (2.35 KG) with battery				

Parts and Functions

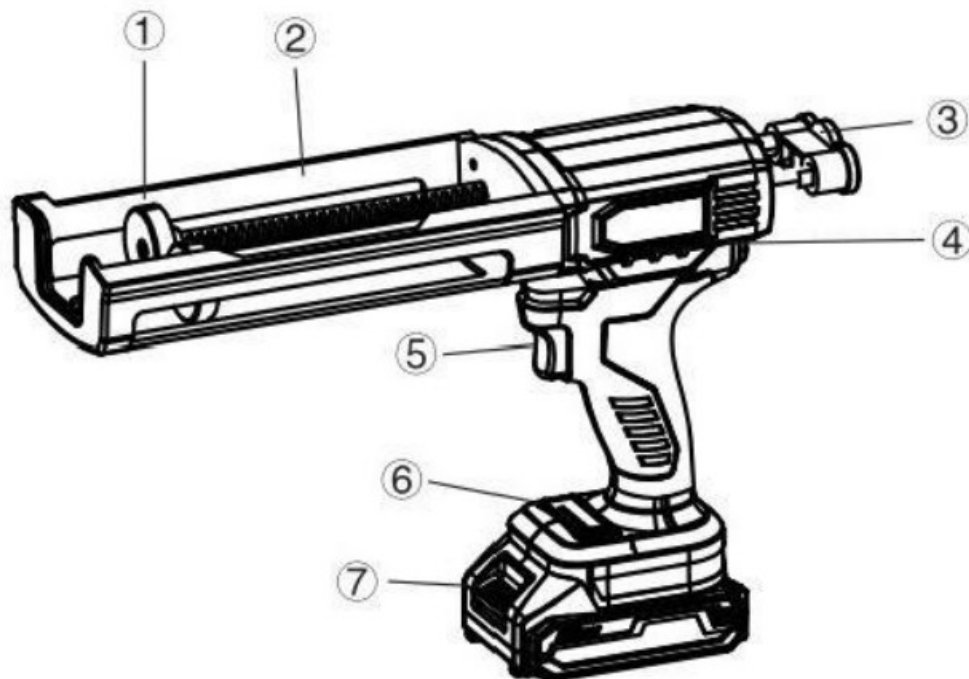


1.Piston		Thrust the bottom of the grout cartridge and squeeze the grout material out.
2.Cartridge holder		Contain and lock the cartridge.
3.Rod handle		N/A
4.Clutch plate		Press to pull or push the rod.
5.Trigger		Press and hold to forward the rod. Loose it and the rod will retreat a bit to stop squeezing the grout out of the cartridge.
6.	Power On/Off	Press and hold to power on/off the device.
	Speed set	Five feed speed shifts to select. Default speed set is at 5.
7. Battery pack		N/A

 Operation

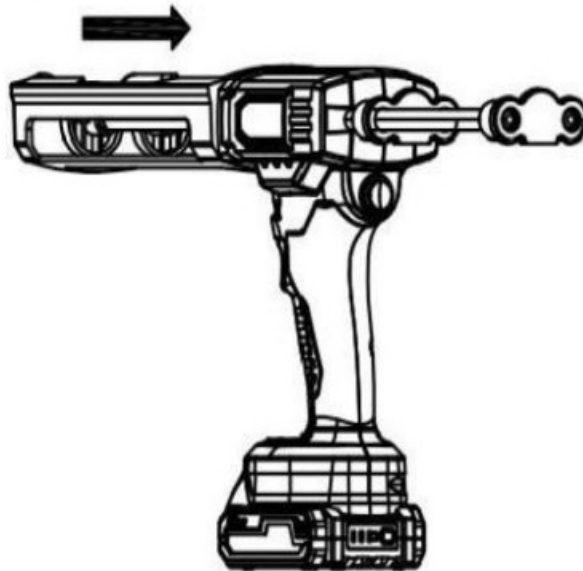

 
4.1 Press the clutch plate and pull backward the rod.

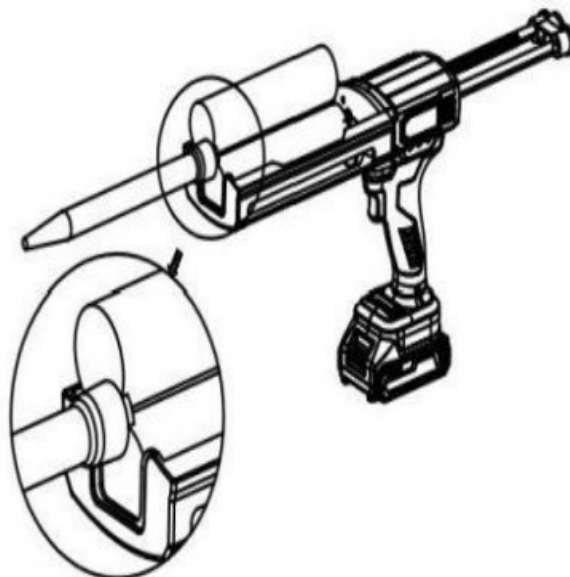


4.2 Insert the cartridge. Make sure the neck of the cartridge is fixed on the rail of the holder.



 4.3 Install the battery pack.

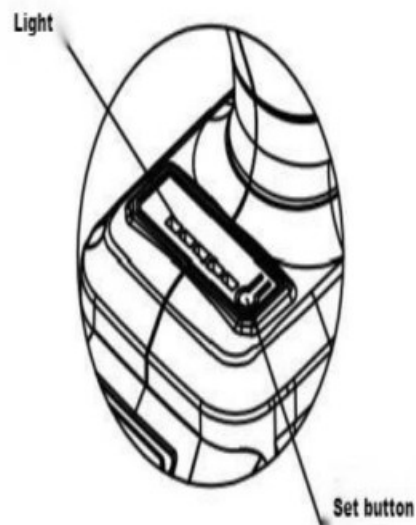

 4.4 Check the propulsion speed. It is advised to set at shift 5. Default is 5.

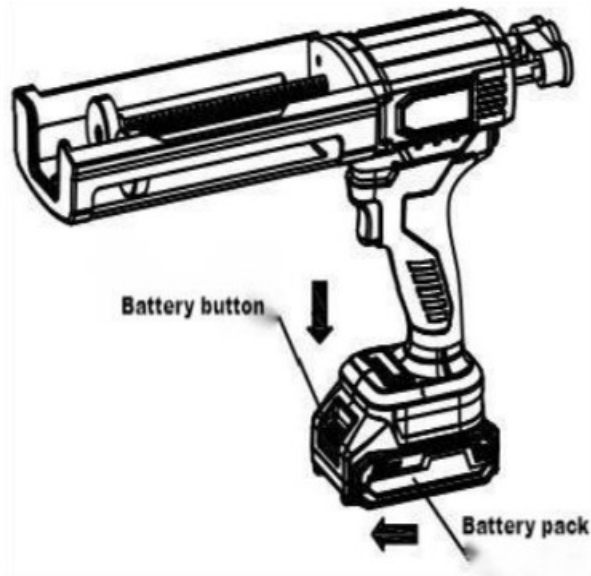

4.5 The way to uninstall the battery pack.

Product Disposal

Commercially reasonable efforts were made to ensure that the specifications and other information in this manual are accurate and complete at the time of its publication.

However, the specifications and other information in this manual are subject to change at any time without prior notice.
Dispose the battery pack according to the local laws and regulations.

Warranty

This device has one year warranty from the date of purchase.



MSGROUT LLC
30 N Gould St Ste N
Sheridan, WY 82801
info@msgrout.com

Documents / Resources

<div>User Manual</div> <div>Cordless Grout Tool Kit</div> <div>for Two-Cartridge Type of the Grout</div> <div>Model: GTK3</div> <div><div>1. Introduction</div><div>2. Safety</div><div>3. Preparing the Grout</div><div>4. Preparing the Grout</div><div>5. Preparing the Grout</div><div>6. Preparing the Grout</div><div>7. Preparing the Grout</div><div>8. Preparing the Grout</div><div>9. Preparing the Grout</div><div>10. Preparing the Grout</div></div> <div>© 2018 MSGROUT LLC. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without permission in writing from MSGROUT LLC.</div>	<div>msgrout GTK3 Cordless Grout Tool Kit [pdf] User Manual</div> <div>GTK3 Cordless Grout Tool Kit, GTK3, Cordless Grout Tool Kit, Grout Tool Kit, Tool Kit</div>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.