



## msi CK Series Mechanical Gaming Keyboard Instructions

[Home](#) » [MSI](#) » msi CK Series Mechanical Gaming Keyboard Instructions 

### msi CK Series Mechanical Gaming Keyboard



#### Contents

- [1 Special function keys on CK series Keyboard \(For all versions\)](#)
- [2 Only for backlit versions](#)
- [3 Cleaning the Keyboard \(CK Series Only\)](#)
- [4 Charging the Keyboard](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

#### Special function keys on CK series Keyboard (For all versions)

Fn + ESC = Pair  
Fn + WIN = App  
Fn + F10 = Print screen  
Fn + F11 = Scroll Lock  
Fn + F12 = Pause  
Fn + Delete Insert  
Fn + Up arrow = Page up  
Fn + Down arrow Page down  
Fn + Left arrow = Home  
Fn + Right arrow = End

### **Only for backlit versions**

- Fn + F8 = Decrease Backlit Brightness; Fn + F9 = Increase Backlit Brightness
- (For Wireless version, backlit will turn off to save power if there is no key stroke detected within 10 secs)

### **Cleaning the Keyboard (CK Series Only)**

1. Fn + Right Shift = Disabling the typing function for keyboard cleaning, press Fn + Right Shift again to unlock
2. Spray/Wipe with medical-grade cleaner

### **Charging the Keyboard**

Connect the keyboard to a USB2.0 port rated at 500mA, the keyboard will start charging immediately, 5 hours recommended for fully charging the Keyboard.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



***msi***

## Documents / Resources

[illegible]

**Manuals+,**