

msi D4040 CPU Single AMD EPYC 8004 Series Processors **User Guide**

Home » MSI » msi D4040 CPU Single AMD EPYC 8004 Series Processors User Guide 🖫




Contents

- 1 msi D4040 CPU Single AMD EPYC 8004 Series
- **Processors**
- 2 Specifications
- **3 Product Usage Instructions**
- 4 FAQs
- **5 OVERVIEW**
- **6 Front Panel Header**
- 7 CPU and Heatsink Installation
- **8 Connecting the Power Connectors**
- 9 Documents / Resources
 - 9.1 References
- **10 Related Posts**



msi D4040 CPU Single AMD EPYC 8004 Series Processors

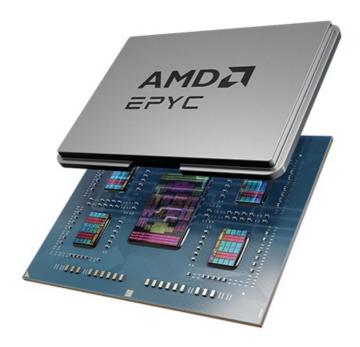

Specifications

- CPU: Single AMD EPYCTM 8004 series processors, TDP up to 225W
- Memory: Supports DDR5 RDIMMs with memory speeds up to 4800 MT/s (1DPC)

Product Usage Instructions

1. CPU and Heatsink Installation:

Follow the manufacturer's instructions to properly install the CPU and heatsink on the server board.

2. Memory Installation:

The server board supports DDR5 RDIMMs. Make sure to populate at least one DDR5 DIMM. Follow the memory installation guidelines provided in the user manual.

3. Connecting Power Connectors:

Connect the power connectors JATX1 and JATX2 as indicated in the user manual to ensure proper power supply to the server board.

4. Connectors, Jumpers, and LED Indicators:

Refer to the user manual for detailed information on connecting various connectors, jumpers, and LED indicators on the server board.


FAQs

- Q: What type of processors does the server board support?
 - A: The server board supports Single AMD EPYCTM 8004 series processors with a TDP of up to 225W.
- Q: What type of memory is compatible with the server board?
 - A: The server board supports DDR5 RDIMMs with memory speeds up to 4800 MT/s (1DPC).

• Q: How many DDR5 DIMMs should be populated on the server board?

• A: At least one DDR5 DIMM should be populated on the server board.

OVERVIEW

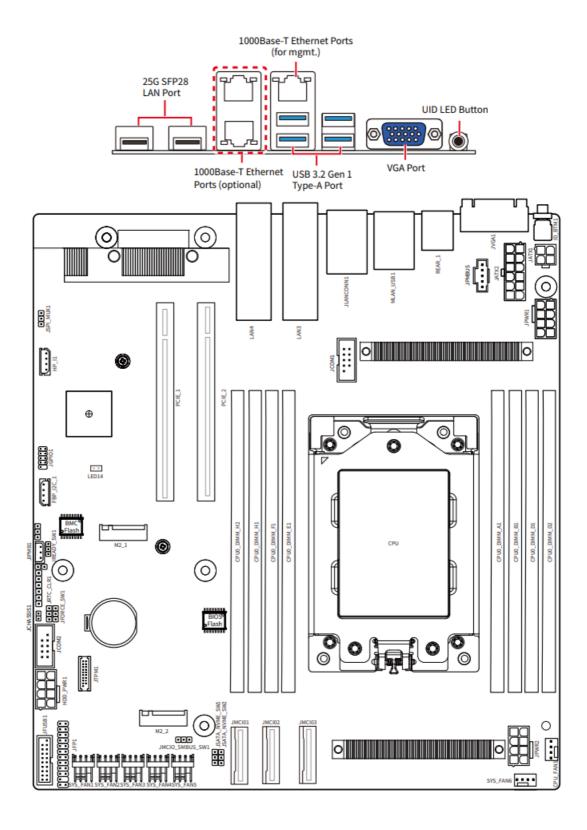


CPU

Single AMD EPYC™ 8004 series processors, TDP up to 225W.

Front Panel Header

JFP1 2 1 24 2 23								
1	P3V3	2	P3V3_AUX	3	No Pin	4	UID_LED+	
5	FP_PWR_LED_B_N	6	FP_ID_LED_N	7	P3V3	8	SYS_ERR_LED_L	
9	LED_HDD_ACTIVITY_N	10	SYS_FLT_LED_L	11	FP_PWR_BTN_N	12	NIC1_LED+	
13	GND	14	FP_LNK_ACT_NIC1_LED_N	15	FP_RST_BTN_N	16	BMC_SMB_FP_DAT	
17	GND	18	BMC_SMB_FP_CLK	19	FP_ID_BTN_N	20	FP_INTRUDER_N	
21	GND	22	P3V3_AUX	23	FP_NMI_BTN_N	24	FP_LNK_ACT_NIC2_LED_N	


CPU and Heatsink Installation

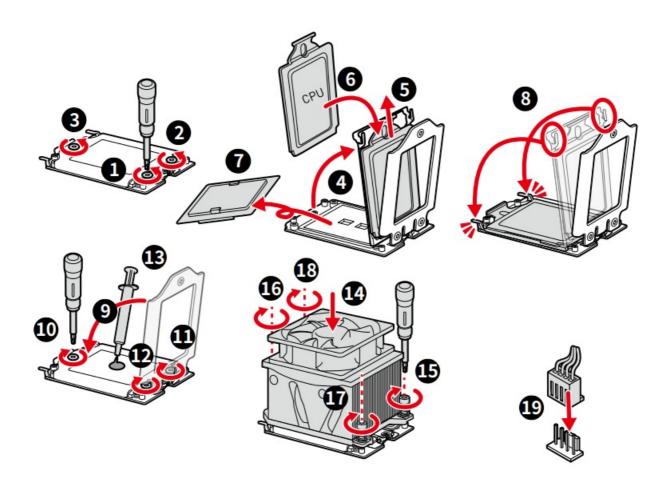

Connectors, Jumpers and LED Indicators


Name	Description				
JMCIO1~3	MCIO 8i Connectors				
M2_1, M2_2	M.2 Slots (M Key, PCle 5.0 x4, 2280)				
PCIE_1, PCIE_2	PCIe Expansion Slots				
JPWR1~2	8-Pin ATX Power Connectors				
HDD_PWR1	8-Pin HDD BP Power Connector				
JATX1	4-Pin Power Connector				
JATX2	12-Pin Power Connector				
SYS_FAN1~6	Fan Connectors				
CPU_FAN1	CPU Pump Connector				
JFUSB1	USB 3.2 Gen 1 Header				
JFP1	Front Panel Header				
JTPM1	SPI TPM Header				
JGPIO1	GPIO Header				
JPMBUS1	PMBus Header				
JIPMB1	IPMB Header				
FBP_I2C_1, HP_I1	I2C Headers				
JCHASSIS1	Chassis Intrusion Header				
JCOM1~2	COM Port Headers				
BAT1	CMOS Battery				
JSPI_MUX1	BIOS select jumper (default pin 1-2, SYS BIOS ROM & control by BMC)				
JREADY_SW1	BMC ready jumper (default pin 1-2)				
JRTC_CLR1	CMOS clear jumper (default pin 1-2, normal)				
JFORCE_SW1	CPLD power-on jumper (default pin 1-2, normal)				
JMCIO_SMBUS_SW1	JMCIO2 /3 SMBUS to CPU HP SMBUS/SGPIO (default pin 1-2)				
JSATA_NVME_SW1	JMCIO2 SATA/ NVMe signal select jumper (default pin 1-2, SATA)				
JSATA_NVME_SW2	JMCIO3 SATA/ NVMe signal select jumper (default pin 1-2, SATA)				
LED14	BMC Heartbeat LED				

The server board supports DDR5 RDIMMs with memory speeds up to 4800 MT/s (1DPC

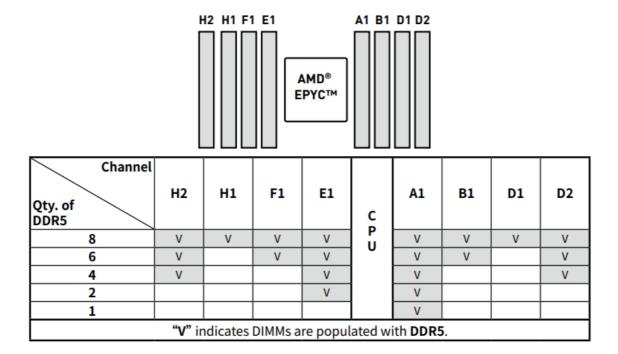

Important There should be at least one DDR5 DIMM populated.

Connecting the Power Connectors

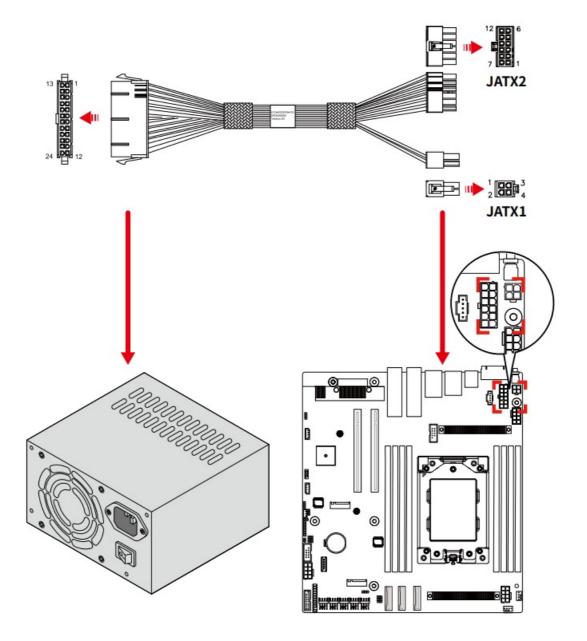

Documents / Resources



msi D4040 CPU Single AMD EPYC 8004 Series Processors [pdf] User Guide S3672X1, D4040 CPU Single AMD EPYC 8004 Series Processors, D4040, CPU Single AMD EPYC 8004 Series Processors, Single AMD EPYC 8004 Series Processors, AMD EPYC 8004 Series Processors, 8004 Series Processors, Processors

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.