




Muhub Automatic Pet Dryer Box for Cats and Puppy Instruction Manual

[Home](#) » [Muhub](#) » Muhub Automatic Pet Dryer Box for Cats and Puppy Instruction Manual 

Contents

- [1 Muhub Automatic Pet Dryer Box for Cats and Puppy](#)
- [2 Usage Instructions](#)
 - [2.1 Warnings](#)
 - [2.2 Safety Precautions](#)
 - [2.2.1 Instruction Manual](#)
 - [2.2.2 product presentation](#)
 - [2.2.3 Usage Instructions](#)
 - [2.2.4 Product Descriptions](#)
 - [2.2.5 Panel instructions](#)
 - [2.2.6 Safety Warning and Precaution](#)
 - [2.2.7 The Following Strictly Prohibited](#)
 - [2.2.8 Common Faults and Troubleshoot ing Methods\](#)
 - [2.2.9 Warranty Service Card](#)
 - [2.3 Documents / Resources](#)
 - [2.3.1 References](#)
 - [2.4 Related Posts](#)

Muhub

Muhub Automatic Pet Dryer Box for Cats and Puppy



Specifications

- Product Name: Pet Hair Dryer
- Category: Heating Appliances
- Power Rating: High-power electrical device
- Socket Requirement: Separate 10A or higher rated socket with effective grounding

Usage Instructions

Warnings

To avoid injuries caused by misuse, please carefully read the user manual before using this product and strictly follow the intended use specified in the manual. The Safety Precautions section contains important information that will allow you to use the product safely and prevent personal injury or property damage to yourself or others. After reading it, keep it properly stored for easy reference by all users of this product.

Safety Precautions

1. Ensure that the socket used for the pet hair dryer is a separate 10A or higher rated socket with effective grounding.
2. Do not use a flexible cord with a movable socket or share the socket with other electrical appliances.
3. Do not operate the pet hair dryer with an external timer or independent remote control system.
4. If the power cord is damaged, it must be replaced by a professional from the manufacturer, their service department, or a similar department to avoid any danger.
5. Avoid pulling or straining the cord along sharp objects or sharp edges. Keep it away from heat sources and moisture. Do not insert any foreign objects, such as metal, into the ventilation holes, as this may cause damage or electric shock hazards.
6. In case of power cord or plug damage, or if the pet hair dryer malfunctions, it is essential to stop using it immediately to avoid any danger. Please send the product to an authorized service center, the manufacturer's service department, or a similar professional for repair or replacement.
7. Always unplug the power cord before moving the pet hair dryer.
Do not immerse the power cord, plug, or pet hair dryer in water or any other liquids to prevent electric shock hazards.
8. Do not place any objects on top of the pet hair dryer while it is in operation. Do not cover or block the dryer's heat vents to prevent fire hazards.

Instruction Manual

The appearance of this product is subject to the actual object.

Before using the pet hair dryer product, please read the “User Manual” carefully and keep it properly.

Dear User:


- Thank you for choosing our product.
- By choosing the pet hair dryer, you are providing your beloved pet with a better quality of life. Welcome to our family! Our company has always adhered to the business philosophy of “Creating excellent products, serving the community,” and we strive for high-tech,
- high-quality development while implementing modern management practices. We are committed to providing first-class products and high-quality services to our customers for the long term. We firmly believe that our products will bring you a wonderful experience.


Please kindly get noticed!

Please read the “User Manual” carefully and keep it properly before installing and using this product.

- The company reserves the right to change product design, configuration, and specifications without prior notice.
- In case of any discrepancies, errors, or printing issues in this manual, the company holds the final interpretation rights.
- Due to continuous product improvements, please refer to the actual product if it differs from the description in this manual.
- This manual serves as a general guide, and the actual product functionalities may vary.

product presentation

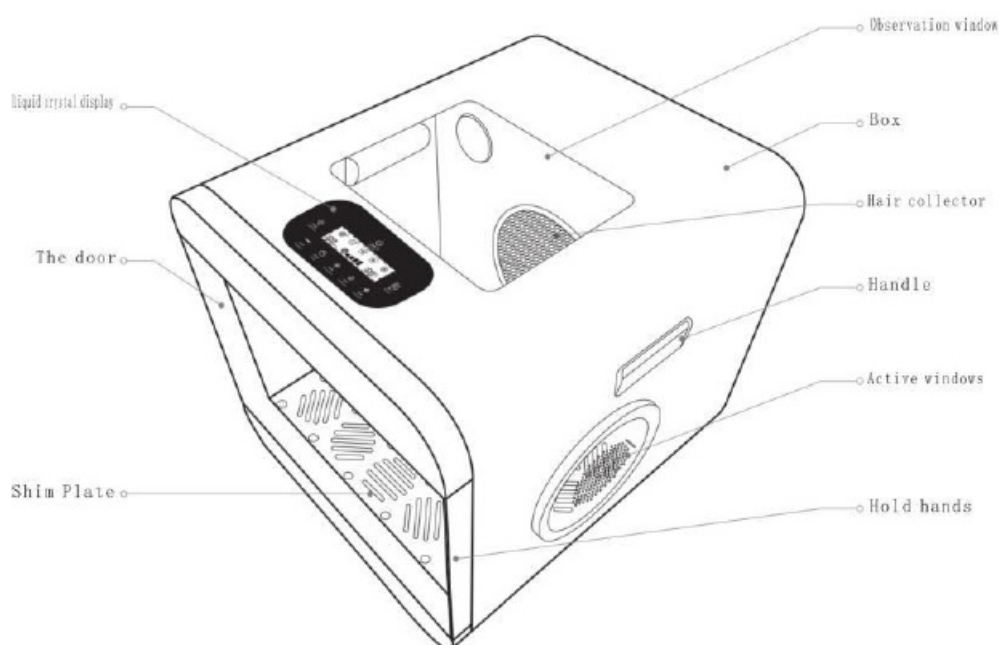

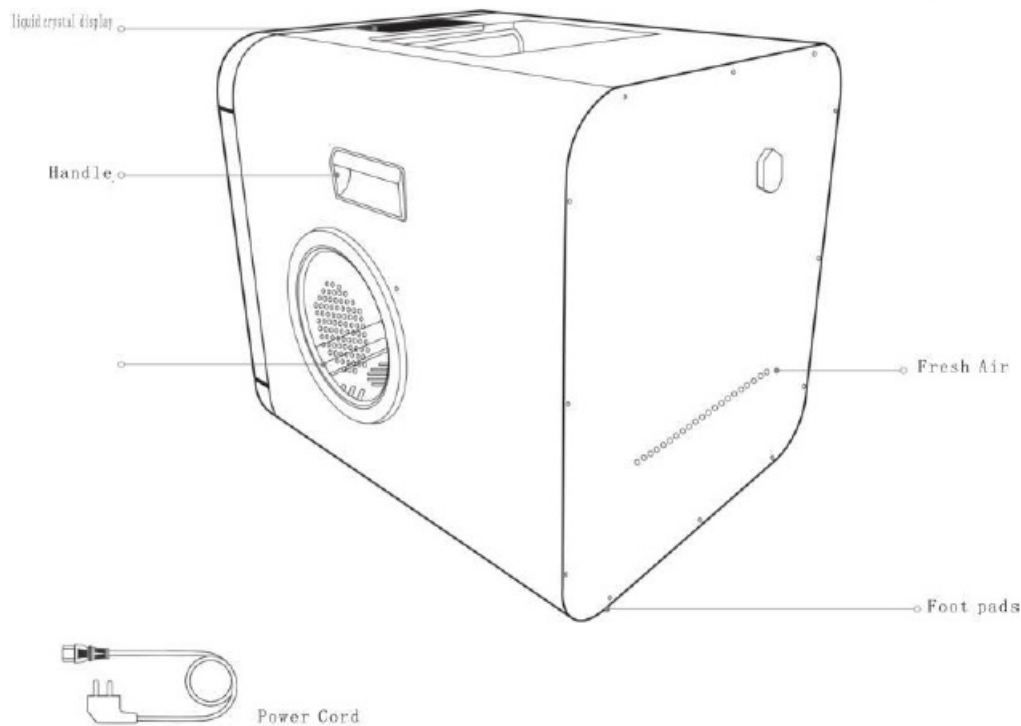

Note

In order to provide a better use experience, we will improve and upgrade our products from time to time. The product pictures displayed are provided for reference only. The actual product may be omitted with the picture on the packaging box have different. If there is any difference, please refer to the actual product.

Usage Instructions

Warnings To avoid injuries caused by misuse, please carefully read the user manual before using this product and strictly follow the intended use specified in the manual.

The “Safety Precautions” section contains important information that will allow you to use the product safely and prevent personal injury or property damage to yourself or others .After reading it, keep it properly stored for easy reference by all users of this product.

1. This product belongs to the category of heating appliances. Please use a separate 10A or higher rated socket Before use, ensure that the socket has effective grounding.
2. The pet hair dryer is a high-power electrical device. It is strictly prohibited to use a flexible cord with a movable socket and share the socket with other electrical appliances.
3. This appliance should not be operated with an external timer or independent remote control system.
4. If the power cord is damaged, it must be replaced by a professional from the manufacturer, their service department, or a similar department to avoid any danger.
5. . Do not pull or strain the cord along sharp objects or sharp edges. Keep it away from heat sources and moisture .Do not insert any foreign object s, such as metal, into the ventilation holes, as this may cause damage or electric shock hazards.
6. In case of power cord or plug damage, or if the pet hair dryer malfunctions, it is essential to stop using it immediately to avoid any danger. Please send the product to an authorized service center , the manufacturer ‘s service department , or a similar professional for repair or replacement
7. Do not pull the power cord. Before moving the pet hair dryer, always unplug the power cord. Do not immerse the power cord , plug , or pet hair dryer in water or any other liquids to prevent electric shock hazards.
8. Do not place any objects on top of the pet hair dryer while it is in operation. Do not cover or block the dryer’s

heat vents to prevent fire hazards.

9. Do not place flammable materials such as paper or plastics in the pet hair dryer box or store other items inside it, as this may cause a fire.
10. Do not heat any sealed container in the pet hair dryer, as it may cause an explosion.
11. Keep the pet hair dryer away from flammable materials or heat sources. Be cautious of curtains or similar items to prevent fire hazards.
12. Place the pet hair dryer in a dry environment and do not use it outdoors.
13. Use the pet hair dryer on a heat-insulated flat surface and maintain a minimum distance of 15cm around the dryer. Note: There is a safety barrier component on the back of the pet hair dryer to prevent contact with walls or other objects. Keep a safe distance.
14. To prevent furniture from being heated and potential fire hazards caused by oil fume during product operation, maintain a certain distance between the product and walls, cabinets, and flammable materials.
15. It is strictly prohibited for children or individuals with physical, sensory, or mental impairments, or lack of relevant experience and knowledge, to operate this product alone. If there are children nearby, extra caution must be exercised when using this product. Do not place the product within reach of children.
16. Do not damage, excessively bend, pull, or twist the power cord. Do not place heavy objects on the power cord or pinch it.
17. When the pet hair dryer is not in use or for an extended period, unplug the power plug from the socket to avoid the risk of electric shock or leakage due to insulation aging.
18. Use the accompanying accessories provided by the manufacturer correctly. Do not use nonmanufacturer-provided accessories to prevent fire or injury caused by human error.
19. Before cleaning, moving, or inspecting the pet hair dryer, unplug the power cord. Wait for the unit to cool down before proceeding.
20. When using this product, maintain a distance of at least 30cm from other products.
21. This product is only intended for household use. Do not use this product for any other purposes.

Product Descriptions

Main Features

1. Adopt high-quality acrylic transparent panel to be more clear and transparent to avoid the risk of glass breakage.
2. Fresh air system, take the initiative to supplement the fresh air, to achieve the internal and external double circulation, so that the air in the box is no longer stuffy.
3. Speed control mode, a variety of functional modes are free to choose and change, so that the use of more convenient.
4. Cat nest function, let pets enjoy a comfortable life warm in winter and cool in summer, the machine is not idle in the four seasons 5.65 liters of large capacity design, pet activities are more free
5. °C accurate temperature control, so that the box temperature is more stable, more comfortable, without sudden cooling and sudden heat; 16~40°C flexible temperature control.
6. The machine working time is 5~120 minutes
7. Operating noise is as low as 40 decibels, quieter
8. Child lock function, to avoid accidental touch at work
9. Control panel operates the navigation function, and the key light prompt, the operation is easier

Additional features (different options according to specific model)

1. Built-in anion, fresher the air; reduce static electricity, soft and easy to manage
2. Built-in living oxygen generator can reduce the breeding of bacteria. After sterilization, start the removal function to quickly reduce the residue of ozone.
3. remote control function, make the use of more convenient.

Product Work Principles

This product is equipped with an electric heater with a thermal protection device, a fan, temperature control, and an ultraviolet lamp (depending on the specific Model).

By using a heater and a fan, the hot air blown out, creating a thermal circulation to achieve a low-temperature drying effect. The temperature and time can be adjusted through the controller (for models with temperature control capability), while mechanical models have a fixed temperature control and cannot be adjusted.

Product Technological Parameters

Model	Control mode	Color	Rated power	Time adjustment	Temperature adjustment	Air Volume Adjustment	Display mode	Speed control mode	Lights	Anions	Purify odors	Remote control
XM008	Intelligent control	White/Grey	1200W	yes	yes	yes	LCD screen	yes	yes	yes		
XM008A	Intelligent control	White/Grey	1200W	yes	yes	yes	LCD screen	yes	yes	yes	yes	
XM008AR	Intelligent control	White/Grey	1200W	yes	yes	yes	LCD screen	yes	yes	yes	yes	yes

Product Executive Standards

GB 4343.1-2018 GB4706.1-2005 GB4706.15-2008 GB17625.1-2012

Product Operation Instruction

1. Intelligent control model operating steps

 
operating steps

 
1. Place the pet hair dryer on the flat ground, plug in the power supply, and the “one-key switch” button light in the control panel is flashing
2. Click the “one-button switch” button to start the machine. The default setting temperature of the machine is 32°C, the air volume is 4 gear, and the time is 30 minutes
3. click the “time” button, and then click the “reduce” or “increase” button, set your required running time, when The interval adjustment range is 5-120 minutes, one gear for every 5 minutes. If the time is reset, the countdown will resume at the latest time. After the parameter is set for more than 3 seconds, the horn “clicks” loudly and runs according to the new time parameter
4. Click the “Wind Speed” button, then click the “Reduce” or “increase” button to set the required air volume. It is set to 1-4 and 4 is the maximum wind speed; After the parameter exceeds 3 seconds, the horn “clicks” and runs according to the new time parameter
5. Click the “Temperature” button, and then click the “Reduce” or “Increase” button to set the required operating temperature. The temperature setting range is 16~40°C, and the system will control the temperature within 1°C

of the set temperature value. After the parameter is set for more than 3 seconds, the horn “clicks” loudly and runs according to the new time parameter

6. click the “lighting” button, the light start or off, start by default
7. Function mode selection key (click the key corresponding mode function flash display, key light also shine, shine and display flash display time in the same synchronization. Fast-comfortable-summer cool nest-winter warm nest-clean taste sterilization) cycle display. After the selected mode exceeds 3 seconds, the horn “tick” a sound, ending the original state, and run again according to the new state parameters.
8. Click the “Clean taste sterilization” button, start the disinfection program, and start the default off (Note: pets cannot start the disinfection function in the box; this function is different from the specific product model)
9. child lock: increase and reduce for the child lock key, at the same time press increase and reduce key key function lock, at the same time “increase” and “reduce” key light, at this time press any key no function.
10. Unlock: increase and reduce to unlock the key, at the same time, long press to increase and reduce the key button for 2 seconds to unlock the function, at the same time, “increase” and “reduce” the key light out, then the key to restore the function.
11. In the process of work, you need to shut down, but long press the “one key to open, off” button for 2 seconds, and the machine will automatically shut down.
12. After the machine is shut down, the fan has automatic scanning function. After shutdown, the delay is 30 seconds to drain the hot air.

Panel instructions

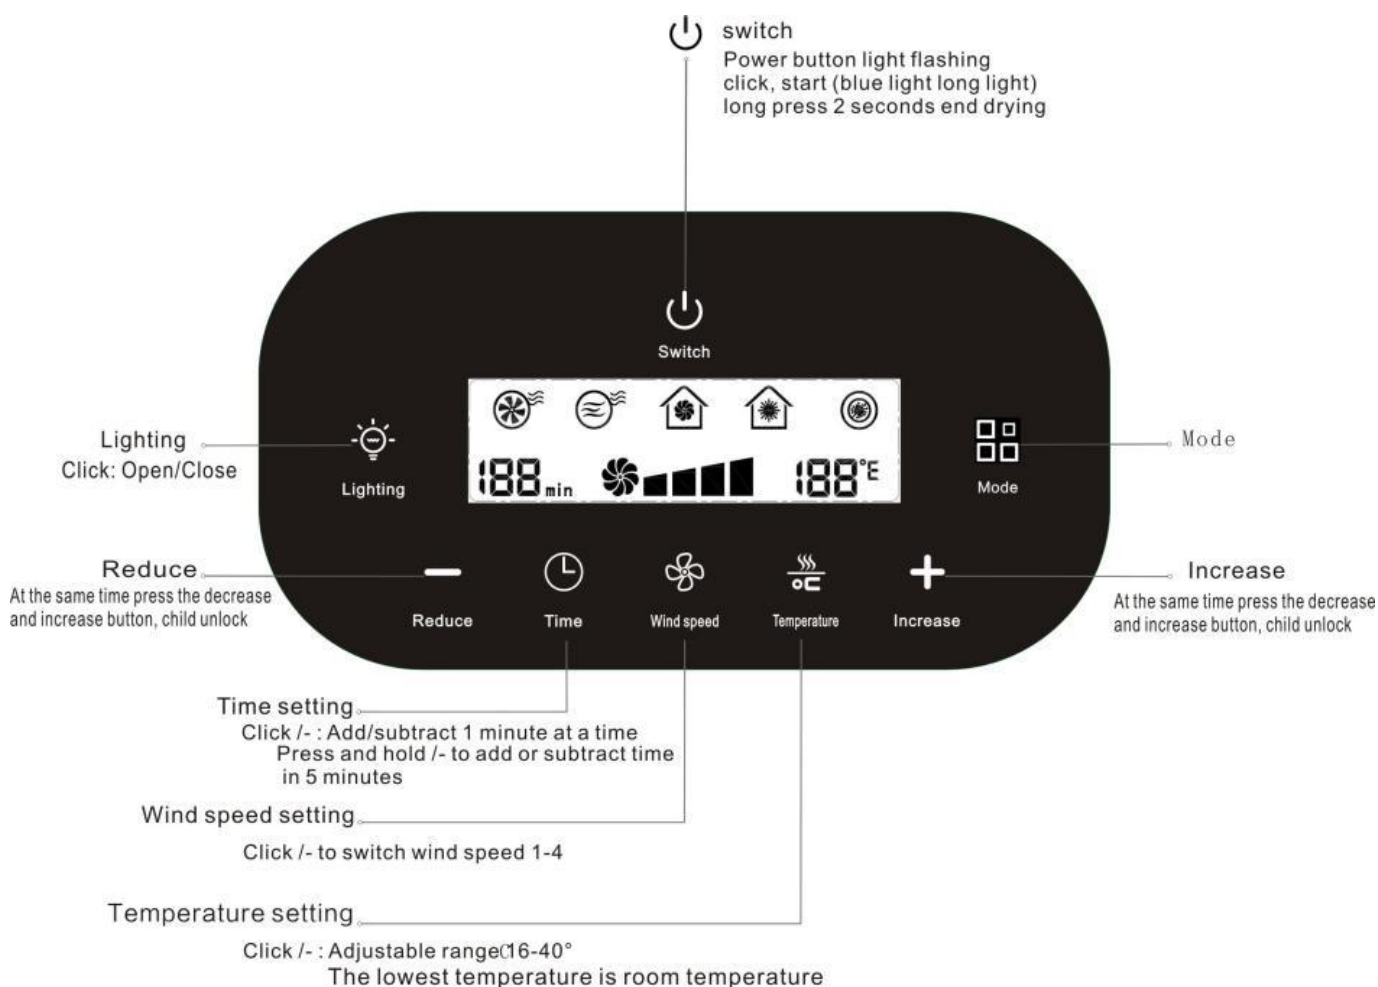

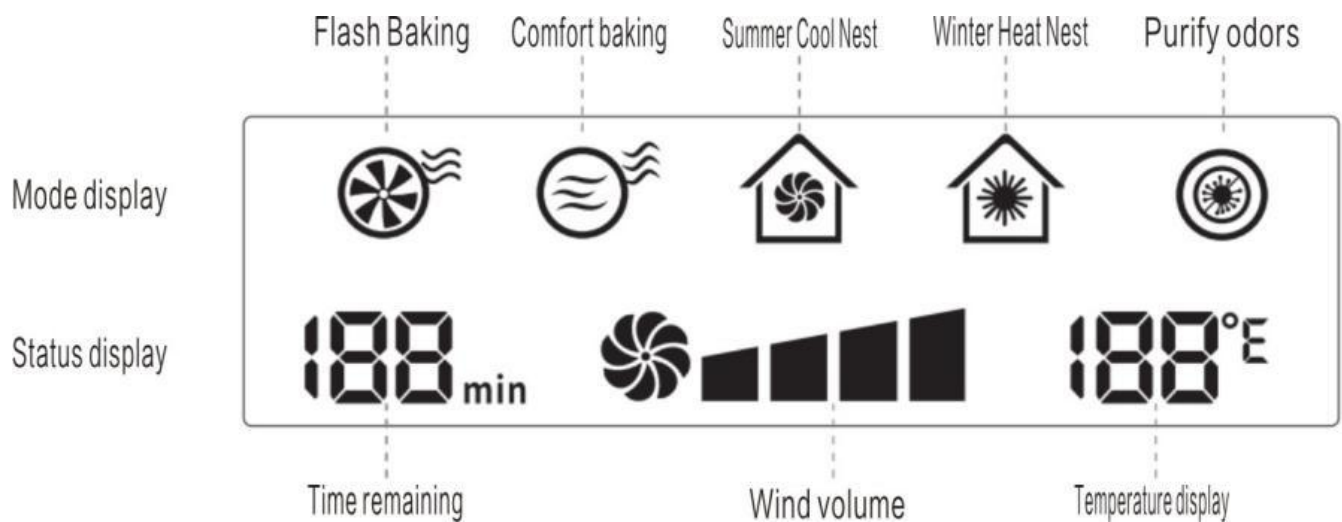

Safety Warning and Precaution

1. It is strictly prohibited to place a freshly bat had pet on top of the pet hair dryer. This can cause water to enter the machine, leading to electric leakage and da mage. Any consequences resulting from such actions are the responsibility of the individual.
2. The disinfection function of the pet hair dryer will automatically shut off after 20 minutes.
3. When there are individuals with limited mobility, children, animals near the machine without proper supervision by an adult, it is advisable t o avoid using this product to prevent electric leakage or other accidents.
4. This product is intended for household use only .Any commercial use, improper use, or failure to follow the instructions in this manual will not be covered under the company's warranty, and the company will not be held responsible for any resulting faults or damages.
5. After opening the packaging, please immediately dispose of the plastic bag to prevent children from playing with it and posing a suffocate ion hazard.
6. Before use, remove all packaging materials .Failure to do so may result in fire or burns during operation.
7. Ensure that the power cord does not come into contact with sharp objects, edges, frayed edges, or surfaces with high temperatures to prevent electric lea kagu, electric shock, or fire.
8. Before connecting to the power supply, check if the voltage indicated on the product matches the voltage of the power source to prevent component damage or fire.
9. Use a dedicated grounded outlet rated at 10A or above. Ensure that the plug is fully inserted into the socket to prevent poor contact, overheating of components, short circuits, or fire hazards.
10. Do not operate this product on flammable mat serials such as carpets, towels, plastic, or paper to prevent fire hazards.
11. Do not place this product on an unstable, damp, high-temperature, slippery, or heat-sensitive surface to avoid electric shock, fire, slip ping, accidents, and property damage.
12. Do not use this product in an environment with gas leaks or electrical leakage, as it may cause fire and electric shock.
13. Do not use this product under or near flammable materials such as curtains or closets to prevent fire hazard s.
14. Do not use this pro duct without supervision.
15. Ensure that the accessories are dry before starting to use them.
16. When using the product, leave sufficient space around it and maintain a distance of at least 10 centimeters from surrounding objects to ensure proper heat dissipation and prevent high temperatures from affecting the performance of the product .

17. To prevent electric shock or fire, ensure that the power is disconnected when the product is not in use, being moved, or being cleaned.
18. Do not use accessories other than those provided with this product to avoid accidents and injuries.
19. Do not unplug the power plug with wet hands or clean the socket with a wet cloth to prevent electric leakage.

The Following Strictly Prohibited

1. Do not use the pet hair dryer if there is obvious damage to the hair dryer, power cord, or power plug.
2. Do not attempt to troubleshoot or modify the structure of the pet hair dryer. When the power cord is damaged, do not attempt to replace it yourself or ask a non-professional to do so.
3. Do not use chemicals or water to clean the pet hair dryer.
3. Do not move the pet hair dryer while it is plug in.
4. To prevent the risk of electric shock, do not immerse the pet hair dry in water.
5. Do not place flammable or explosive items near the pet hair dryer while it is in operation.

Common Faults and Troubleshooting Methods\

fault phenomenon	Possible cause	processing method
The indicator light is not on	Power socket is not powered on or in poor contact	Check and maintain the power supply equipment
	The power supply voltage is not consistent with the product rated voltage	
	The power cord is not plugged in	
Don't blow hot air	The Temperature key is not set	Check the use method and set the reasonable temperature
	The set temperature is below the ambient temperature	
No wind, no heat	overtemperature protection	Contact our company repair site or dealer
The lighting is not bright	Lighting can be turned on with a strong press	Reset the disinfection function
	The lighting is damaged	Contact our company repair site or dealer

Warning: It is strictly prohibited to dismantle, repair and transform the machine yourself

1. Before cleaning, make sure to unplug the power plug and let it cool down.
2. After work, wipe it dry with a soft cotton cloth. Avoid using corrosive detergents, chemical cleaning agents, or hard metal wires for cleaning as they can damage the surface of the machine, affect its service life, and pose safety risks.
3. If the machine is not used for a long time, please clean it thoroughly and store it in a clean and dry place to prevent moisture from affecting its performance.
4. In case of power cord damage, for safety reasons, it must be replaced by a professional from the manufacturer, their repair department, or a similar authorized service provider.

After-Sale Service

Please carefully read the user manual before using it for the first time. It will guide you on how to use and maintain the product safely and , to avoid any unnecessary loss or damage.

If the product experiences any malfunction or quality issues under normal operation as per the user manual, our company provides warranty services .Free warranty service is available for one year, and paid repair service is provided after the warranty period .In case of a malfunction (nonhuman-induced) in the pet hair dryer, it must be repaired by a professional repair shop or manufacturer's personnel. If you have any concerns or questions, please contact our customer service department.

The following situations are not covered by the warranty or replacement:

1. Incorrect filling of product model, purchase address, and purchase date information.
2. Product malfunctions and damages caused by not following the user manual.
3. Product malfunctions and damages caused by collision, dropping, water immersion, etc.
4. Product malfunctions and damages caused by natural disasters such as fire, earthquake, lightning, typhoon, flood, etc.
5. Damages caused by unauthorized repairs, which will terminate the warranty automatically.

Warranty Service Card

(Please keep it for your own records .)

Name			Phone	
Purchase Location/Shop Name		e	Product Model	
Warranty or Replacement Reason	Warranty Reason (Replace / Repair)			Warranty Date
Detailed Fault Reason				

Thank you again for choosing our product.



Documents / Resources

