


**Contents** [ [hide](#) ]

- [1 MULIN WC010A Multi-Functional Music Player](#)
- [2 Safety specification](#)
- [3 Specification parameter](#)
- [4 Warranty](#)
- [5 FCC Warning](#)
- [6 Troubleshooting](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)



## MULIN WC010A Multi-Functional Music Player

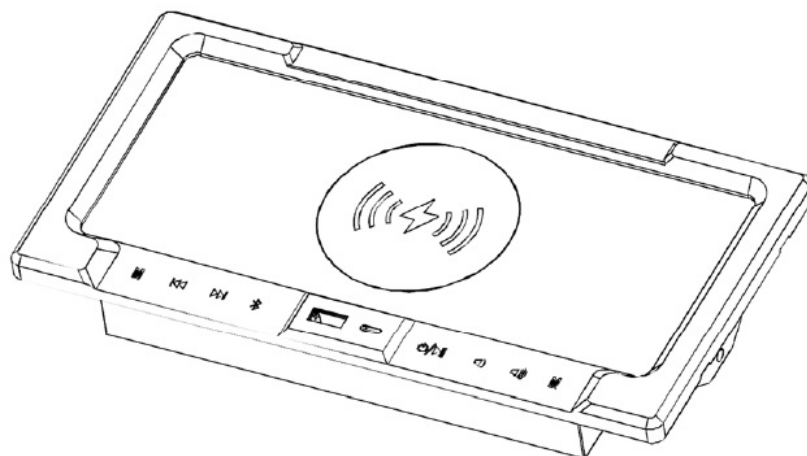

### Specifications:

- Input parameter: DC 24V 2A

- Wired output:
  - USB-A: 5V 2A MAX
  - Type-C: 5V 2A MAX
  - USB A & C: 5V 2A MAX
- Wireless output power: 5W MAX
- USB-A output power: 10W MAX
- Type-C output power: 10W MAX
- Total output power: 15W MAX

### **Basic Operation:**

Connect the power adapter by following these steps:

1. Connect the DC plug of the adapter to the power plug of the product.
2. Connect the AC plug of the adapter to a 110V-240V AC power source.
3. Ensure your hands are dry during this process.
4. Disconnect the product from the power supply if not in use for an extended period.
5. Avoid pulling the power cord to remove the power supply.

### **Bluetooth Mode:**

To use Bluetooth mode:

1. Turn on the player.
2. Open the Bluetooth pairing interface on your phone and search for “Mulin Audio WC010A” for pairing.
3. Once paired, play songs through your phone’s Bluetooth connection.
4. Note: Bluetooth only supports a 1-to-1 connection.

### **Incoming Calls:**

During music playback, the player will pause for incoming calls without playing the phone ringtone or call content.

### **Vibration Mode:**

You can enjoy Vibroacoustic Therapy by turning on rhythm mode during music playback. For a massage experience, select vibration massage mode on the device.

## **Safety specification**

- Please read the instructions before using this product
- Do not place this product in wet or near water.
- Do not place this product in a fire or near a fire source.
- Connect all the wires before connecting the power supply
- This product is only applicable to an AC 110V-240V voltage environment, Please shut down before a power outage
- Do not expose this product to the sun or in a high-temperature environment lasting more than 35 °C
- Do not wipe this product with a wet towel
- Do not come into contact with chemicals
- Please take this product to a professional repair; do not repair it yourself.
- Please do not insert foreign matter into this product


## **Specification parameter**

- This product can charge mobile phones
- Input parameter DC 24V 2A
- Wired output
- (USB-A) 5V 2A MAX
- (Type-C) 5V 2A MAX
- (USB A & C) 5V 2A MAX
- Wireless output power 5 W MAX USB-A
- output power 10W MAX Type-C
- output power 10W MAX Total
- output power 15W MAX

## **Packing list**

- Multi-function music player 1 pc
- (without speakers)1 pc
- Mounting base1 pc
- Extension cable 1 pc
- Manual instruction 1 pc

## Equipment overview

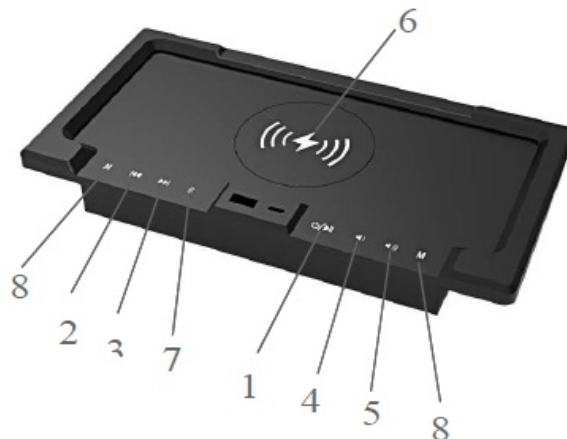

Number	Design	Function
1		Power on/off (long touch for 3 seconds) Play/Pause(touch)
2		Previous song (Touch to switch)
3		Next song (Touch to switch)
4		Volume reduction (Touch to decrease, long touch to decrease continuously)
5		Volume up (Touch to increase, long touch to increase continuously)
6		Wireless charging area
7		Bluetooth networking, master/slave switchover
8		Rhythm vibration (Green) massage vibration (Red ) Vibration off (Off)

## Basic operation

- Connect the power adapter.
  - Connect the DC plug of the adaptor to the power plug of this product, and then connect the AC plug of the adaptor to the 110V-240V AC power.
1. When performing the above operations, ensure that your hands are dry.
  2. If this product is not used for a long time, the product should be disconnected from the power supply.
  3. Do not pull the power cord to remove the power supply.

## Bluetooth mode

After the player is turned on, open the Bluetooth pairing interface of the phone and search for Mulin Audio WC010A for pairing. Once paired, the song can be played

through the phone's Bluetooth.

**Attention:**

Bluetooth only supports 1-to-1 connections. When a device connects to this product through Bluetooth, other devices cannot be connected.

**Incoming calls**

When the music is playing, the player will pause the music playback when there is an incoming call, but will not play the phone ring tone and call content.

**Vibration mode**

When the music is playing, you can turn on the rhythm mode to enjoy the Vibroacoustic Therapy. To enjoy to massage experience, you can choose "vibration massage" mode when turning on the device.

**Warranty**

The warranty period of this product is 12 months from the date of purchase.

Accessing products that are not compatible with this product will result in you losing your warranty rights. This product is damaged due to personal negligence and is not covered by warranty

**FCC Warning**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Suppose this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. In that case, the

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

## Troubleshooting

- Before calling for service on this product, please review the following answers to find the possible cause of the problem you are experiencing. Some simple checks or minimal adjustments you can make may solve the problem and restore normal operation. If you have any questions about certain inspection points or if the problem cannot be solved, please leave it to professional maintenance personnel for repair.

Problem	Possible causes and solutions
Unable to boot	<ol style="list-style-type: none"><li>1. The power supply is not connected</li><li>2. The cable is disconnected</li><li>3. Equipment damaged, please contact the dealer to replace</li></ol>
No response to touch	<ol style="list-style-type: none"><li>1. Reconnect 15 seconds after disconnecting the power and try again</li><li>2. The equipment is damaged. Please contact the dealer to replace</li></ol>

Bluetooth connection failure	<ol style="list-style-type: none"> <li>1. Shut down other devices that are paired with it and reconnect them</li> <li>2. Restart the product and reconnect it</li> <li>3. Please do not connect more than 8 meters away from the product</li> <li>4. Please do not attempt to connect the product through obstacles</li> <li>5. The distance between the master and the slave should not be greater than 20 m</li> </ol>
No sound	<ol style="list-style-type: none"> <li>1. The volume has been adjusted to the minimum level. Please increase the volume and try again.</li> <li>2. The wire is not connected properly. Please reconnect the wire and try again</li> <li>3. The speakers are damaged. Please contact the dealer to replace them</li> </ol>
USB/TYPE-C cannot be charged	<ol style="list-style-type: none"> <li>1. The port is not properly connected. Reinsert the port and try again</li> <li>2. The interface is damaged., Please contact the dealer to replace it</li> </ol>

The serial number of this product is affixed to the last page of the manual. If you have any other questions, please contact us by email:

- China
- [groupsales@mlmotor.cn](mailto:groupsales@mlmotor.cn)
- America
- [Moncef@mulinelectric.com](mailto:Moncef@mulinelectric.com)
- Vietnam
- [1072490136@qq.com](mailto:1072490136@qq.com)

## FAQs


**Q: What is the warranty period for this product?**

A: The warranty period is 12 months from the date of purchase. Ensure compatibility with accessories to maintain warranty rights.

**Q: Can multiple devices connect to the product via Bluetooth simultaneously?**


A: No, Bluetooth mode only supports a 1-to-1 connection. When one device is connected, others cannot connect simultaneously.

## Documents / Resources

	<a href="#">MULIN WC010A Multi Functional Music Player [pdf]</a> Instructions WC010A, WC010A Multi Functional Music Player, Multi Functional Music Player, Music Player
---	--

## References

- [User Manual](#)

 MULIN, Multi Functional Music Player, Music Player, WC010A, WC010A Multi Functional Music

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name



Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.