

MULTIPLEX Trinity F9 PLUS Mapping Drone User Manual

Home » MULTIPLEX » MULTIPLEX Trinity F9 PLUS Mapping Drone User Manual



MULTIPLEX Trinity F9 PLUS Mapping Drone User Manual



Contents

- 1 Installation Information
- 2 Overview
- 3 Technical

Documentation

- 4 General references
- **5 Documents / Resources**
- **6 Related Posts**

Installation Information

The modular transceiver WSRX 2.4GHz is only approved for use by the grantee in its own products and not intended for sale to third parties.

WSRX 2.4GHz meets the integration instructions regarding FCC 15.212 The whole Trinity assembly instructions are described in the TRINITY installation manual. Contained FCC ID: 2APABWSRX



Overview

TRINITY Communication Link

The communication with the UAV Trinity is ensured by two links:

- 1. Q Base, a 915MHz flight data link. A downlink sends telemetry data from the Trinity to Q Base ground control and an uplink sends commands to the Trinity Q base air control.
- 2. The second link is a 2.4 GHz RC link between the RC-radio Cockpit SX and the Trinity. It is used as an uplink for control commands and as a downlink sending telemetry data from the Trinity to the RC-radio.

It is possible to continue the mission even though one link is lost. In case of a loss of both links the Trinity flies to the link reestablishing waypoint and tries to reestablish the connection. If both connections cannot be reestablished the Trinity will land automatically after the loiter time that was set in Q Base expired. The automatic landing might damage the Trinity.

The 2.4GHz M-Link RC control System consist of the following parts: **WSRX module (Air Modem)** 2.4GHz transceiver module for the integration in the UAV Trinity

Cockpit SX Trinity

2.4GHz RC-radio for remote control of models

Technical Data WSRX module:

Operation frequency: 2400 – 2483.5MHz **Modulation / channels:** GFSK / 39 (AFHSS)

Output Power: <20dBm EIRP Antenna: external wire antenna

FCC Warning Statements


This device complies with part 15 of the FFC rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Block Diagram WSRX M-Link 2.4GHz for UAV Trinity

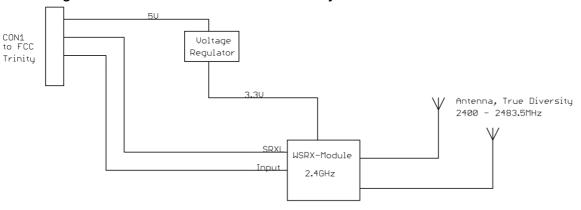


SRXL: Serial RC-Channel Output Input: Telemetry Data

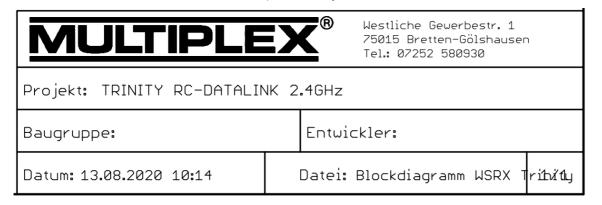

Technical Documentation

 Antenna description



The RF-module WSRX is a true diversity transceiver.

The maximum output power is 20dBm EIRP.

Its two lambda/4 internal wire antennas are fixed to the PCB board with a unique connector.




Mounting the module refer to this document.

Expert from Trinity Assembly Specification V2





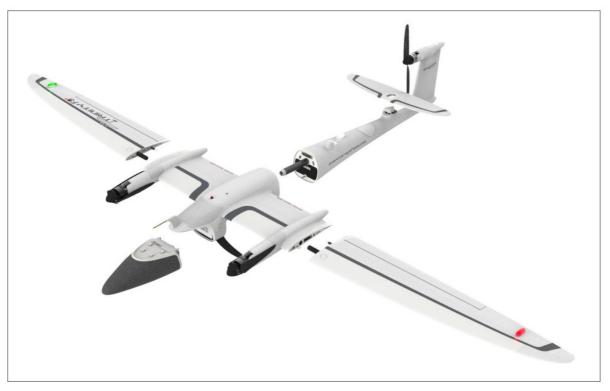

Release date: 2019-08-20

General references


- This document may not be handed on to any third party without the explicit clearance from MULTIPLEX.
- his specification is written and designated for skilled users with substantial technical capabilities.
- Indications of horizontal, vertical or longitudinal position are always meant in the direction of flight at normal attitude.
- Item descriptions in the text are written in bold italic letters.
- The pictures do not necessarily show the latest version of parts and tools. This does not affect the technical principal of the assembling procedure.
- All D-Sub-connectors of the harnesses are installed with the wide side of the connector on top, the narrow side
 on the bottom.
- Persons assembling the Trinity have to wear antistatic shoes.
- All finished Trinity Parts need at least 24h for evaporation. Do not store the finished parts in the transport cases before, to avoid deposition of CA fumes on surfaces.
- Consumables (e.g. CA glue, LOCTITE) may not be used after expiration date.

Installing Receiver and Magnetometer


Part #	Item numbe	Description German	Description English	Quantity
1	1-00391	Palatine Expunger Telemetry Trinity	Receiver Telemetry Board	1
2	1-01157	Magnetometer	Magnetometer	1

- 1. Install the Receiver Telemetry Board (#1) at the innermost position of the designated cavity with hot melt adhesive (see red arrow).
- 2. Lay the antennas in the slot and the Antenna Tube 60mm. Fasten the antennas with small parts of thin adhesive tape or hot melt adhesive where necessary to keep them in place. pic 10
- 3. Install the Magnetometer (#2) in the designated cavity with hot melt adhesive. pic 20.

Installing Receiver and Magnetometer

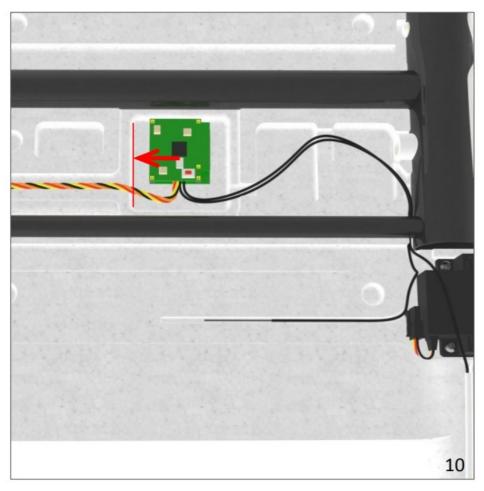

The Two Antenna wires are mounted inside the wing in a 90° angle.

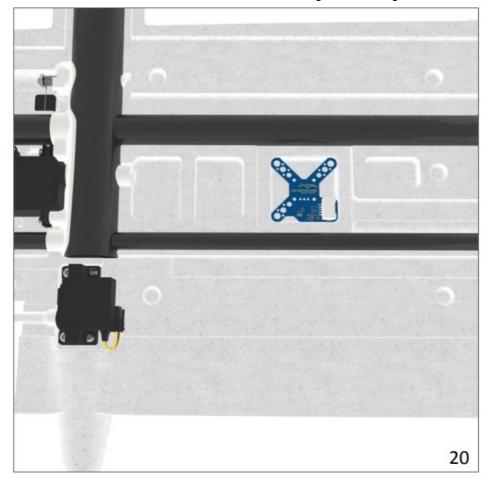

Documents / Resources



MULTIPLEX Trinity F9 PLUS Mapping Drone [pdf] User Manual WSRX, 2APABWSRX, Trinity F9 PLUS, Mapping Drone, Trinity F9 PLUS Mapping Drone, Dron

Manuals+,