




MUNBYN IDS002 Document Scanner User Manual

[Home](#) » [MUNBYN](#) » MUNBYN IDS002 Document Scanner User Manual 

MUNBYN

IDS002 Document Scanner
User Manual
1.00

Version History

Date	By	Changes
1/4/2021	Chuy	· Initial Version

Contents

- [1 Product Introduction](#)
- [2 What's in the Box](#)
- [3 Product Overview](#)
- [4 Function Keys](#)
- [5 Display Interface](#)
- [6 Operating Instructions](#)
- [7 Scanned Files Previewing](#)
- [8 Menu Setting](#)
- [9 OCR Software Operation Guide](#)
- [10 Product Specification](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

Product Introduction

Thank you for choosing our portable scanner.

Our product will improve the quality of your scanning needs in your work and life. The excellent office scanner can easily scan high-quality documents.



Figure 1- 1 IDS002 Scanner

What's in the Box

When you receive the package, open and check the packing list in it.



Figure 1- 2 What's in the Box

1. Scanner
2. USB Cable
3. Calibration Paper
4. Storage Bag
5. 16G SD Card (Inserted)
6. User Manual
7. Cleaning Cloth

Product Overview







 


Figure 1- 3 Overview

Function Keys

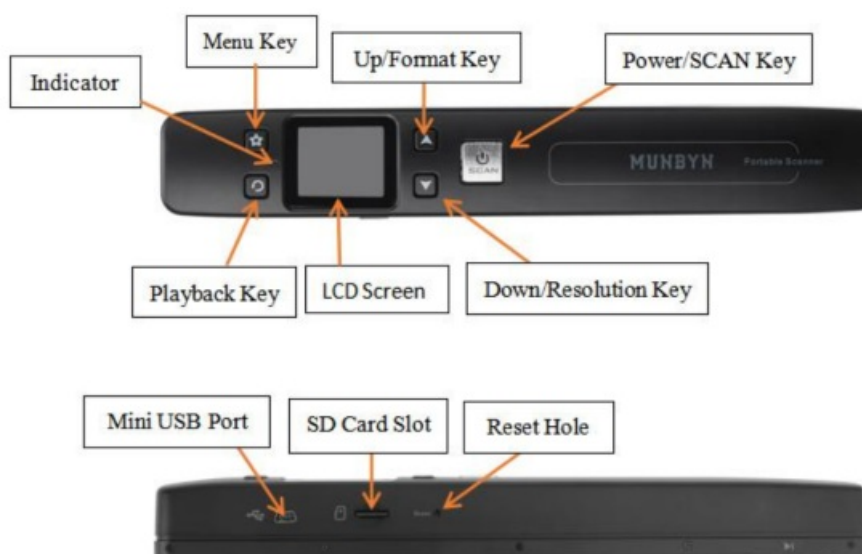Table 1- 1 Function Keys

1	Power/SCAN Key		<p>>Power On/Off: Press and hold this key for 3 seconds to turn power on or off.</p> <p>>In home page: press the button to start scanning, press the button again to finish scanning.</p> <p>>Press to return to home page.</p>
2	Menu Key		<p>>Enter setup mode.</p> <p>>In playback mode: enter the single file delete mode.</p> <p>>Zooming in under playback mode: press this button to shift the functions between LEFT/RIGHT and UP/Down.</p>
3	Playback Key		<p>>Enter playback mode.</p> <p>>Return to the previous page.</p> <p>>In setup mode: confirm your settings.</p>
4	Up/Format Key		<p>>Press the key to transform file format (PDF/JPEG), the icon if the mode will be displayed on the LCD screen.</p> <p>>In setup mode: move up the selection bar.</p> <p>>In playback mode: preview the former image.</p> <p>>Zooming in under playback mode: move to the upper/left portion of the image.</p>
	Down/ Resolution Key		<p>>Select Low(300dpi), High(600dpi) or Fine(1050dpi) scan quality in DPI, the icon of the quality will be displayed on the LCD screen.</p> <p>>In setup mode: move down the selection bar.</p> <p>> In playback mode: preview the latter image.</p> <p>>Zooming in under playback mode: mode to lower/right portion of the image.</p>
6	Reset Hole		Reset the scanner (Hardware reset).

Display Interface

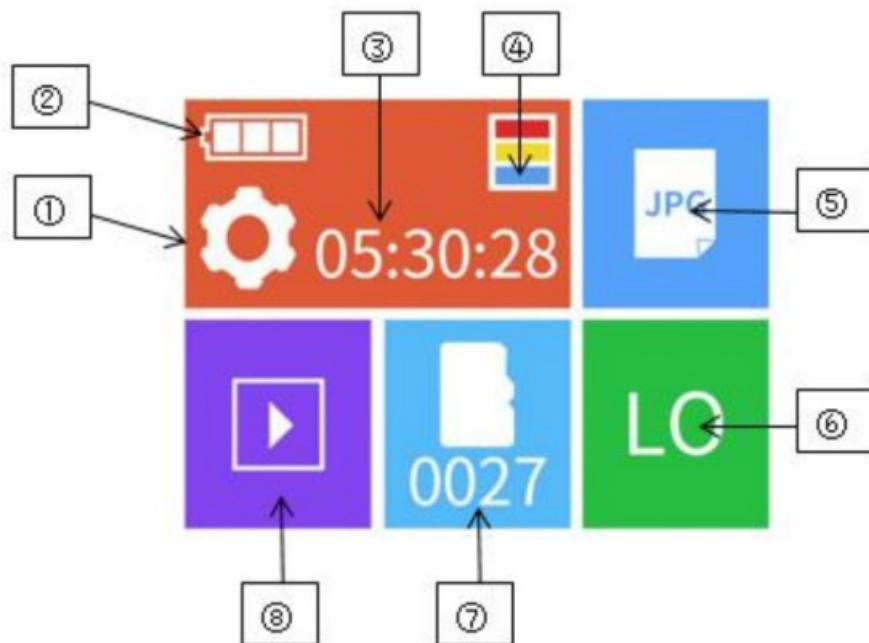


Figure 1- 4 Display Interface

1. Setting
2. Battery Display
3. Time Display
4. Color Mode/Mono Mode
5. JPG/PDF Document format saved after scanning
6. LO (LOW 300DPI) / HI (HIGH 600DPI) / FI (FINE 1050DPI)
7. The serial number of files in the inserted SD card
8. File View

Operating Instructions

2.1. Before Scanning

1. Make sure the device has enough power to turn on, if the device does not have power, please plug in the power cord to charge.

Note: After the device is plugged into the power cable, the device indicator turns red. After the device is fully charged, the device indicator turns green.



Figure 2- 1 Charging Device

2. Check that the SD card is inserted into the device, if no SD card is inserted into the device, please insert SD card into SD card slot.



Figure 2- 2 SD Card Slot

2.2. How to Start Scanning





1. Press the button  and hold for 3 seconds to turn on the scanner.
2. Press the button , select the DPI you want: LO (LOW 300DPI) / HI (HIGH 600DPI) / FI (FINE 1050DPI)
3. Press the button , select the document format you want: JPG / PDF
4. Put your target (document/photo/receipt/book) on a flat desk, placing the scanner on the position of the target you want, press the button  to start scanning, when the document icon is displayed on the LCD screen, slide the scanner over the target smoothly and slowly.



Figure 2- 3 Document Scanning Mode

5. Press the “SCAN” button to end scanning, then the device will automatically jump to the preview interface for 3 seconds, you can preview the scanned file for 3 seconds.



Notes:

- a. Scanning width: The maximum size of the scanned target is 8.27 inches. If the target exceeds this size, it is recommended that you perform segmented scanning reasonably.
- b. About the scanning method: You can scan vertically or horizontally, but scan vertically is recommended if you want to maintain a stable and detailed scanning effect.
- c. The scanning speed is a very critical part. Generally, it takes 3 seconds to scan an A4 paper-size document.
 - ① If the scanning speed is too fast, the scanner cannot recognize the scanning content clearly and the LCD screen will display “!”. You should wait for the screen to jump automatically to the preview interface and then jump to the home page to scan again.
 - ② Conversely, if the scanning speed is too slow, the scanner will stop scanning, and the screen will turn back to the home page, which means you have to restart the scan process. We recommend you watch the tutorial video first and practice the scanning a few more times so that you can master the device easier.
- d. Don't scan and upload at the same time, please.

Demo video: <https://munbyn.biz/002s>

Scanned Files Previewing

2.3.1.View the scanned files on the LCD screen

Press the button  to view the scanned files. In addition, the file supported zoom in twice by pressing the button and  the third time you press will return the file to its original size.



2.3.2.View the scanned files on the computer

Connect the device to the computer with the attached USB cable. At this time, a picture of the USB interface will be displayed on the LCD screen to enter the USB mode. Open the corresponding SD card disk of the computer, and you can view the scanned files.

If you want to connect to the computer by Wi-Fi to view the scanned files, please refer to 2.4.

2.4. Scanner WIFI Connection

Turn on the scanner Wi-Fi→The device connects to the scanner Wi-Fi→Browser enter the IP address→ Enter username and password

1. Press the button  to enter setup mode.
2. Select the WiFi Link by the button .
3. Press the button  to start up the Wi-Fi.
4. Wait about 30 seconds, the LCD screen will display a Wi-Fi sign.

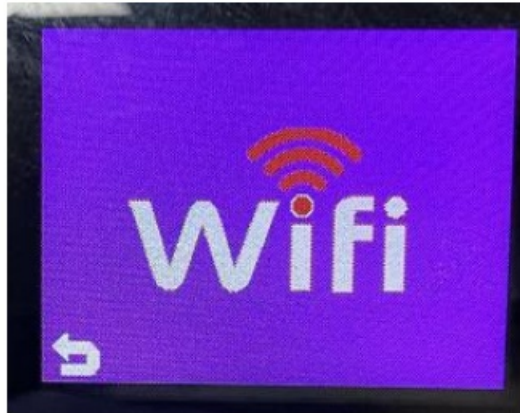


Figure 2- 4 Wi-Fi Sign

5. Enable the Wi-Fi function of your device (computer, mobile or tablet), click the “Scanner xxx”(xxx is the scanner number) icon from the network list of your devices.



Figure 2- 5 PC Wi-Fi

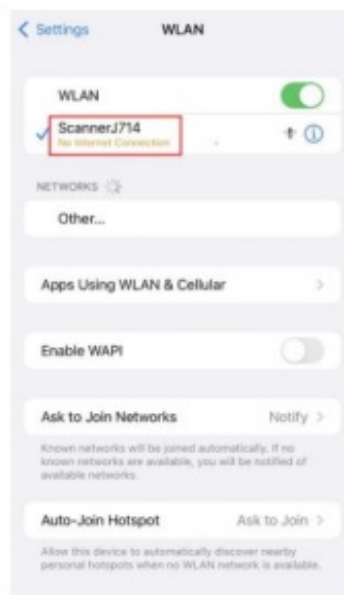


Figure 2- 6 IOS Wi-Fi

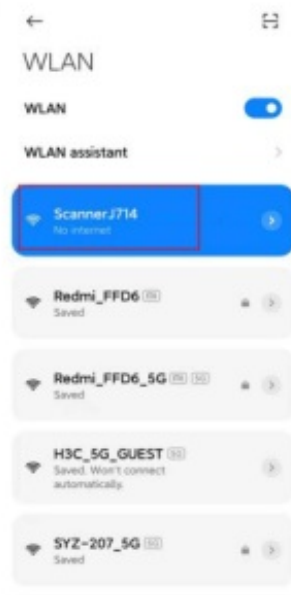


Figure 2- 7 Android Wi-Fi

Notes:

- a. After connecting the scanner Wi-Fi, if the device prompts whether to switch to another network, please choose not to switch.

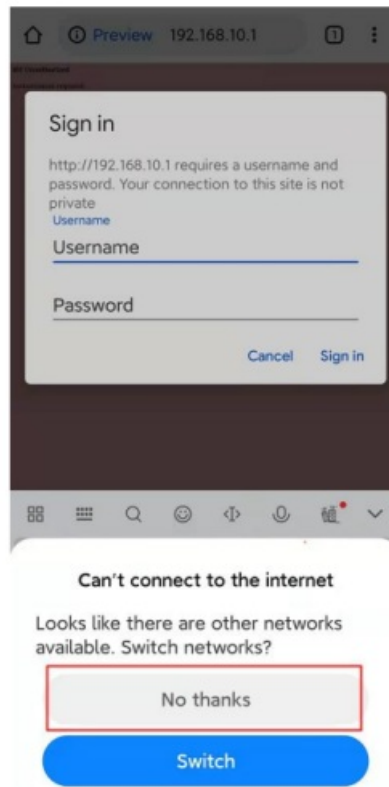


Figure 2- 8 Network Switching Prompt

b. Before connecting the device to scanner Wi-Fi, please turn off the data and Wi-Fi automatic connection function of the device. If these two functions are not turned off, the device may automatically switch to another Internet network after connecting to scanner Wi-Fi, causing the scanner connection failure.

The operation is as follows:

1 Closing device data.

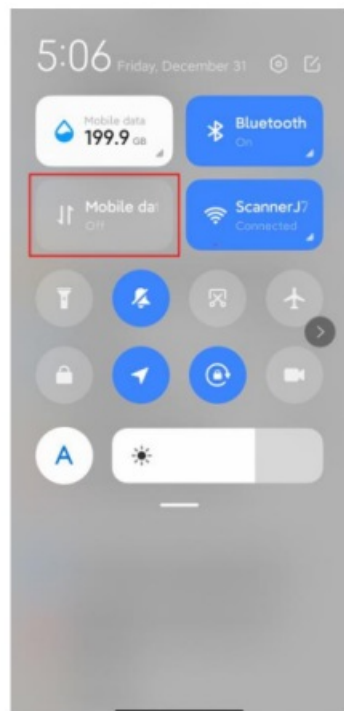


Figure 2- 9 Android Close Date

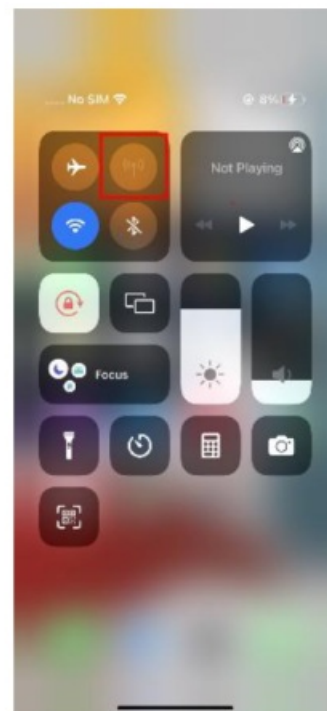


Figure 2- 10 iOS Close Date

2 Turn off Wi-Fi automatic connection function.

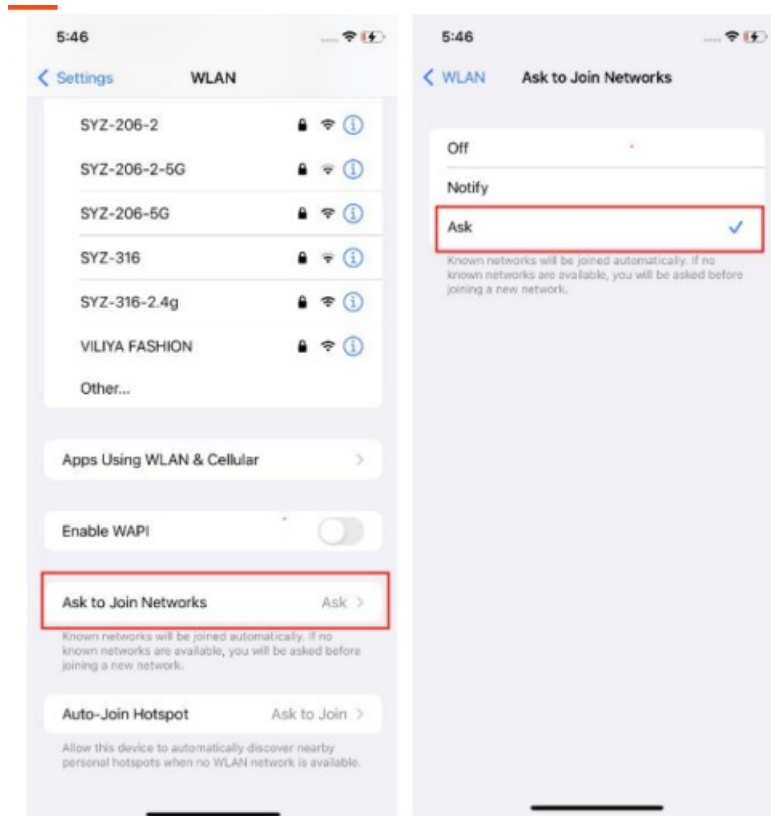


Figure 2- 11 iOS Wi-Fi Ask to Join Networks

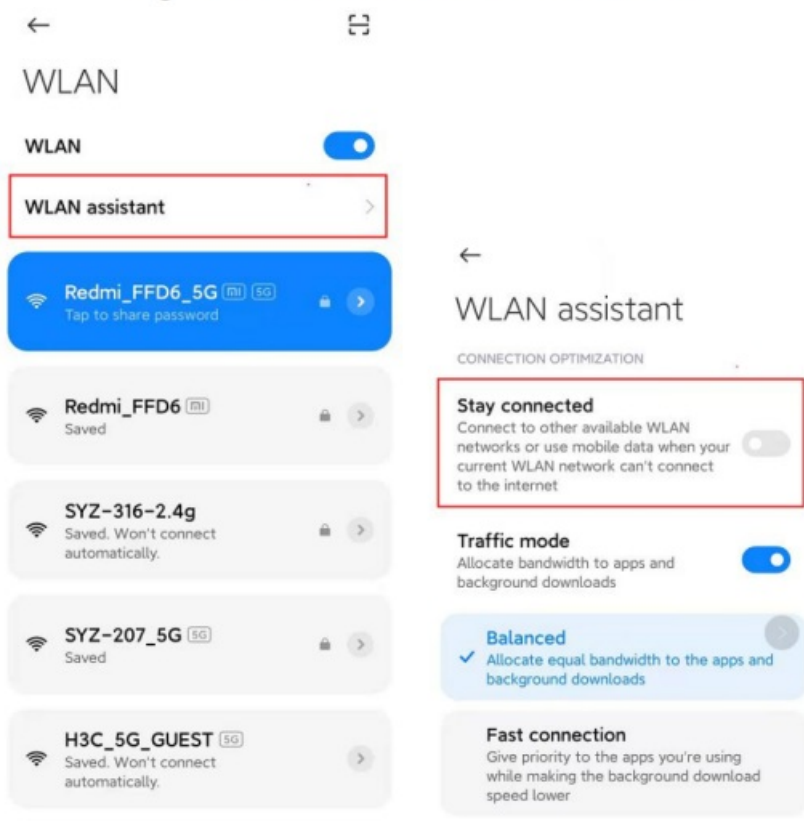


Figure 2- 12 Android Wi-Fi Assistant


6. After it connects successfully, open your web browser, enter the address 192.168.10.1 in the web address field, and hit enter key to reach the Wi-Fi home page.
7. The Wi-Fi home page will ask you for a username and password, then you can view and download the scanned pictures in the scanner.

Note: Default username: admin Default password: admin

Demo video: <https://bit.ly/IDS002-video>

Menu Setting

3.1. DPI Setting

The DPI setting can adjust the scan resolution. On the standby interface, press the button , and there are three scanning resolutions to choose from, including LO (LOW 300DPI) / HI (HIGH 600DPI) / FI (FINE 1050DPI), the higher the DPI level, the clearer the scan image.


3.2. Color Setting

Enter the menu interface and select the color mode, and there are two color modes to choose from, including Color mode and Mono mode. The color mode means that the scanned image is colored. Conversely, mono mode means that the scanned image is monochrome.

3.3. WIFI Link Setting



For Wi-Fi link settings, please refer to 2.4.

3.4. Save Format Setting



In the standby interface, press the button , and there are two formats to choose from, including JPG and PDF.

3.5. SD Card Format

Note: It is recommended that you format the files on the SD card after backup.

1. Press the button  to enter setup mode.
2. Select the Format by the button  and press the button  display a prompt interface, hit “Yes” to begin formatting and the SD card formatted successfully.

3.6. Date/Time Setting

With the time setting function, you can easily know the scan date of the document. (In this mode, the button  represents increase and the button  represents a decrease.)

Model video: <https://munbyn.biz/002t>

3.7. Language Setting

Enter the menu interface and select the language mode. There are 9 languages for you to choose.

3.8. White Balance Calibration

If the scanned image appears blurry, lines, and other problems, you can perform white balance calibration operations to reorganize the data.

The operation is as follows:

1. Clean the CIS with a cleaning cloth.



Figure 3- 1 Clean The CIS




2. Put the scanner in white paper.
3. Press the button  for 3 seconds to turn on the scanner.
4. While holding down the button , press the button  to enter the automatic calibration mode.
("start cal" will be displayed on LCD)



Figure 3- 2 Press the SCAN and UP Keys



Figure 3- 3 Screen Display "start cal"

Note: You cannot move the scanner when it is in the clearing process.

5. When the LCD screen display "Scroll scanner", it means the clearing process is completed.



Figure 3- 4 Screen Display "Scroll scanner"

6. Slide the scanner smoothly on the white paper until the LCD display power off.
7. Restart the scanner.

Model video: <https://munbyn.biz/002c>

OCR Software Operation Guide

Note: You can use OCR software to convert non-editable documents such as PDF and images into editable formats, such as word or excel.

OCR software download link: <https://munbyn.biz/ocr>

Model video: <https://munbyn.biz/001ocr>

4.1. Install the OCR software

1. Open the "ABBYY FineReader 11" file, double-click the "ABBYY FineReader 11.msi" file to start the installation.

Name	Date modified	Type	Size
ABBYY FineReader 11	2014-02-18 9:19 PM	File folder	
Administrator's Guide	2014-02-18 9:19 PM	File folder	
AutoRun	2014-02-18 9:19 PM	File folder	
Licences	2014-02-18 9:19 PM	File folder	
MSXML	2014-02-18 9:19 PM	File folder	
1026.mst	2013-05-28 4:40 PM	MST File	584 KB
1028.mst	2013-05-28 4:40 PM	MST File	444 KB
1029.mst	2013-05-28 4:40 PM	MST File	372 KB
1030.mst	2013-05-28 4:40 PM	MST File	236 KB
1031.mst	2013-05-28 4:40 PM	MST File	256 KB
1032.mst	2013-05-28 4:40 PM	MST File	660 KB
1033.mst	2013-05-28 4:40 PM	MST File	20 KB
1034.mst	2013-05-28 4:40 PM	MST File	252 KB
1036.mst	2013-05-28 4:40 PM	MST File	272 KB
1038.mst	2013-05-28 4:40 PM	MST File	384 KB
1040.mst	2013-05-28 4:40 PM	MST File	236 KB
1041.mst	2013-05-28 4:40 PM	MST File	628 KB
1042.mst	2013-05-28 4:40 PM	MST File	1,260 KB
1043.mst	2013-05-28 4:40 PM	MST File	224 KB
1045.mst	2013-05-28 4:40 PM	MST File	300 KB
1046.mst	2013-05-28 4:40 PM	MST File	260 KB
1049.mst	2013-05-28 4:40 PM	MST File	576 KB
1051.mst	2013-05-28 4:40 PM	MST File	368 KB
1053.mst	2013-05-28 4:40 PM	MST File	256 KB
1055.mst	2013-05-28 4:40 PM	MST File	360 KB
1058.mst	2013-05-28 4:40 PM	MST File	504 KB
1061.mst	2013-05-28 4:40 PM	MST File	196 KB
1066.mst	2013-05-28 4:40 PM	MST File	556 KB
2052.mst	2013-05-28 4:40 PM	MST File	456 KB
ABBYY FineReader 11.msi	2013-05-28 4:56 PM	Windows Installer ...	7,913 KB
AutoRun.exe	2013-05-28 4:37 PM	Application	1,120 KB
AutoRun.inf	2011-05-17 8:16 PM	Setup Information	1 KB
Bin.cab	2013-05-28 4:39 PM	WinRAR 压缩文件	82,359 KB
DictLang.cab	2013-05-28 4:40 PM	WinRAR 压缩文件	31,764 KB
instmsi.w.exe	2009-07-07 6:12 PM	Application	1,700 KB
Setup.exe	2013-05-28 4:37 PM	Application	637 KB
setup.ini	2012-08-21 4:49 PM	Configuration sett...	1 KB
unicows.dll	2009-07-07 6:12 PM	Application exten...	240 KB

Figure 4- 1 Installation File

2. Select "I accept the terms of the license agreement" and then next.

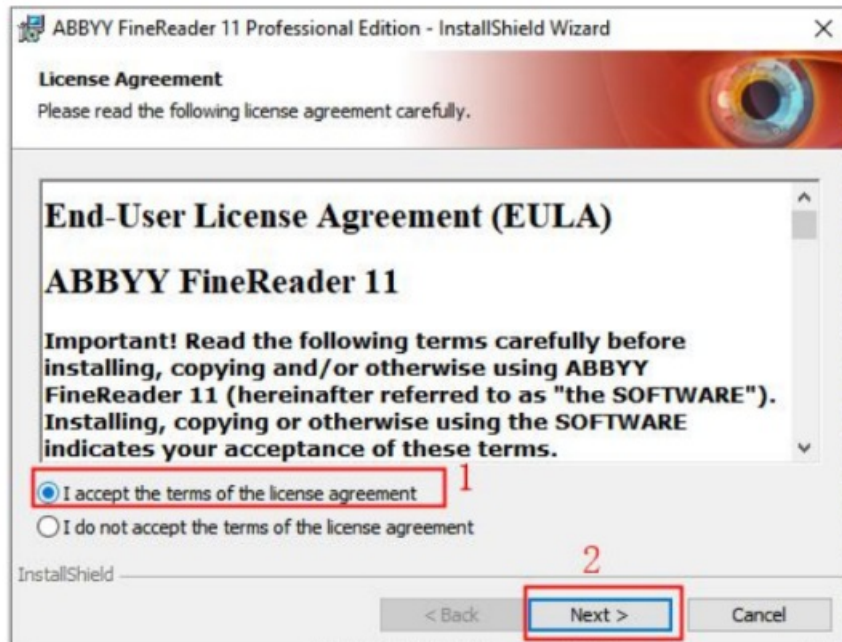


Figure 4- 2 Installation Interface

3. Click the "Next", you can also click "Browse..." to install the software in another folder.

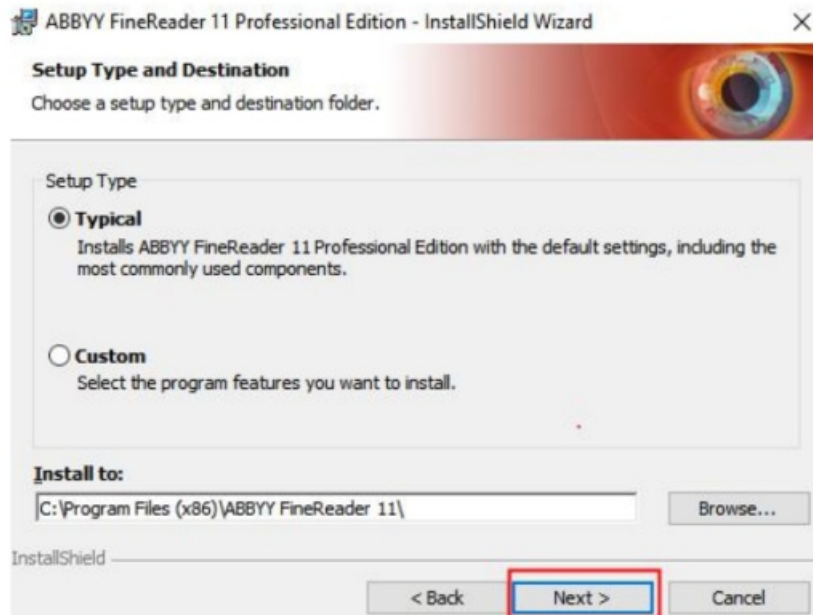


Figure 4- 3 Installation Interface

4. Click the “Install”, and wait for about 2 minutes to complete the installation.

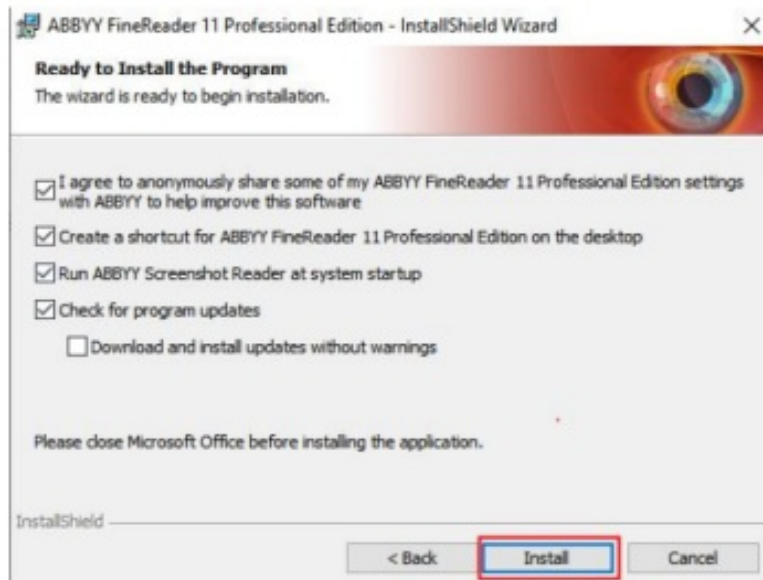




Figure 4- 4 Installation Interface

4.2. Convert Images or PDF Documents into Editable Documents

1. Double-click the “ABBYY FineReader 11” icon on the desktop to open the software.



Figure 4- 5 Desktop Icon

2. Click the “Open”, then select an image or a PDF document, click the “Open” to open the document, after opening the document, you can edit it in the software.

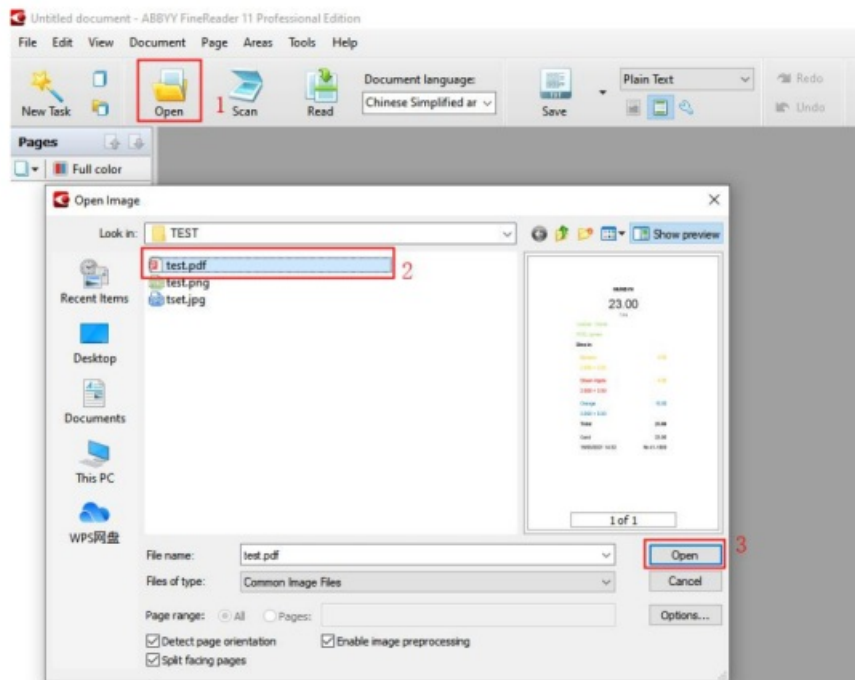


Figure 4- 6 Add File

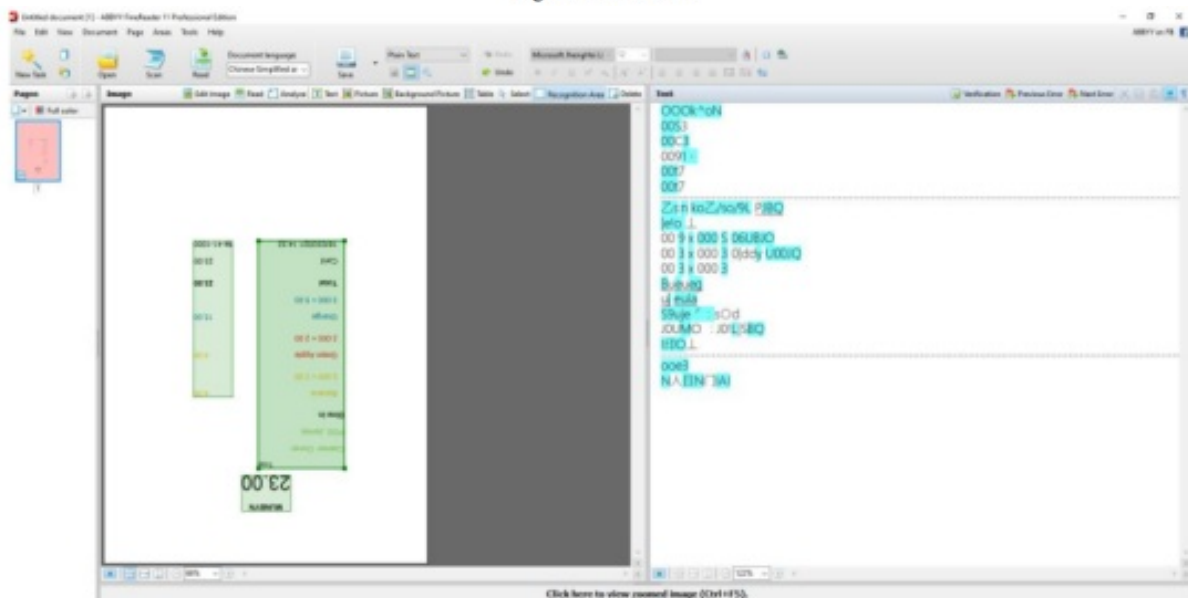


Figure 4- 7 Editing Interface

3. Click the "File", click the "Save Document As", select the format you want to convert.

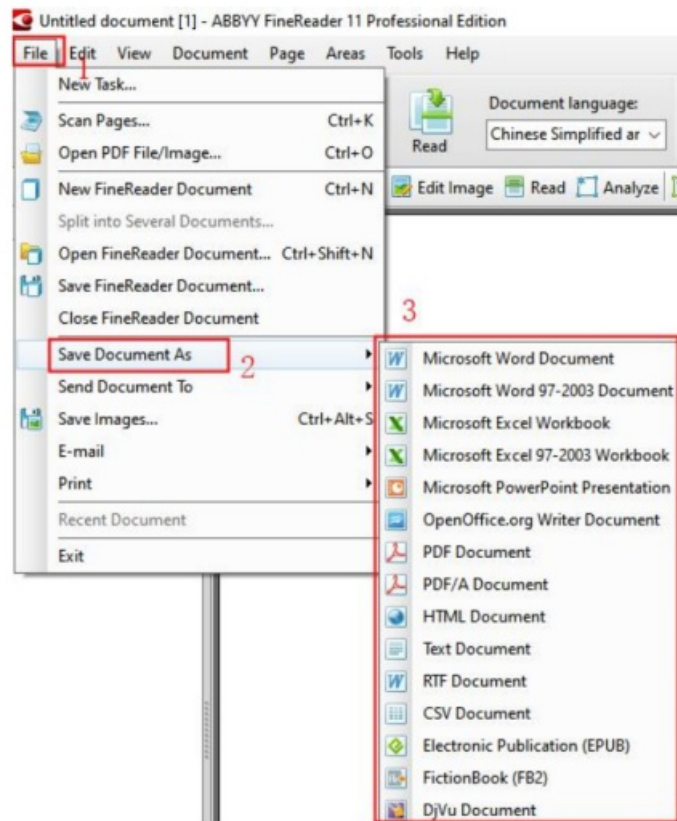


Figure 4- 8 Format Conversion Interface

4. Select a folder, then click the “Save”, view your selected folder, images or PDF documents that have been converted to the format you want.

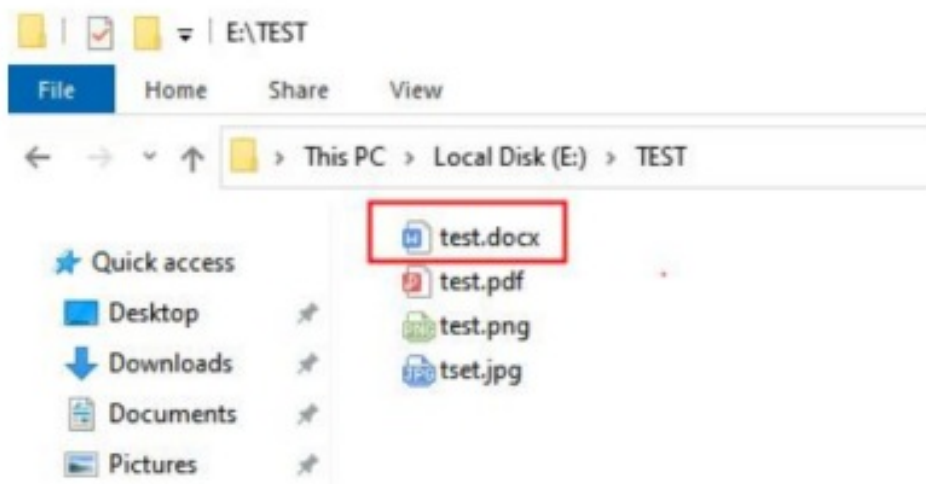
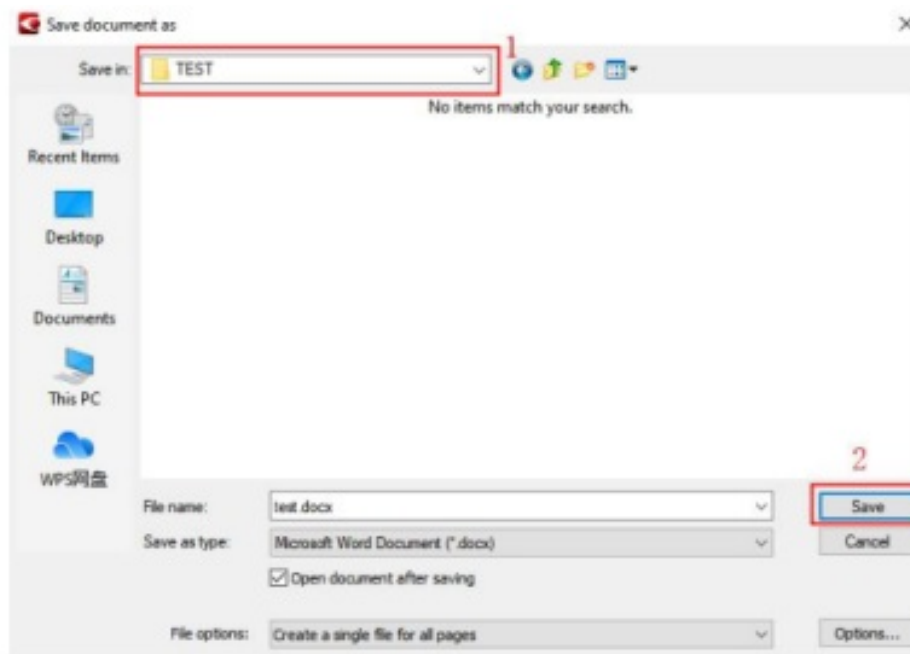


Figure 4- 9 Save The Document

Product Specification

Table 5- 1 Product Specification

Resolution	Low resolution: 300dpi High resolution: 600dpi Fine resolution: 1050dpi
Scanning Speed	Mono Low resolution: 2.0 Seconds Color Low resolution: 3.0 Seconds Mono High resolution: 6.0 Seconds Color High resolution: 8.0 Seconds Mono Fine resolution: 10.0 Seconds Color Fine resolution: 12.0 Seconds
Capacity (Based on 16GB MicroSD card)	Mono Low resolution: 1600pcs Color Low resolution: 1580pcs Mono High resolution: 600pcs Color High resolution: 550pcs Mono Fine resolution: 150pcs Color Fine resolution: 140pcs
Image sensor	A4 Color Contact Image Sensor
Scanner photo size	A4, A5, 5R, 4R, 3R, and below
Scan width	216mm
Scan length	300DPI: 250cm(max) 600DPI: 148cm(max) 1050DPI: 128cm(max)
Dimensions(Lx wx f)	258mm x39mm x28mm
Auto power off	3 Minutes
USB port	USB 2.0 high speed
Power Source	Built-in 900mAH Lithium-Polymer Battery
Battery Life	600 pieces (A4 paper default, Low resolution with color)
External Memory	Micro SD Card
WIFI Specification	IEEE802.11b/g/n
Charge time	2 hours
Usage time	3 hours
Charge type	USB or 5V DC power
Support system	Windows, macOS, Linux, iOS, Android

Munn, More choice for your growing business



<https://www.facebook.com/munbyn/>

Scan the QR code for Facebook online chat

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Contact us

MUNBYN provides 18 months warranty and lifetime free service.



If you encounter any issues with the product, please contact the MUNBYN team to promptly receive troubleshooting tips or a replacement.

Email: support@munbyn.com (24-7 online support)

Website: www.munbyn.com (how-to videos, warranty details)

WhatsApp +8617817881067

Documents / Resources

	<p>MUNBYN IDS002 Document Scanner [pdf] User Manual IDS002, 2A5LY-IDS002, 2A5LYIDS002, IDS002 Document Scanner, Document Scanner</p>
	<p>MUNBYN IDS002 Document Scanner [pdf] User Guide IDS002 Document Scanner, IDS002, Document Scanner, Scanner</p>

References

- [M Thermal Label Printer and Shipping Labels | MUNBYN® Official Store](#)
- [YouTube](#)
- [M YouTube](#)
- [M MUNBYN IDS002 How to use the white balance calibration to calibrate 4A mini scanner - YouTube](#)
- [M YouTube](#)
- [M YouTube](#)
- [M IDS002 User Manual-1.00.pdf - pCloud](#)
- [M ABBYY FineReader V11.rar - pCloud](#)