

# munchkin CCD-0327-000 Spring 2-in-1 Bouncer and Rocker Owner's Manual

munchkin CCD-0327-000 Spring 2-in-1 Bouncer and Rocker Owner's Manual



## Contents

- [1 IMPORTANT SAFEGUARDS](#)
- [2 INCLUDED PARTS](#)
- [3 HOW TO USE](#)
- [4 CHANGING MODES](#)
- [5 SUGGESTED WEIGHT LIMIT](#)
- [6 CHANGING POSITION](#)
- [7 TRAVEL / STORAGE MODE](#)
- [8 HARNESS STRAPS](#)
- [9 HOW TO CLEAN](#)
- [10 WASHING INSTRUCTIONS](#)
- [11 TECHNICAL SPECIFICATIONS](#)
- [12 Documents / Resources](#)

## IMPORTANT SAFEGUARDS

### WARNING:

**FALL HAZARD:** Babies have suffered skull fractures/head injuries falling while in and from bouncers/rockers.

- Use bouncer/rocker **ONLY** on floor.
- **ALWAYS** use restraints and adjust to fit snugly.
- **NEVER** lift or carry baby in bouncer/rocker.

 
**SUFFOCATION HAZARD:** Babies have suffocated when bouncers/rockers tipped over on soft surfaces and/or when bouncers/rockers have been used as a sleep product.

- NEVER use on a bed, sofa, cushion, or other soft surface.
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

#### To prevent falls and suffocation:

- ALWAYS use restraints and adjust to fit snugly.
- STOP using bouncer/rocker when baby starts trying to sit up or has reached 20lbs, whichever comes first.
- DO NOT use this product if it is damaged, broken or missing components.
- The upright position is only for children who have developed enough upper body control to sit up without tipping forward.
- ALWAYS place bouncer/rocker on floor. Never use on any elevated surface.
- MAX 20 lb/9kg
- ENSURE all components including the seat cover is fitted correctly.
- DO NOT allow children to play unsupervised near the product.

#### INCLUDED PARTS

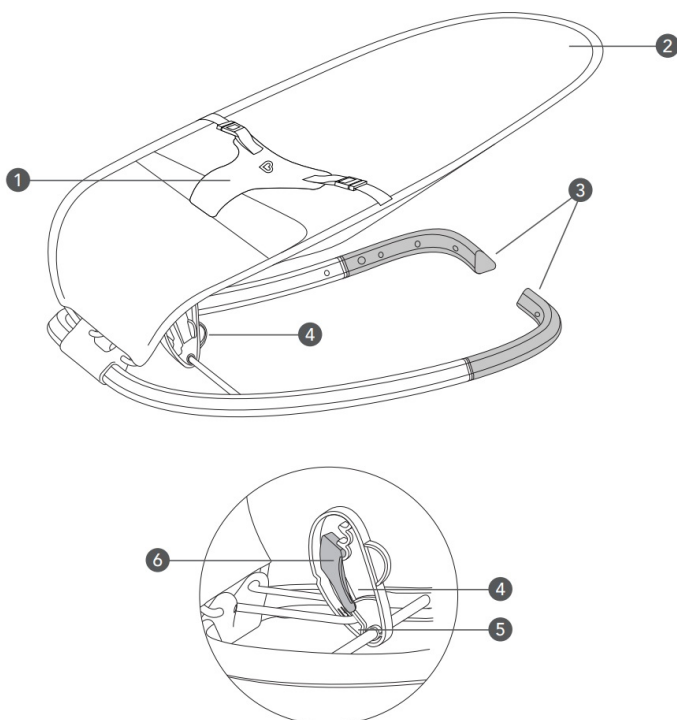


1. Safety Harness
2. Removable Fabric Seat Sleeve

3. Base Adjusters
4. Incline Adjuster
5. Locking Pin
6. Safety Release Trigger


## HOW TO USE

 The Spring 2-in-1 Bouncer & Rocker arrives folded flat and in rocker mode. Simply lift the top of the seat to one of the three incline positions, then release to unfold.

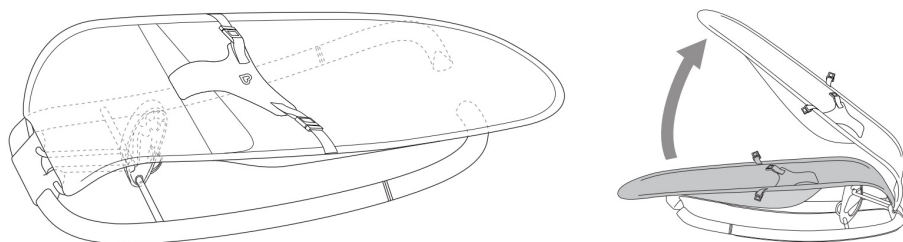


## CHANGING MODES

 
To switch between rocking and bouncing mode, simply twist the base adjusters until they click into the desired position. Be sure both base adjusters are in the same position to avoid tip-over.

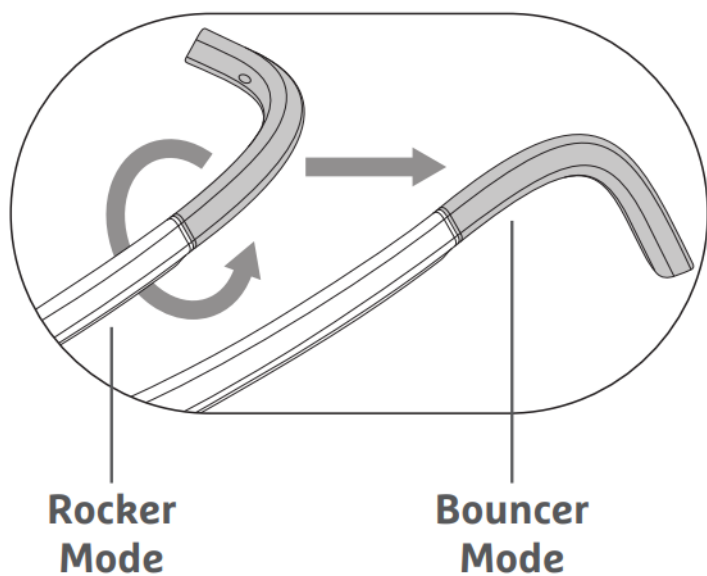

## ROCKER MODE

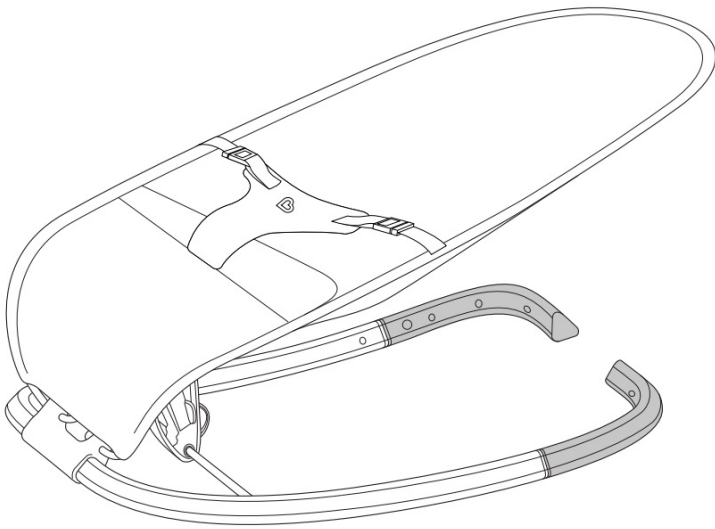 

## BOUNCER MODE

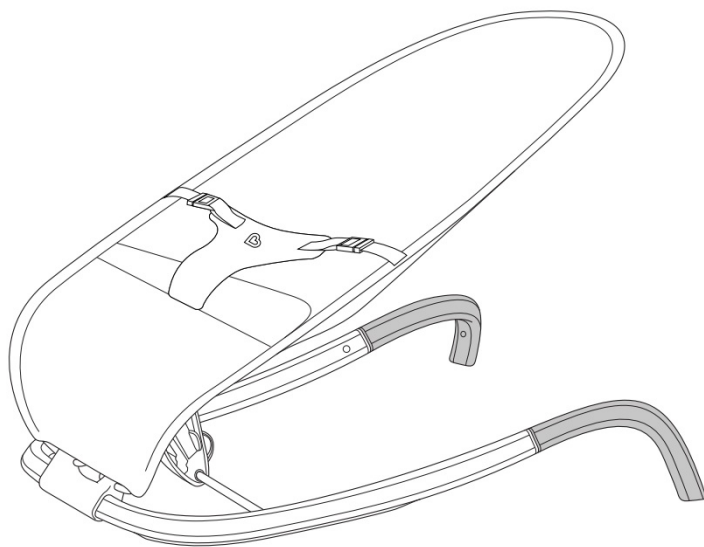 

## SUGGESTED WEIGHT LIMIT

The following weight limits apply, when using Spring in rocking or bouncing mode.

**POSITION:** ROCKING MODE: BOUNCING MODE

**Level 3:** 20 lbs (9kg):20 lbs (9kg)

**Level 2:** 18 lbs (8kg): 20 lbs (9kg)


**Level 1:** 13 lbs (6kg): 15 lbs (7kg)

**NOTE:** The lowest position is recommended for newborns up to 13 lbs or 15 lbs.

## CHANGING POSITION

To change position, lift the seat slightly to release from current level, then guide the locking pin into desired level.

 
After adjusting the seat incline, make sure the locking pin is anchored securely in a groove, you should hear a click once it's in place.

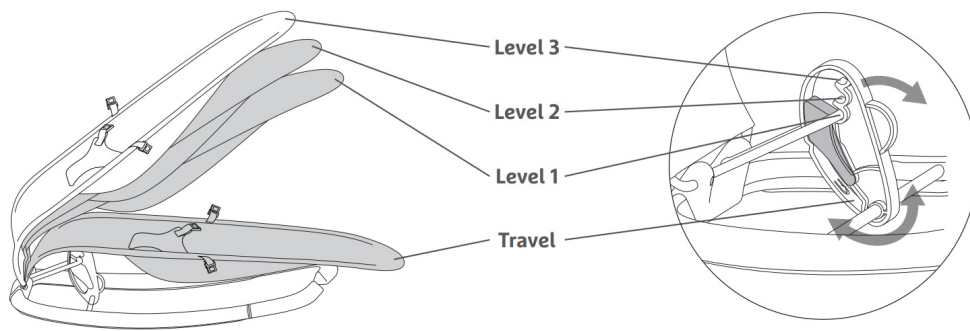

## TRAVEL / STORAGE MODE

To pack the product flat for storage or travel, pull the safety release trigger and guide the locking pin to the bottom of the incline adjuster so that the seat lays flat against the base.

 
To minimize storage size, twist the base adjusters to point the feet inward.

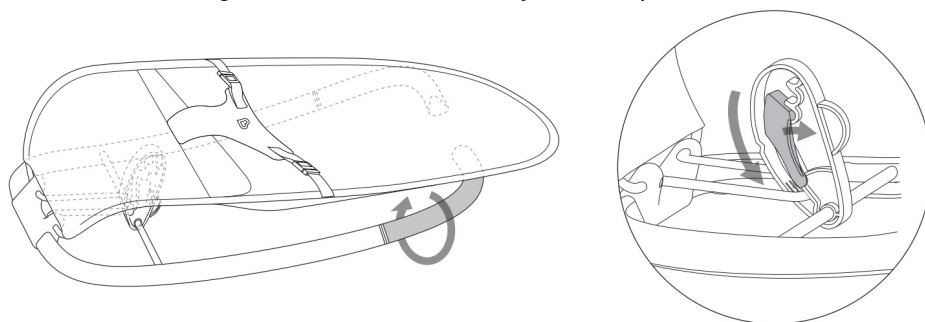

## HARNESS STRAPS


Place your child in the seat and then buckle the harness straps. Use the strap adjusters to ensure a snug fit.

 **IMPORTANT:** Always use the seat harness while your child is seated in the bouncer or rocker mode.

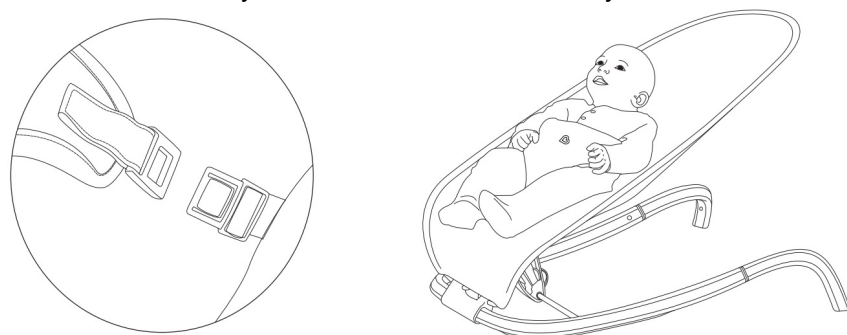

## HOW TO CLEAN

 **REMOVE COVER:** Unsnap the flap buttons on the bottom edge of the cover, then remove the cover from the seat frame.

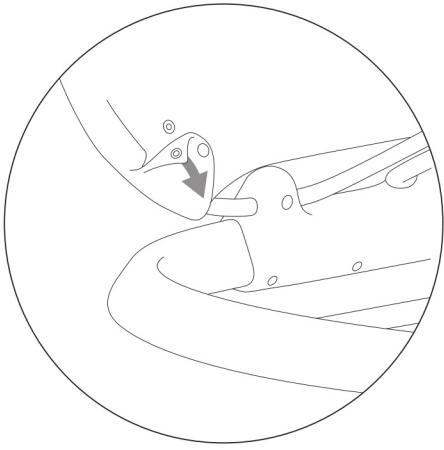


## WASHING INSTRUCTIONS

**To Wash the Seat Cover:** Remove it from the frame and wash separately.

**Wash Guide:** Machine Wash, Tumble dry warm, DO NOT IRON.

 **To Clean the Frame:** Wipe frame and the legs with a damp cloth.

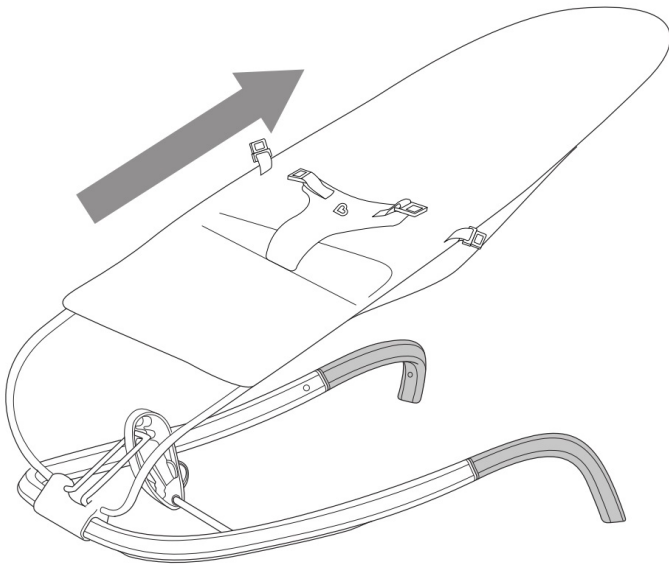

## TECHNICAL SPECIFICATIONS

- **Product Name:** Spring 2-in-1 Bouncer and Rocker
- **Model:** MKCA0864 REV1
- **Weight:** 3.8 lbs. (1.7 kg)
- **Materials:**
- **Frame:** Aluminum, steel, plastic
- **Seat fabric:** 100% polyester
- **Maximum Size:**
  - Highest Position: L 27.7" x W 23.9" x H 20.8"
  - Travel Position: L 32.1" x W 15.9" x H 6.6"


## CERTIFIED



sample tested to meet U.S. Federal, ASTM and other safety requirements.

# munchkin®

## Documents / Resources

 The thumbnail shows the cover of the owner's manual. It features the Munchkin logo at the top, followed by the product name 'Spring 2-in-1 Bouncer and Rocker' and a line drawing of the product. Below the drawing is a small table of contents.	<p><a href="#">munchkin CCD-0327-000 Spring 2-in-1 Bouncer and Rocker [pdf]</a> Owner's Manual CCD-0327-000, CCD-0327-000 Spring 2-in-1 Bouncer and Rocker, Spring 2-in-1 Bouncer and Rocker, 2-in-1 Bouncer and Rocker, Bouncer and Rocker, Rocker</p>
---	---