

munchkin[®]

11569
LIGHT
MY
WAY
OWL



Munchkin 11569 Light My Way Owl Instruction Manual

[Home](#) » [munchkin](#) » Munchkin 11569 Light My Way Owl Instruction Manual 

Contents

- [1 Munchkin 11569 Light My Way Owl](#)
- [2 Operating Instructions](#)
- [3 Battery Replacement](#)
- [4 Battery Notice](#)
- [5 One-Year Limited Warranty](#)
- [6 FCC Information](#)
- [7 FREQUENTLY ASKED QUESTIONS](#)
- [8 References](#)
- [9 Related Posts](#)

munchkin[®]

Munchkin 11569 Light My Way Owl




Please read the instructions before the first use of the product. Keep these instructions for future reference. If you need assistance, please call (800) 344-BABY.

Operating Instructions

1. Press the power button on the bottom of the Nightlight to turn on the light. The nightlight will turn off automatically after 20 minutes.
2. To manually turn off the nightlight before the timer ends, push the power button a second time.

Battery Replacement

1. Locate the battery compartment on the bottom of the product. You will need a Phillips head screwdriver to loosen the screws on the battery compartment. Remove the old batteries and dispose of them safely.
2. Insert three AAA/LRO3 alkaline batteries into the battery compartment, starting with the middle battery. Follow the "+/-" signs for proper installation.
3. Replace the battery compartment door and tighten the screws.

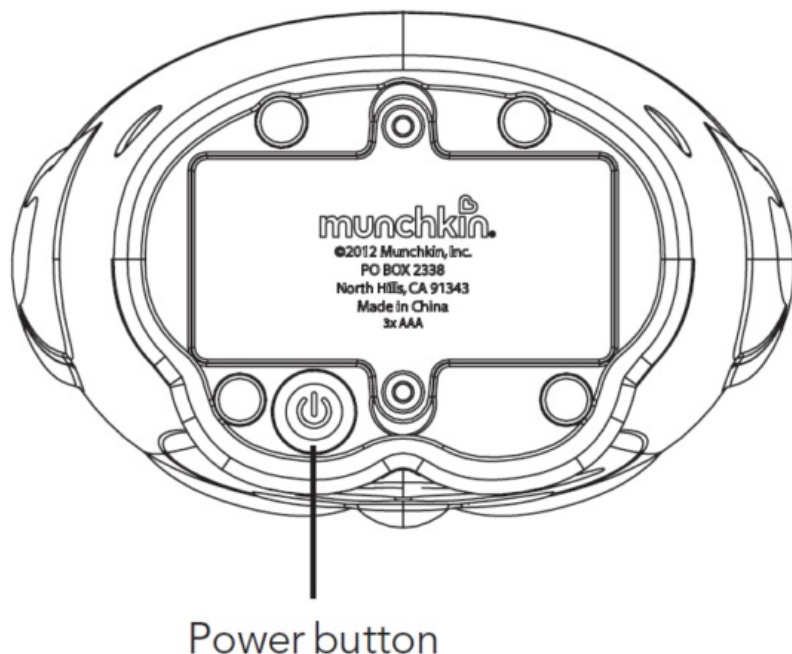

Important Safety Instructions

- Clean and inspect before use.
- Discard all packaging components before giving them to the child.
- For indoor use only.
- **To Clean:** Use a slightly damp cloth with mild soap to clean the Nightlight. Do not submerge into water or other liquid.

Battery Notice

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium, lithium-ion) batteries.
3. Do not charge non-rechargeable batteries.
4. Insert batteries in the correct polarity position.
5. Do not short-circuit battery terminals.
6. Remove batteries during long periods of non-use. Always remove exhausted batteries from the product.
Dispose of batteries properly.
7. Use caution when opening the battery compartment as some batteries may leak, explode, or catch on fire.
8. Rechargeable batteries are to be removed from the toy before being charged.
9. Rechargeable batteries are only to be charged under adult supervision.

One-Year Limited Warranty

Munchkin's Light My Way™ Nightlight includes a One-year limited warranty against defects from the date of purchase. In the event of a malfunction or defect during the in-warranty period, Munchkin, Inc., at its option, will replace or repair the product under warranty. Upon receipt of the product and the proof of purchase with a valid date of purchase, the defective part will be immediately repaired or replaced and returned to you free of charge (USA only). Please send the defective unit, proof of purchase with the original store receipt, and a description of the problem you have encountered to: Munchkin, Inc. • 16689 Schoenborn Street, North Hills, CA 91343, USA • Attn: Light My Way™ Nightlight Warranty

NOTE: This warranty does not cover a defect that has been caused by negligence, accident, or improper use of the product.

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

FCC Information

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PRODUCT AND DESIGN ARE TM & ©2012 MUNCHKIN, INC. MUNCHKIN AND LIGHT MY WAY ARE TRADEMARKS OR REGISTERED TRADEMARKS OF MUNCHKIN, INC. 16689 SCHOENBORN ST., NORTH HILLS, CA 91343. MUNCHKIN BABY CANADA LTD., 50 PRESIDIO CT., UNIT A, BRAMPTON, ON L6S 6E3.

MADE IN CHINA

800.344.BABY (2229)

www.munchkin.com

FREQUENTLY ASKED QUESTIONS

What is the Munchkin 11569 Light My Way Owl?

The Munchkin 11569 Light My Way Owl is a nightlight designed to provide a gentle, reassuring light for children. It features LED technology and is powered by 3 AAA batteries.

What are the dimensions of the Munchkin 11569 Light My Way Owl?

The Munchkin 11569 Light My Way Owl measures 2.4 inches in diameter, 4.1 inches in width, and 6.1 inches in height.

How much does the Munchkin 11569 Light My Way Owl weigh?

The Munchkin 11569 Light My Way Owl weighs 5.1 ounces.

What type of light source does the Munchkin 11569 use?

The Munchkin 11569 Light My Way Owl uses an LED light source.

How long does the battery last in the Munchkin 11569 Light My Way Owl?

The battery life of the Munchkin 11569 Light My Way Owl is approximately 110 hours.

What is the price of the Munchkin 11569 Light My Way Owl?

The Munchkin 11569 Light My Way Owl is priced at \$15.02.

What is the power source for the Munchkin 11569 Light My Way Owl?

The Munchkin 11569 Light My Way Owl is battery powered, requiring 3 AAA batteries.

Does the Munchkin 11569 Light My Way Owl have any connectivity technology?

The Munchkin 11569 Light My Way Owl includes USB connectivity technology.

How is the Munchkin 11569 Light My Way Owl controlled?

The Munchkin 11569 Light My Way Owl is controlled via a touch method.

What is the base diameter of the Munchkin 11569 Light My Way Owl?

The base diameter of the Munchkin 11569 Light My Way Owl is 2.5 inches.

What kind of warranty does the Munchkin 11569 Light My Way Owl come with?

The Munchkin 11569 Light My Way Owl comes with a 1-year warranty.

How does the LED technology in the Munchkin 11569 improve its functionality?

The LED technology in the Munchkin 11569 provides a bright, yet gentle light that is energy-efficient and long-lasting.

How is the touch control feature used on the Munchkin 11569 Light My Way Owl?

The touch control allows for easy operation of the light, typically by tapping or holding the light to turn it on or off.

What are the advantages of using LED lighting in the Munchkin 11569?

LED lighting is energy-efficient, has a long lifespan, and emits a soft light that is safe for children.

How do you replace the batteries in the Munchkin 11569 Light My Way Owl?

To replace the batteries, open the battery compartment on the back of the owl, remove the old batteries, and insert new AAA batteries.

DOWNLOAD THE PDF LINK: [Munchkin 11569 Light My Way Owl Instruction Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.