

munchkin

15949
MOZART
MAGIC
CUBE



Munchkin 15949 Mozart Magic Cube Instruction Manual

[Home](#) » [munchkin](#) » Munchkin 15949 Mozart Magic Cube Instruction Manual 

Contents

- [1 Munchkin 15949 Mozart Magic Cube](#)
- [2 PRODUCT USAGE](#)
- [3 TO INSERT OR REPLACE BATTERIES](#)
- [4 FCC Statement](#)
- [5 FREQUENTLY ASKED QUESTIONS](#)
- [6 References](#)
- [7 Related Posts](#)

munchkin®

Munchkin 15949 Mozart Magic Cube



PRODUCT USAGE

To Play	<p>Move the power switch to the ON position. Two volume options for low and high volume control (🔊 or 🔊).</p> <p>Press any instrument panel to start the music. Press the orchestra button to hear all the instruments play.</p>
----------------	--

To Add Instruments	Press the individual instrument buttons while the music is playing. The buttons of the selected instruments will flash when activated.
To Subtract Instruments	Press the instrument's -flashing button while the music is playing to deactivate the instrument.
To Advance	Press the orchestra button while the music is playing to advance to the next musical piece or scroll through the eight musical compositions.
When Done	Move the power switch to the OFF position to conserve battery life.

If the music stops playing or becomes distorted, turn the cube "off" and then "on" again. Wait two seconds, then continue to play. If the problem persists, please check to see if the batteries need replacing. Do not use if damaged or broken.

TO INSERT OR REPLACE BATTERIES

Adults Only. Using a screw driver, unscrew the battery door and pull out battery cartridge. Insert three alkaline AA batteries. Slide cartridge back in and screw battery door back on. Always remove exhausted batteries. Do not mix old and new batteries. Use alkaline batteries only. Turn switch to "on", wait two seconds, then play.

3 AA Batteries Required

(Batteries Included)



To Use:

- Inspect carefully before each use.
- Discard and replace at first sign of weakness or damage.
- Indoor use only. Retain packaging for future reference.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium, lithium-ion) batteries.
- Do not charge non-rechargeable batteries.
- Insert batteries in the correct polarity position.
- Do not short-circuit battery terminals.
- Remove batteries during long periods of non-use.
- Always remove exhausted batteries from the product.
- Use caution when opening the battery compartment as some batteries may leak, explode, or catch on fire.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

To Dispose: Batteries must be recycled or disposed of properly.

To Clean

- Clean and inspect before use.
- This product contains batteries.
- Do not submerge Mozart's Magic Cube in liquid.
- Wipe with a damp cloth and air-dry.



WARNING: Use product for intended purposes only. Do not submerge in water or other liquid. Not intended as a bath toy.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the difference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio technician for help

CAN ICES-3 (B)/NMB-3(B)

munchkin.com

800.344.2229

PRODUCT AND DESIGN ARE TM & ©2014 MUNCHKIN, INC. MUNCHKIN, MOZART MAGIC AND IT'S THE LITTLE THINGS ARE TRADEMARKS OR REGISTERED TRADEMARKS OF MUNCHKIN, NC. 7835 GLORIA AVE., VAN NUYS, CA 91406. MUNCHKIN BABY CANADA LTD., 50 PRESIDIO CT., UNIT A, BRAMPTON, ON L6S 6E3. AUSTRALIA, CNP BRANDS, 20 CALARCO DR. DERRIMUT VIC 3030, 1300-667-137. PATENT: [HTTP://WWW.MUNCHKIN.COM/PATENTS](http://www.munchkin.com/patents) MADE IN CHINA/FABRIQUÉ EN CHINE.

FREQUENTLY ASKED QUESTIONS

What is the Munchkin 15949 Mozart Magic Cube?

The Munchkin 15949 Mozart Magic Cube is an interactive toy designed to engage babies and toddlers with music and lights, promoting sensory development.

What is the price of the Munchkin 15949 Mozart Magic Cube?

The Munchkin 15949 Mozart Magic Cube is priced at \$27.45, making it an affordable option for parents looking to stimulate their child's creativity and musical interest.

What are the dimensions of the Munchkin 15949 Mozart Magic Cube?

The product dimensions of the Munchkin 15949 are 5.25 x 5.25 x 5.25 inches, providing a compact size that is easy for little hands to manipulate.

How much does the Munchkin 15949 Mozart Magic Cube weigh?

The Munchkin 15949 weighs 1 pound, making it lightweight and portable for playtime at home or on the go.

What features does the Munchkin 15949 Mozart Magic Cube offer?

The Munchkin 15949 features 5 instrument sounds, 8 Mozart songs, and colorful lights, all designed to entertain and engage children.

What type of batteries does the Munchkin 15949 require?

The Munchkin 15949 requires 3 AAA batteries for operation, providing the power needed for sound and light functions.

What are the instrument sounds included in the Munchkin 15949?

The Munchkin 15949 Mozart Magic Cube features 5 different instrument sounds, allowing children to

explore various musical tones.

How many Mozart songs does the Munchkin 15949 play?

The Munchkin 15949 plays 8 classic Mozart songs, introducing children to classical music from an early age.

How does the Munchkin 15949 promote sensory development?

The Munchkin 15949 promotes sensory development through music, sounds, and colorful lights, engaging infants' auditory and visual senses.

What makes the Munchkin 15949 a good gift for infants?

The Munchkin 15949 is a great gift for infants due to its engaging features, musical elements, and ability to stimulate development through play.

What is the model number for the Munchkin Mozart Magic Cube?

The model number for the Munchkin Mozart Magic Cube is 15949, which can be used for easy identification when purchasing or seeking support.

How does the Munchkin 15949 Mozart Magic Cube engage children during playtime?

The Munchkin 15949 engages children through its combination of music, sounds, and lights, capturing their attention and encouraging exploration.

Why is my Munchkin 15949 Mozart Magic Cube not turning on?

Ensure that the batteries are properly installed and fully charged. If the cube still doesn't turn on, check for any corrosion or loose connections in the battery compartment.

Why is there no sound coming from my Munchkin 15949 Mozart Magic Cube?

Check the volume settings and make sure the cube is turned on. If the sound is still not working, replace the batteries and ensure they are properly aligned. If the problem persists, the speaker may be damaged.

Why is my Munchkin 15949 Mozart Magic Cube only playing some instruments and not all?

The cube may be stuck in one mode or have a malfunction. Try pressing each button to ensure that all the instruments are functioning. If one button isn't working, it may need cleaning or repair.

DOWNLOAD THE PDF LINK: [Munchkin 15949 Mozart Magic Cube Instruction Manual](#)

REFERENCE: [Munchkin 15949 Mozart Magic Cube Instruction Manual-Device.Report](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.