



Munters Bird Scale User Manual

[Home](#) » [Munters](#) » Munters Bird Scale User Manual 



RBS 3H Bird Scale

Manual for use and maintenance

Ag/MIS/ImEn-2702-02/19 Rev 1.0 P/N: 116266 Rev 1.0



RBS 3H

Manual for use and maintenance

Rev 1.0; 03/2019 Ag/MIS/ImEn-2702-02/19 Rev 1.4 (MIS)

This manual for use and maintenance is an integral part of the apparatus together with the attached technical documentation.

This document is destined for the user of the apparatus: it may not be reproduced in whole or in part, committed to computer memory as a file, or delivered to third parties without the prior authorization of the assembler of the system. Munters reserves the right to effect modifications to the apparatus in accordance with technical and legal developments.

Contents

- 1 Introduction
 - 1.1 Disclaimer
 - 1.2 Introduction
 - 1.3 Notes
- 2 Installing the RBS 3H
 - 2.1 POLE A
 - 2.2 POLE B
 - 2.3 BASEPLATE
 - 2.4 TRANSDUCER
 - 2.5 Assembly
 - 2.6 GENERAL ASSEMBLY
 - 2.7 DETAILED ASSEMBLY
- 3 Warranty
- 4 Documents / Resources
 - 4.1 References
- 5 Related Posts

Introduction

Disclaimer

Munters reserves the right to make alterations to specifications, quantities, dimensions, etc. for production or other reasons, subsequent to publication. The information contained herein has been prepared by qualified experts within Munters. While we believe the information is accurate and complete, we make no warranty or representation for any particular purposes. The information is offered in good faith and with the understanding that any use of the units or accessories in breach of the directions and warnings in this document is at the sole discretion and risk of the user.

Introduction

Congratulations on your excellent choice of purchasing an RBS-3H. In order to realize the full benefit from this product it is important that it is installed, commissioned and operated correctly. Before installation or using the fan, this manual should be studied carefully. It is also recommended that it is kept safely for future reference. The manual is intended as a reference for installation, commissioning, and day-to-day operation of the Munters Controllers.

Notes

Date of release: July 2010. Munters cannot guarantee to inform users about the changes or to distribute new manuals to them. All rights reserved. No part of this manual may be reproduced in any manner whatsoever without the expressed written permission of Munters. The contents of this manual are subject to change without notice.

Installing the RBS 3H

The RBS-3H hanging scale is assembled in simple, easy-to-follow steps as seen in the following section. It is adjustable, must be hung from above, and is collapsible. The poles slide into one another for ease of transport and storage. The RBS-3H hanging scale is composed of the following components:

- Pole A
- Pole B

- Base Plate
- Transducer

POLE A

Pole A, 151.5cm/59.4inches, is the larger in diameter of the poles. It has two thumb screws near the open end. The other end connects to the plate. Pole B is nested inside. Refer to Figure 2.



Figure 1: Pole A

POLE B

Pole B, 154.5cm/160.8inches, stores inside Pole A, and has a hook at one end. Pole B connects to the transducer. Refer to Figure 3.



Figure 2: Pole B

BASEPLATE

The base plate is a five-side polygon base constructed of heavy corrugated metal and is used to place the birds for weighing. The base plate is composed of the following sub-components:

- Plate base
- Bolt
- Nut
- Metal washer
- Two square flat metal pieces (used for ballast)

TRANSDUCER

The transducer converts weight from the RBS-3H hanging scale into data that is input and read by a connected digital scale. The RBS-3H transducer is suspended from above and Pole A hooks onto the ring. Refer to Figure 4.



Figure 3: Transducer and Data Cable

Assembly

This section contains the following:

- General Assembly
- Detailed Assembly

GENERAL ASSEMBLY

A general view of the RBS-3H assembly is as follows:

- 1.Position transducer with eyebolt.
- 2.Connect Pole A to base.
- 3.Extend and position Pole B, hook onto the transducer.
- 4.Connect transducer data plug with computer/electronic scale device

DETAILED ASSEMBLY

The RBS-3H hanging scale package contains poles (A and B), a base plate assembly, and a transducer (device and cable). Refer to Figure 5.



Figure 4: RBS-3H Package Contents

Remove Pole A and loosen the thumbscrews. Refer to Figure 6.



Figure 5: Releasing Pole A Thumb Screws

Extend Pole B to the desired position and set aside. Refer to Figure 7.



Figure 6: Extending Pole B from Pole A

Use a wrench to release the base plate bolt from the nut. Refer to Figure 8.



Figure 7: Release Base Plate Bolt

Invert the base plate bolt so that it extends upwards out of the base plate.

Position Pole A onto the base plate bolt and screw tightly. Refer to Figure 9.



Figure 8: Connect Pole A to Base Plate

Connect the pole assembly onto the hanging transducer and connect the data cable to the computer/weight scale. Refer to Figure 10.



Figure 9: Connect Pole Assembly to Transducer



Figure 10: RBS-3H Hanging Scale Assembled

Warranty

Warranty and technical assistance Munters products are designed and built to provide reliable and satisfactory performance but cannot be guaranteed free of faults; although they are reliable products they can develop unforeseeable defects and the user must take this into account and arrange adequate emergency or alarm systems if failure to operate

could cause damage to the articles for which the Munters plant was required: if this is not done, the user is fully responsible for the damage which they could suffer. Munters extends this limited warranty to the first purchaser and guarantees its products to be free from defects originating in manufacture or materials for one year from the date of delivery, provided that suitable transport, storage, installation, and maintenance terms are complied with. The warranty does not apply if the products have been repaired without express authorization from Munters, or repaired in such a way that, in Munters' judgment, their performance and reliability have been impaired, or incorrectly installed, or subjected to improper use. The User accepts total responsibility for incorrect use of the products. The warranty on products from outside suppliers fitted to the RBS, (for example antennas, power supplies, cables, etc.) is limited to the conditions stated by the supplier: all claims must be made in writing within eight days of the discovery of the effect and within 12 months of the delivery of the defective product. Munters has thirty days from the date of receipt in which to take action and has the right to examine the product at the customer's premises or at its own plant (carriage cost to be borne by the customer). Munters at its sole discretion has the option of replacing or repairing, free of charge, products which it considers defective, and will arrange for their despatch back to the customer carriage paid. In the case of faulty parts of small commercial value which are widely available (such as bolts, etc.) for urgent despatch, where the cost of carriage would exceed the value of the parts, Munters may authorize the customer exclusively to purchase the replacement parts locally; Munters will reimburse the value of the product at its cost price.

Munters will not be liable for costs incurred in demounting the defective part, or the time required to travel to the site, and the associated travel costs. No agent, employee or dealer is authorized to give any further guarantees or to accept any other liability on Munters' behalf in connection with other Munters products, except in writing with the signature of one of the Company's Managers.

WARNING: In the interests of improving the quality of its products and services, Munters reserves the right at any time and without prior notice to alter the specifications in this manual.

The liability of the manufacturer Munters ceases in the event of:

- dismantling the safety devices;
- use of unauthorized materials;

- inadequate maintenance;
- use of non-original spare parts and accessories.

Barring specific contractual terms, the following are directly at the user's expense:

- preparing installation sites;
- providing an electricity supply (including the protective equipotential bonding (PE) conductor, in accordance with CEI EN 60204-1, paragraph 8.2), for correctly connecting the equipment to the mains electricity supply;
- providing ancillary services appropriate to the requirements of the plant on the basis of the information supplied with regard to installation;
- tools and consumables required for fitting and installation;
- lubricants necessary for commissioning and maintenance.

It is mandatory to purchase and use only original spare parts or those recommended by the manufacturer. Dismantling and assembly must be performed by qualified technicians and according to the manufacturer's instructions. The use of non-original spare parts or incorrect assembly exonerates the manufacturer from all liability. Requests or technical assistance and spare parts can be made directly to the nearest Munters office. A full list of contact details can be found on the back page of this manual.


Munters Israel
18 HaSivim Street
Petach-Tikva 49517, Israel
Telephone: +972-3-920-6200
Fax: +972-3-924-9834



www.munters.com

Australia Munters Pty Limited, Phone +61 2 8843 1594,
Brazil Munters Brasil Industria e Comercio Ltda, Phone +55 41 3317 5050,
Canada Munters Corporation Lansing, Phone +1 517 676 7070,
China Munters Air Treatment Equipment (Beijing) Co. Ltd, Phone +86 10 80 481 121,

Documents / Resources

	<p>Munters Bird Scale [pdf] User Manual Munters, RBS-3H, Bird Scale</p>
---	---

References

- [✔ Industrial Dehumidifier & Dehumidification Systems Manufacturer | Munters](#)

Manuals+.