



MUSE MT-201BVB Bluetooth suitcase record player encoding function, blue User Manual

[Home](#) » [muse](#) » MUSE MT-201BVB Bluetooth suitcase record player encoding function, blue User Manual 

MUSE

MT-201BVB

 
 
 
 


User Manual

Contents

- [1 MT-201BVB Bluetooth suitcase record player encoding function, blue](#)
- [2 TURNTABLE STEREO SYSTEM](#)
- [3 POWER SUPPLY](#)
- [4 IMPORTANT:](#)
- [5 SPECIFICATIONS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

MT-201BVB Bluetooth suitcase record player encoding function, blue

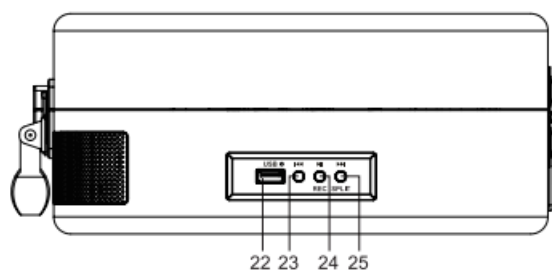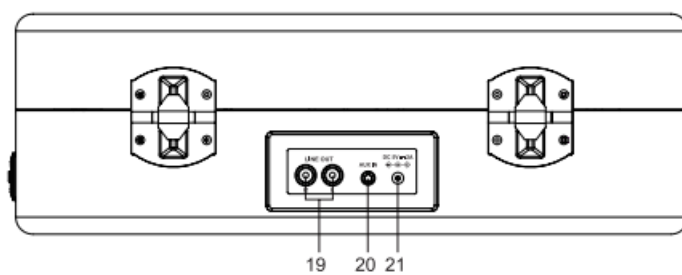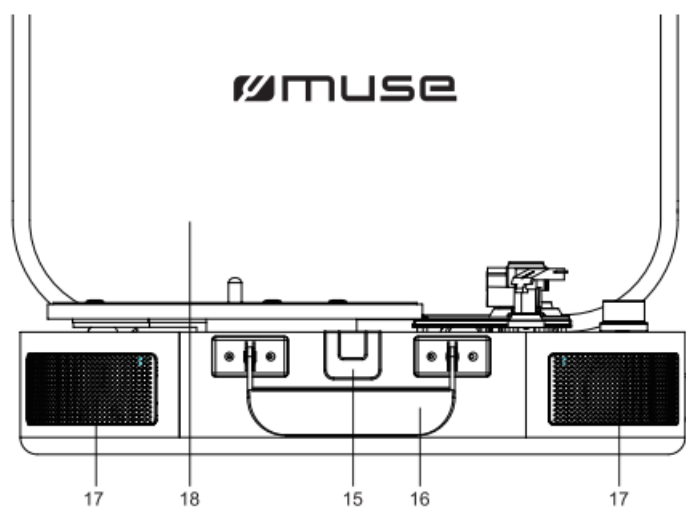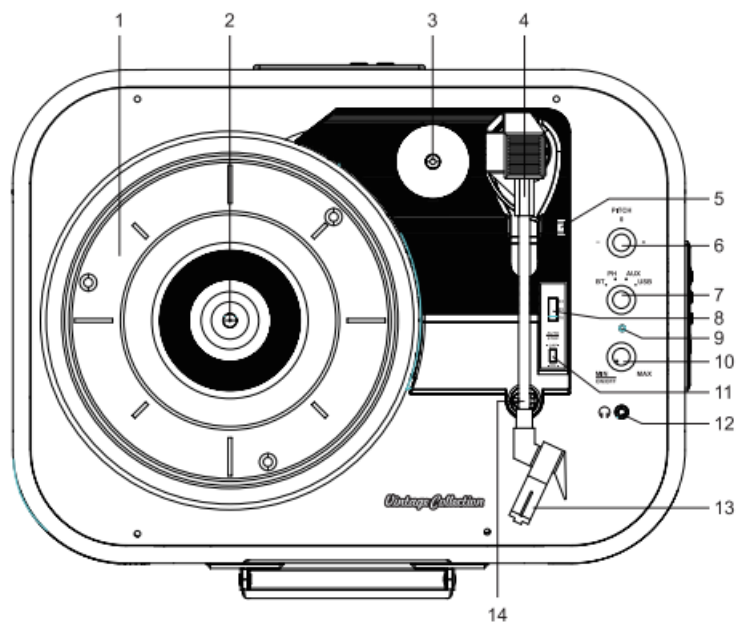

Read the instructions carefully before operating the unit.

TURNTABLE STEREO SYSTEM

LOCATION AND DESCRIPTION CONTROLS

1. Platter
2. Spindle
3. 45 RPM adaptor
4. Tonearm
5. Lift lever
6. PITCH knob (to adjust the speed of the platter)
7. MODE button (to select BLUETOOTH, PHONO, AUX IN, USB mode)
8. Speed selector(33/45/78)
9. Mode indicator
10. POWER ON/OFF and volume control (MIN/MAX)
11. Auto stop (ON/OFF) switch
12. Phones jack

13. Cartridge with stylus
14. Tone armrest
15. Latch
16. Carrying Handle
17. Speakers
18. Phonograph lid
19. External device output jack
20. AUX IN jack
21. DC JACK
22. USB port
23. ⏮ back button
24. REC / ⏸ : RECORD/ PLAY/PAUSE button
25. SPLIT/ ⏭ : Segmented record/next button


POWER SUPPLY

Using the AC adaptor

AC adaptor:

Input 100-240V  50/60Hz 0.4A

Output 5V  2000mA

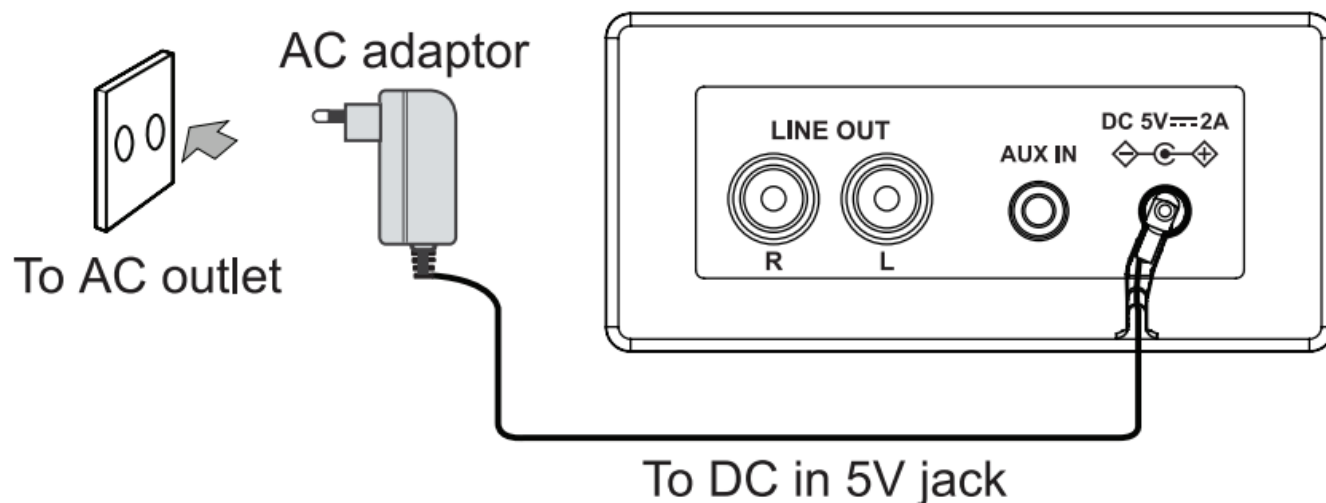

The supplied AC adaptor is suitable for use on AC main supplies of 100-240V AC and should only be connected to the main supply within these parameters.

Caution:

- The included AC adaptor is exclusively intended to be used with this device.
- Turn off the power before unplugging the AC adapter to avoid damaging the device.
- In case of unused for long periods, unplug the AC adapter from the outlet.
- Place the unit near the outlet and make sure it is easily accessible. If a malfunction occurs, immediately disconnect the unit from the wall outlet.
- The adapter enables you to unplug the unit. It must be easily accessible during use.
- To completely turn off the power, unplug the adapter from the wall outlet.
- Never use a damaged power adapter. Place the power cord safely so that you do not pinch or crush it. If the cable is damaged, contact a repair service.

TURN ON/ OFF THE UNIT

1. To turn the unit on, rotate the POWER ON/OFF switch clockwise until a “click” is heard and set the volume (MIN/MAX) to a lower level.
2. When you have finished the unit, rotate the POWER ON/OFF switch counter-clockwise until a “click” is heard to turn off the unit.

LISTEN TO THE PHONO

1. When the unit is on, rotate the MODE button to select the phono mode, function indicator light becomes red.
2. Remove the stylus cover from the stylus and have released the Tone armrest.
3. Place a record on the turntable platter and select the desired speed (33/45/78) according to the record.
NOTE: If you are playing 45 RPM singles, place the 45 RPM adapter on the center spindle.
4. Push up the lift lever to raise the tone arm and gently move the tonearm to the desired position onto the record, Push down the lift lever, and the tone arm slowly onto the record to start playing the record.
5. Rotate the PITCH knob to adjust the speed of the platter.
6. Adjust the volume control (MIN/MAX) to your desired level.
7. If the AUTO STOP ON/OFF Switch is turned ON, the record will stop automatically when finished (For some few vinyl records, it will not stop when it does not come to the end.). If the Auto Stop switch is turned OFF, a record will NOT stop automatically when finished.







IMPORTANT:

Do not turn or stop the Turntable platter manually. Moving or jarring the Turntable plate without securing the Tone Arm Clamp could result in damage to the Tone Arm or Stylus.

USING THE AUX-IN MODE

1. Connect your auxiliary source (e. g. mp3 player) to the AUX IN jack (3.5mm) on the back of the unit. (cable not included).
2. When the unit is on, rotate the MODE button to select AUX IN mode, and the indicator becomes blue and red.
Normally use your external audio appliance, the sound automatically goes through the speakers of your device.
3. Adjust the volume (MIN/MAX) to the desired level.
4. Disconnect the external appliance from the auxiliary input to stop playback.

LISTEN TO THE DEVICE USB

1. Connect a USB device containing MP3 files or an MP3 player to the USB port.
2. When the unit is on, rotate the **MODE** button to select the USB mode, and the indicator becomes red flashing.
The USB starts to play back automatically. Press to  pause, and the indicator keeps remains red without flashing.
3. Adjust the volume (MIN/MAX) to the desired level.
4. Press  to skip forward to the next track or repeatedly to several tracks. Press  return to the beginning of the track or press repeatedly to skip backward several tracks. Press and hold  or  to search quickly within a track.
5. Press  to pause the USB playback.

Removing the USB device

Please be sure to stop playback and turn the unit OFF before removing the USB device to avoid damaging the USB and system.

Note:

- * There are many USB devices in the market. We cannot guarantee to support all different models. Please try another USB device if yours is not supported.
- * The unit might not support all the multimedia files stored in USB because it includes some special playback procedures that might not be compatible with the procedure of this unit.

BLUETOOTH FUNCTION

The **Bluetooth®**

word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by New One S.A.S is under license. Other trademarks and trade names are those of their respective owners.

Pairing a Bluetooth Device

1. When the unit is ON, rotate the MODE button to select Bluetooth mode. The indicator becomes blue flashing.
2. On the Bluetooth device, enable Bluetooth and select "MT-201BT" from the Device




List. (Refer to the user manual of the device to be connected for detailed operations.)

If the Bluetooth device prompts for a passcode, use "0000". Some Bluetooth devices will ask you to accept the connection. If the units are paired properly, you will hear an indication sound.

Tip: If you want to connect your Bluetooth speaker to another Bluetooth audio device, press and hold the button to disconnect the device, and then follow the steps above to make a new connection.



- On some devices such as computers, once paired you must select the unit from the Bluetooth menu and choose "Use as Audio Device (stereo)" or similar.
- Pairing remains intact when the unit and/or your Bluetooth device is taken out of communication range. An active connection will be re-established when your Bluetooth device returns within range.
- When the unit is turned on again, it will automatically try to reconnect with the most recently paired Bluetooth device.

Using a Bluetooth Device

1. With a unit paired (see the previous section), operate your Bluetooth device and its sound will be heard through the MT-201BT's speakers.
2. Press  the button to pause playback. Press again to resume playback.
3. Select desired track with  / 
4. Adjust the volume (MIN/MAX) to the desired level. You can also adjust the volume on the device to which you are paired.

RECORDING FROM PHONO, AUX INTO USB.

1. Connect the USB device to the USB port (Make sure the USB device has enough space to save the encoding).
2. Select one of your favorite modes (PHONO or AUX IN) and start your mode playback.
3. Press the REC button till the indicator becomes blue and red flashing alternately to start the recording.
4. Press the REC button until the indicator becomes blue and red without flashing to stop the recording.

5. To listen to the recording, rotate the MODE button to select the USB mode, and the indicator becomes red flashing, press  /  to find your track, and listen to your recording.

SPLIT FUNCTION

Press the SPLIT button when recording, the current record will be cut off and automatically stored in a file. Press the SPLIT button again will generate another file.

NOTE: Press the  button to stop the recording.

USING HEADPHONES / EARPHONES

Maximum output voltage $\leq 150\text{Mv}$

HEADPHONE VOLUME WARNING

Connect earphones with the volume set low and increase it if required. Prolonged listening through some earphones at high volume settings can result in hearing damage. When headphones/earphones are connected, no sound will be emitted from the unit's speaker.

Caution: Avoid listening to sound at levels that may be harmful to your ears.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

USING THE RCA LINE OUT JACK

Connect one end of the audio cable (cable not included) to the LINE OUT jack on the unit and the other end of the cable connect to the RCA IN jack or AUX IN jack of your other audio drive equipment.

1. Turn on your audio drive equipment.
2. Select one of your favorite modes (BLUETOOTH, PHONO, AUX IN, USB) and start your mode playback.

HOW TO REPLACE THE TURNTABLE STYLUS (NEEDLE)

Removing the Stylus(needle) from the Cartridge

1. Raise the Tone Arm.

To remove the old stylus needle, Place a screwdriver at the tip of the stylus and push downward as shown in direction "A".

2. Remove the stylus by pulling the stylus forward and pushing it downward.



Installing the Stylus

1. Hold the tip of the stylus and insert the stylus by pressing as shown in direction "B".
2. Push the stylus upward as in direction "C" until the stylus locks into the tip position.

TIPS FOR BETTER TURNTABLE PERFORMANCE

1. When opening or closing the turntable cover, handle it gently, gripping it either at the center or at each side.
2. Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
3. Frequently clean the needle tip-use a soft brush in a “back-to-front” motion only.
4. If you must use a needle cleaning fluid, use it very sparingly.
5. Gently wipe the dust cover and turntable housing with a soft cloth. Use only a small amount of mild detergent to clean the turntable and dust cover.
6. Never apply harsh chemicals or solvents to any part of the turntable system.

Hereby, NEW ONE S.A.S, declares that this MUSE MT-201 BTB/ MT-201 BTR/

MT-201 DG/ MT-201 BTP/ MT-201 BTG/ MT-201 BVB is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/ EU. The declaration of conformity may be consulted at www.muse-europe.com

SPECIFICATIONS

GENERAL

Power:

AC ADAPTOR: AC IN 100-240V

AC, 50/60Hz

Output: DC 5V 2000mA

Output Power: 2 x 2W RMS

BLUETOOTH

Bluetooth Version: 4.0

Bluetooth: 2.402-2.48GHz

RF Output Power: 4dBm

Working Distance:

Up to 10 meters measured in open space (walls and structures may affect the range of the device).

Specifications and appearance are subject to change without notice.

MORE INFORMATION



CAUTION: To reduce the risk of electric shock, do not remove the cover (or back). There are no user-serviceable parts inside the unit. Refer all servicing to qualified personnel.



The lightning flash with the arrowhead symbol within the triangle is a warning sign alerting the user of “dangerous voltage” inside the unit.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING!

- The use of apparatus in moderate climates.
- The Marking plate is located on the back of the device.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.
- Ensure that the ventilation openings is not covered with items such as newspapers, tablecloths, curtains, etc.
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Do not expose this appliance to dripping or splashing water.
- Do not place objects filled with liquids, such as glass, vase on the device.
- The power plug is used as a disconnect device and must be easily accessible. To be completely disconnected from the power, the plug of the appliance should be disconnected completely. The socket must not be obstructed and should be easily accessible during intended use.

- Under the influence of fast transient and/or electrostatic electric phenomenon, the product may malfunction and the user must perform a power reset of the device.



■ If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

NEW ONE S.A.S 10, Rue de la Mission, 25480 Ecole Valentin, France



Documents / Resources

	<p>MUSE MT-201BVB Bluetooth suitcase record player encoding function, blue [pdf] User Manual</p> <p>MT-201BVB Bluetooth suitcase record player encoding function blue, MT-201BVB, Bluetooth suitcase record player encoding function blue, suitcase record player encoding function blue, player encoding function blue, function blue</p>
--	--

References

- [MUSE Electrical – Discover our collection ! - MUSE](#)
- [Info-tri | Ministères Écologie Énergie Territoires](#)