

MVP HT3566 4CAST Inc Device Database User Manual

Home » MVP » MVP HT3566 4CAST Inc Device Database User Manual



Contents


- 1 MVP HT3566 4CAST Inc Device **Database**
- 2 Quick guide
- 3 Aevice information
- 4 Setup diagram
- 5 Switch in the applications
- **6 Bluetooth function**
- 7 File browser
- 8 FCC
- 9 Documents / Resources
 - 9.1 References

MVP


MVP HT3566 4CAST Inc Device Database




Quick guide

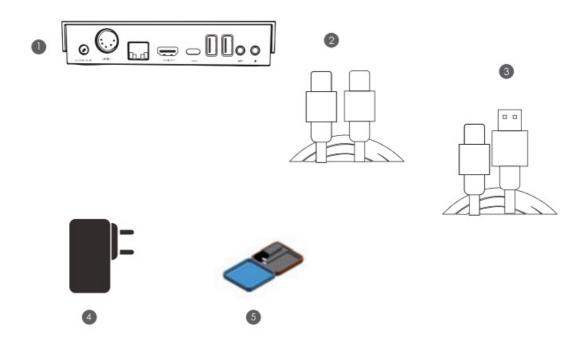


Aevice information

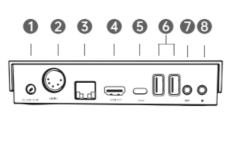

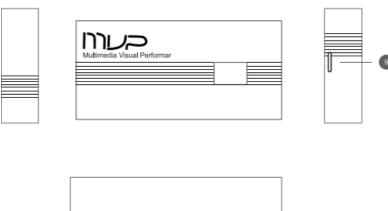

Setup diagram

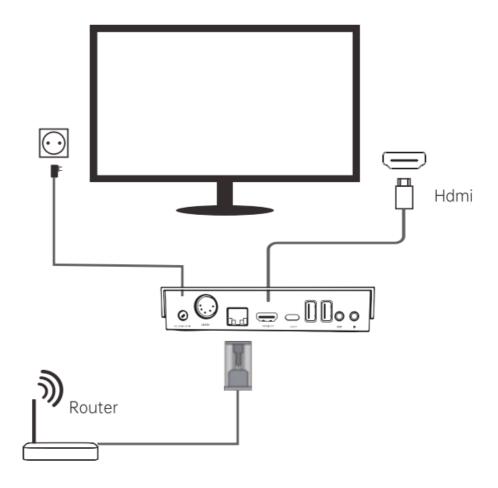


Switch in the applications

App" aton ars to iew recently used programs, dick program icon to switch



Bluetooth function

- Home screen 'settinas 'Bluetooth 'select-Bluetooth" to onen Bluetooth function.
- Choose hotspot tines sword on ect the toothen Bluetooth function

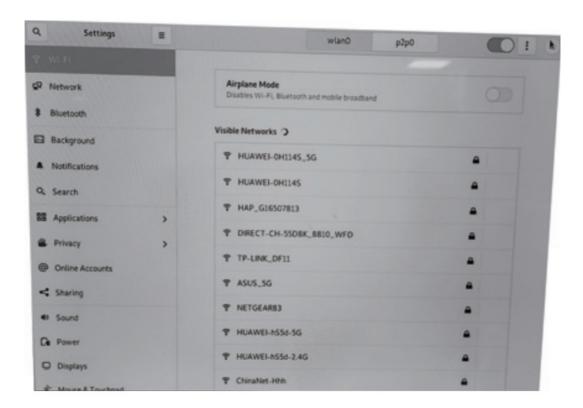

Bluetooth function

- 1. Home screen >settings Bluetooth->select"Bluetooth" to open Bluetooth Function
- 2. Click on the Bluetooth name that needs to be connected, and then click on Connect to connect

File browser

- Move to "file browser". press ok to enter into the device list.
- When inserting with usb device or sd/sdhc/mmc cards, the sign "
- Device is mounting "will be shown on the screen.
- Here you can cut, copy, paste and move the files and folder between
- The local disk and extermal storage card.



Read tf card

- Insert tf card into the device in the status of power on, when icon appears in
- Top left corner of the desktop, open "file browser".
- Storage card will appear under local disk if card' Operationfied external Available now.

Warn

- Under no circumstances should you try to repair the tv box by yourself, as this will
- Invalidate the warranty. do not open thetv boxas there is a risk of electric shock. if a fault
- Occurs, firstly check with points listed below before taking the tv box for repair. If you are
- Unable to remedy a the problem by following hints, consult your dealer for help.

Problem	Solution
No power	-Check if the power adaptor is properly connected to the power and The tv boxPress the power on the remote controller to turn on the power.
No picture	-Re-connect with hdtv cable or av cableCheck if the tv is switched on.
No sound or distorted sound	-Adjust the volumeCheck it the speakers are connected correctly.
No audio or digital output	-Check the digital connectionsCheck if your amplifier is set correctly.
The player does not respond To the Rermote control Player does not respond to Some operating commands During playback	-Aim the remote control directly at the sensor on the front of the Ttv boxReduce the distance to the tv boxReplace the batteries in the remote controlOperations may not be permitted.Refer to the user manualPossibility of system halted,re-insert with power adaptor to Restart.
No sound during movies Playback	-The audio codec may not be supported by the tv box.you can Change to the supported audio on playing menuCheck the volume.
The contents of the usb flash Drive cannot be read	-The usb flash drive format is not compatible with the boxIf one of the usb can not be read,please turn off the tv box for 30 seconds and restart the tv box.
Slow operation of the usb Flash drive	-Big file size or high resolution USB flash drive takes longer time to Read and display on the tv screen.
No sound with hdtv connection	Check the connection between the tv and the hdtv jack of box. Check your TV system setup . Check the volume.
The tv screen is blank and The player led is blinking	-Turn off your tv box.,wait 30 seconds,turn it on againIf under hdtv status,check if hdtv connection is correct or Change another hdtv cable,set the output resolution of this Tv box into 720p.

FCC

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with a minimum distance of 20cm from the radiator of your body. This device and its antenna(s) must not be colocated or operated in conjunction with any other antenna or transmitter.

Documents / Resources



MVP HT3566 4CAST Inc Device Database [pdf] User Manual HT3566 4CAST Inc Device Database, HT3566, 4CAST Inc Device Database, Database Database

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.