



mware MW809 Android TV Box User Manual

[Home](#) » [mware](#) » mware MW809 Android TV Box User Manual 

Contents

- 1 mware MW809 Android TV Box
- 2 Chapter 1 Overview
 - 2.1 Appearance and interface
- 3 BT VOICE REMOTE
- 4 How to pair bluetooth?
- 5 Chapter 2 Initial configuration
- 6 Apps
- 7 Chapter 3 Local media play
- 8 Chapter 4 App Installer
- 9 Chapter 5 Settings
 - 9.1 Network & Time settings
 - 9.2 Sound settings
 - 9.3 Language settings
 - 9.4 System upgrade
- 10 FCC WARNING
- 11 Troubleshooting
- 12 Specification
- 13 Documents / Resources
- 14 Related Posts



 
mware MW809 Android TV Box




Chapter 1 Overview

Appearance and interface


FRONT PANEL

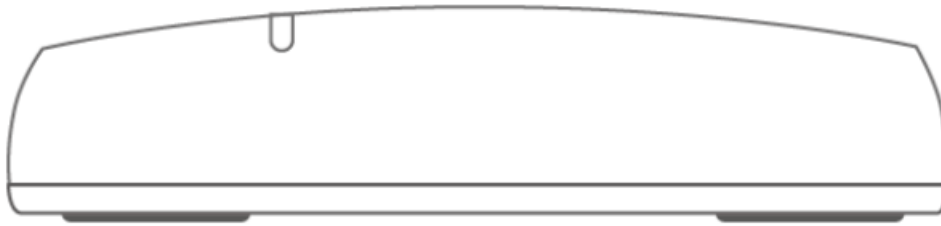

REAR PANEL

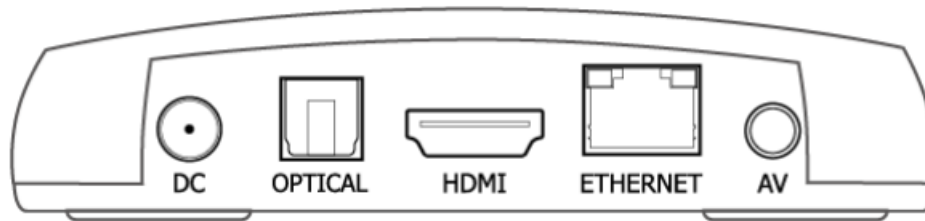 

SIDE PANEL

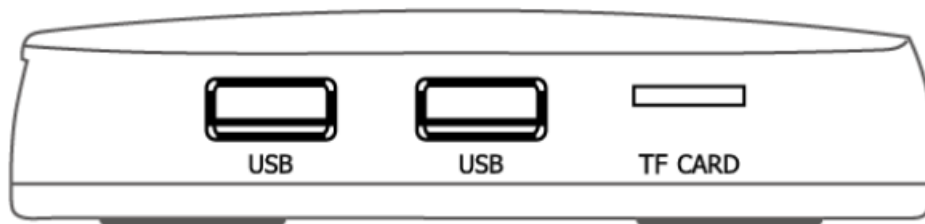 

BT VOICE REMOTE

NO.	BUTTON NAME	ID
1	POWER	
2	VOICE	
3	BACK	
4	HOME	
5	APPS	
6	UP	
7	DOWN	
8	LEFT	
9	RIGHT	
10	OK	
11	MENU	
12	PAUSE/PLAY	
13	STOP	
14	VOL-	
15	VOL+	
16	TELEVISION	
17	TV GUIDE FOR EPG SECTION	
18	SETTINGS	

 
How to pair bluetooth?

- Press "Settings" button in launcher;
- Select "Remote&Accessories", press "OK" button searching for accessories;
- Press "OK" and "VOL-" at the same time about 4 seconds until the red LED will flash quickly;
- Press "OK" on bluetooth device name "R18B-P" option to enter "pair mode"
Noted: if paired successful, LED will be off; otherwise, the LED will be always flashing.
- After the connection is successful, you can choose "unpair" on "R18B-P" option.

Chapter 2 Initial configuration


Standard UI interface

- Power on, enter into main menu.
- Click "Welcome/language/Resolution/Screen Zoom/Network."
- Click "Open Android Setting Menu", or "Settings" on remote, to access the Set-top box Settings menu.
- Login with Username and Password to access the TV service.

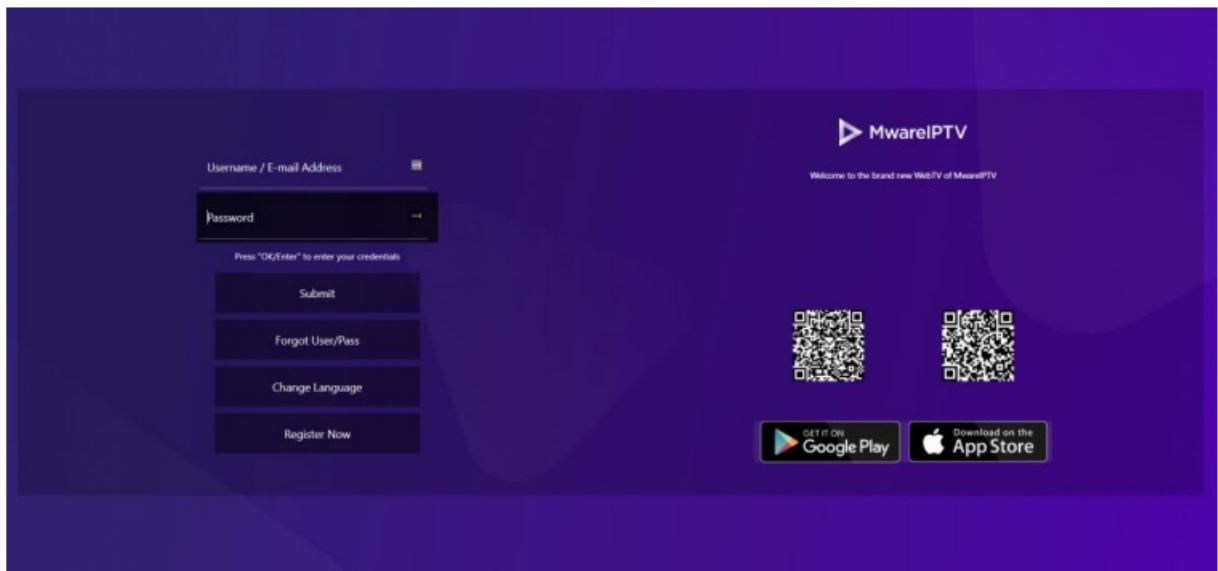

Apps

 
Select "Settings"->"Apps"->"See all apps" for opening or delete other apps.

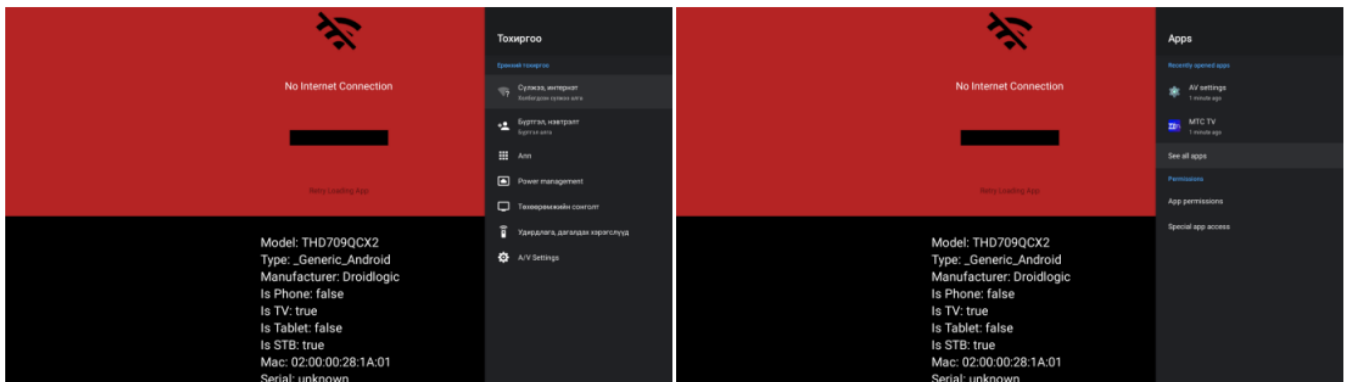


Chapter 3 Local media play

Select "File Browser" from apps->"Open".

 
Select "Local Disk" or "USB" driver, press "OK" button to enter.

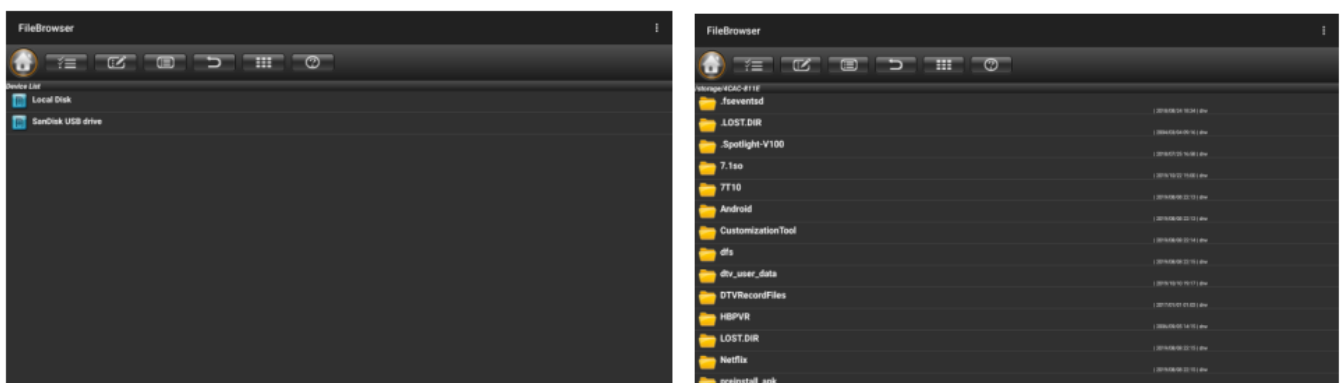

 
Click the video, an option menu will pop up. Select your favorite video player to start playing video.

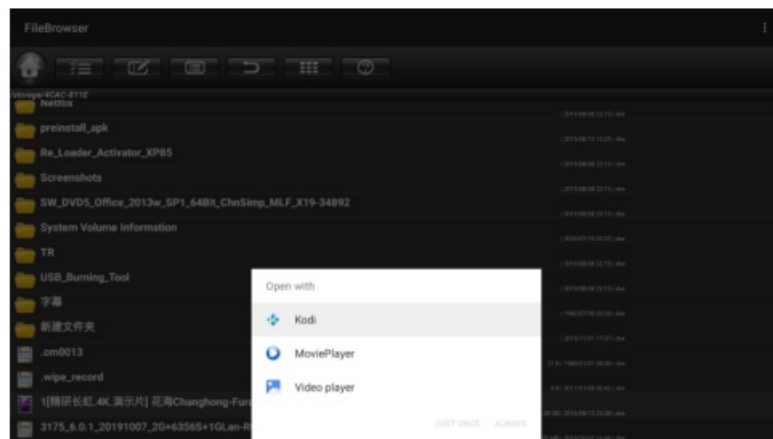

 Click the music, an option menu will pop up.
Select your favorite music player to start playing music.

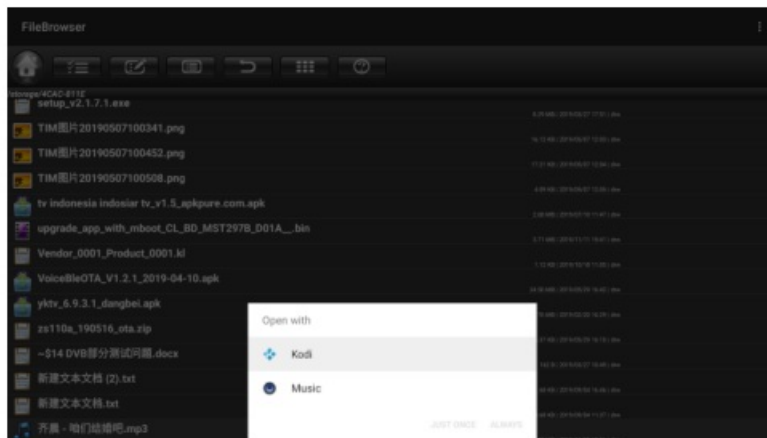


 Click the photo, an option menu will pop up.
Select your favorite photo player to start playing photo.

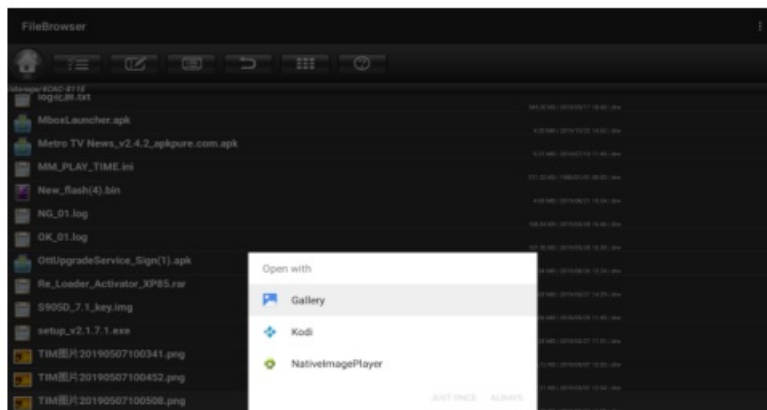


Chapter 4 App Installer

 About AppInstaller

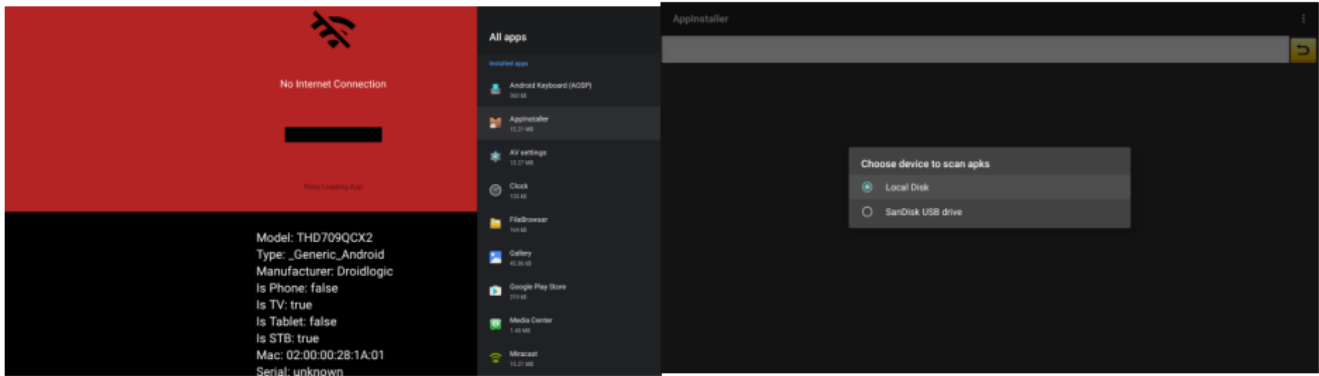

Click “AppInstaller” in apps list.

 Select the driver whose APK allocated.

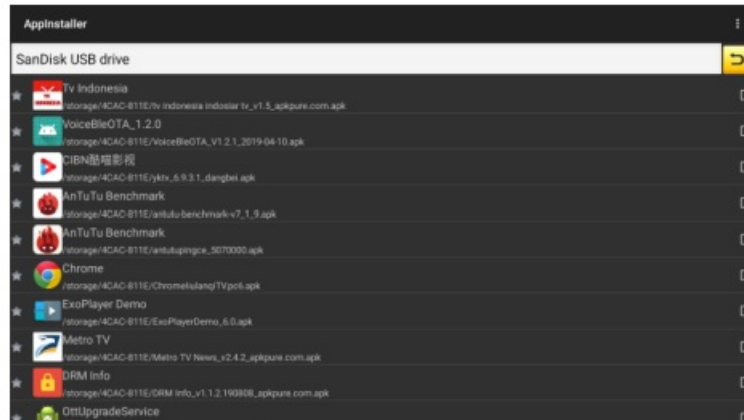

Click the APK you want to install.

About multi-screen communication



DLNA

- Click “Media Center” in Apps list.
- Turn on DLNA DMP” and “DLNA DMR”.
- Turn on DLNA in your android mobile device.
- Start playing the video, music and photo in your android mobile device.

Chapter 5 Settings

You can use setting to re-configure your network, display, language and etc.

 
Network &Time settings

Wifi Settings


- Network-> Wi-Fi/Ethernet, by “IP settings: DHCP”, when plug ethernet cable, ethernet settings will display “Connected”.
- If select “Static IP”, click “static” in IP settings, revise address in IP address bar, network gateway bar and DNS bar, click “Save”.

Time Settings

Select “time and date” and “Time Zone from Settings.

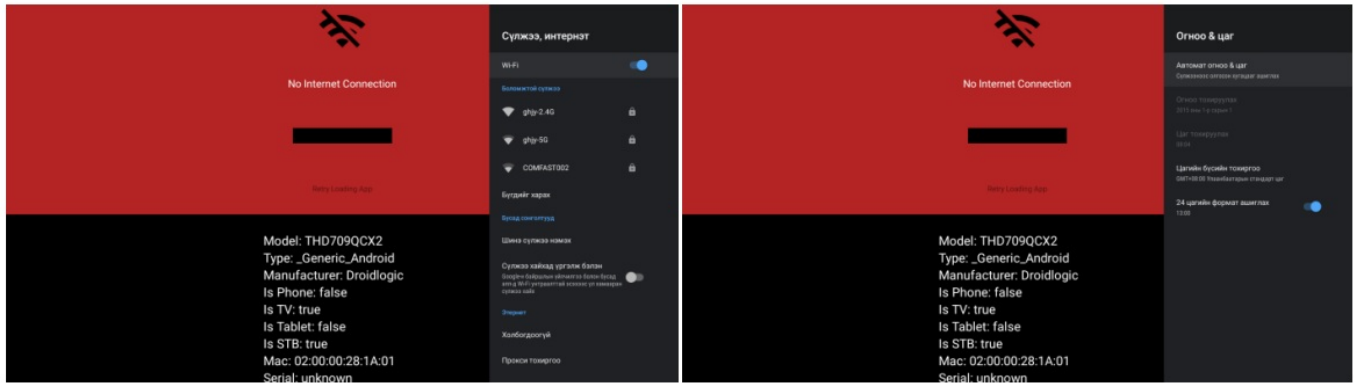

Sound settings

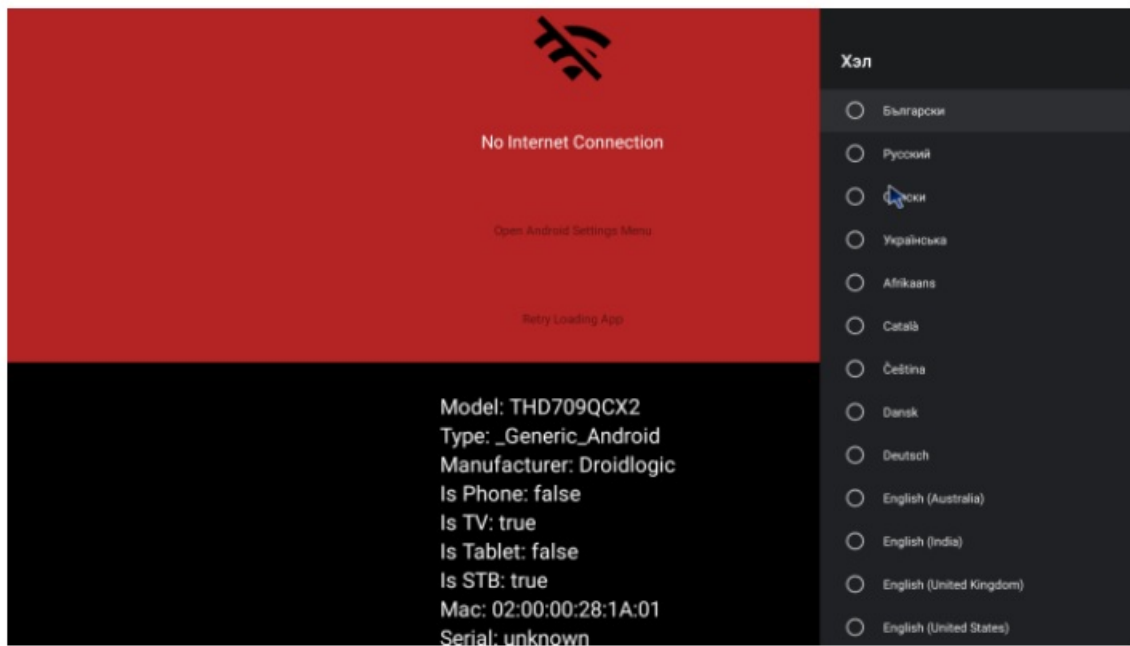 


System sounds

The standard setting is switch on.

Surround sound

Click “Surround sound”, there are (Auto/Always/Never) 3 options for choosing.

 Language settings

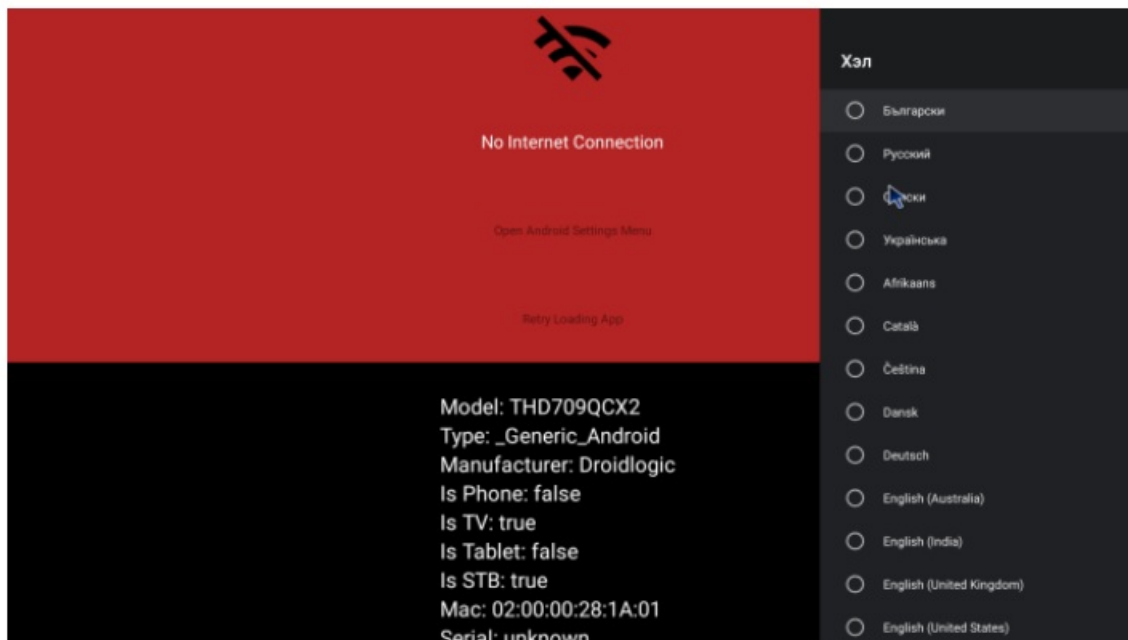


OSD language settings

Click "Language Setting", select the language as OSD language from language list, click "ok" to save and back.

Input method settings

 Click "Input Settings", input method from the list, click "OK" to save and back, then you can use new input method.

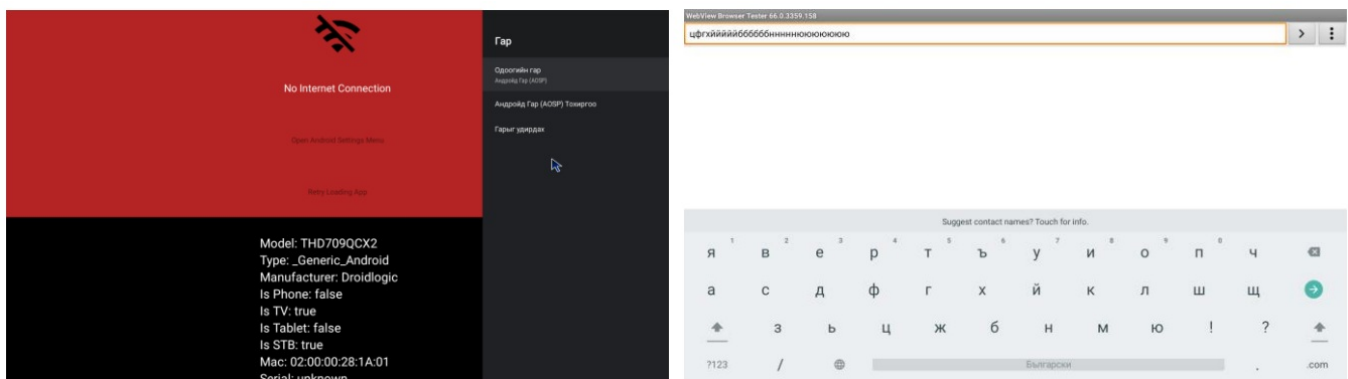

System upgrade

 


Local Update


- Press "Settings" at remote, click "OTA Upgrade".

- Select “Local Update”, click ”OK” to enter.
- Click “Select” button, select the new software,
- Select “Wipe Data” and “Wipe Media”.
- Click ”Update” to start update.

System information

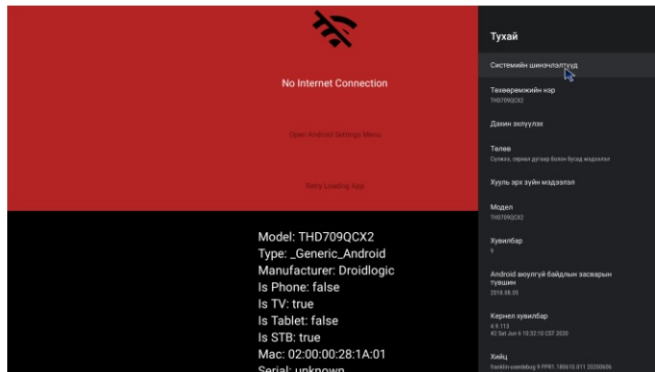

System information

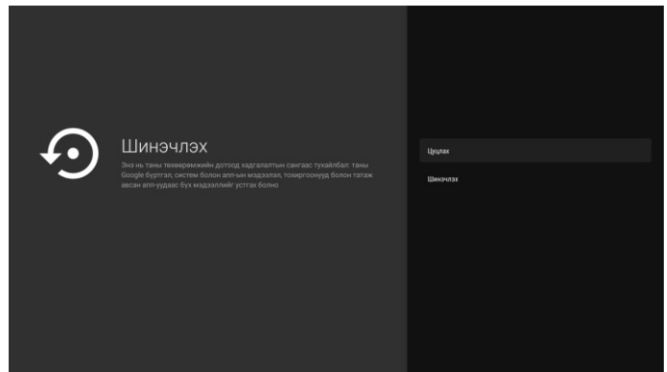 

Storage & reset

FCC WARNING

Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment of Wireless Router should be installed and operated with minimum distance 20cm between the radiator & your body.

The remoter can be use without any restrictions


Troubleshooting

Problem	Possible cause	What to do
Power light not lit	Mains lead unplugged Mains fuse blown	Check mains lead Check fuse
Network doesn't work	Network cable not connected or bad network cable Wi-Fi not connected wifi	Connect/replace network cable Check Wi-Fi account/setting
No picture or sound	HDMI/AV is not selected on your TV	Reduce to another channel
No sound distort	Volume off Speaker not connected The audio codec may not be supported	Adjust the voice volume Check Speaker connection Refer to the user manual
No response to remote	Receiver off Handset not aimed correctly Front panel obstructed Hand set batteries exhausted	Aim handset at front panel Check for obstructions Replace handset batteries
USB can not be read	USB driver format not compatible or Broken USB Large file in USB driver to slowly read USB	Replace USB driver Remove large file in USB
Video playing abnormal	Video source is abnormal Network abnormal Video codec may not supported	Change video source Check Wi-Fi or Ethernet status Refer to user manual

Specification

CPU	AMLOGIC S905X2 QUAD-CORE 64-BIT CORTEX-A53 UP TO 1.8GHz
GPU	ARM Mali-G31
MEMORY	2G DDRIII 8G EMMC FLASH
OS	ANDROID 9.0
DECODER VIDEO DECODER AUDIO DECODER PHOTO DECODER VIDEO FORMATS	4K2160P 60FPS H.265,MP@L4.0,Main10@L5.1 MP3,AAC,HE-AAC,WMA,RM,FLAC,Ogg JPG,JPEG,MJPEG,PNG MPEG2,MPEG4,H.264(AVC),H.265(HEVC),VC1,WMV,VP9,MKV ,MPG,MPEG,DAT,AVI,MOV,ISO,MP4,RM,JPG
CONNECTION MAIN POWER CABLE DATA PORT HDMI OPTICAL AV ETHERNET	FIXED TYPE USB 2.0*1/USB3.0*1/ TF X1 HDMI OUTPUT x1 SPDIF x1 AV OUTPUTx1 RJ45x1
POWER SUPPLY INPUT VOLTAGE POWER CONSUMPTION	12V/1A MAX. 12W

Documents / Resources

	mware MW809 Android TV Box [pdf] User Manual MW809, 2ARYY-MW809, 2ARYYMW809, R18BP, 2ARYY-R18BP, 2ARYYR18BP, MW809 Android TV Box, MW809, Android TV Box
---	---