

 MY ARCADE®

DGUNL-3220 Pac-Man Video Game Machine



My Arcade DGUNL-3220 Pac-Man Video Game Machine User Guide

[Home](#) » [MY ARCADE](#) » My Arcade DGUNL-3220 Pac-Man Video Game Machine User Guide 

Contents

- [1 My Arcade DGUNL-3220 Pac-Man Video Game Machine](#)
- [2 Includes](#)
- [3 Product Overview](#)
- [4 How to remove the joystick](#)
- [5 How to insert and remove batteries](#)
- [6 FCC information](#)
- [7 Warranty information](#)
- [8 Service Information](#)
- [9 FAQs](#)
- [10 Video-My Arcade DGUNL-3220 Pac-Man Video Game Machine](#)
- [11 References](#)
- [12 Related Posts](#)



 
 
 
My Arcade DGUNL-3220 Pac-Man Video Game Machine



Includes

- Micro Player™, removable joystick, and user guide
- Materials needed (not included)
- 4 AA batteries and mini-screwdriver, or Micro-USB power cable
- Please read and follow this user guide thoroughly before use.

Product Overview

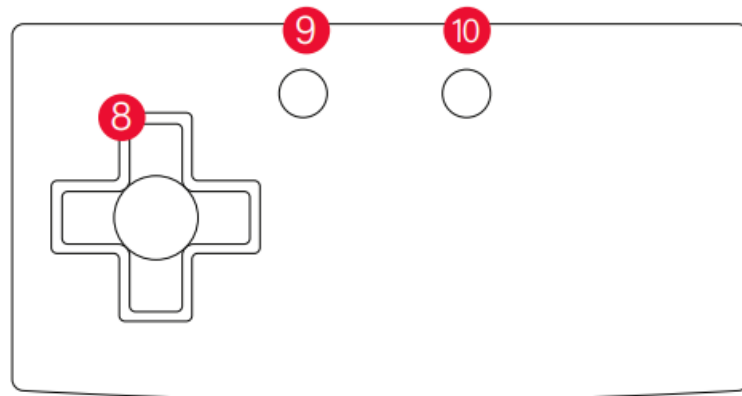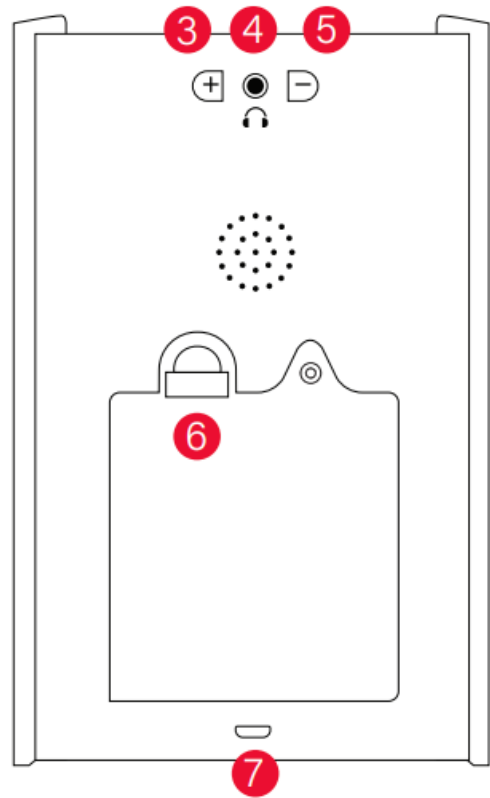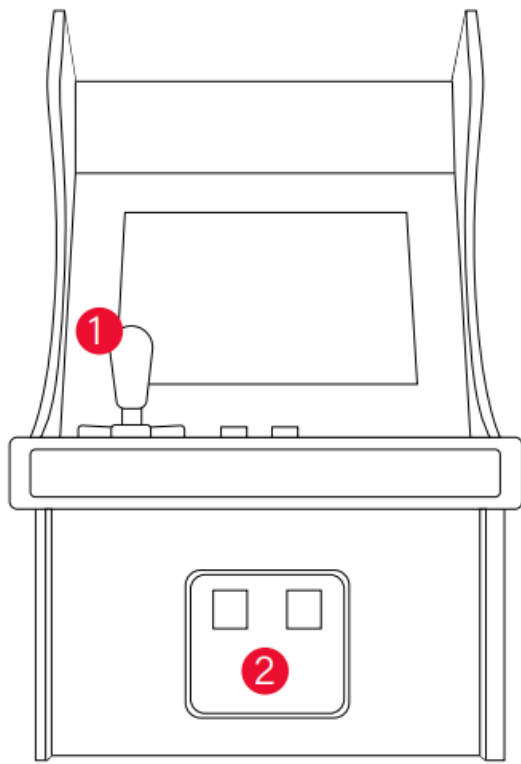



1. Removable joystick
2. On/off button
3. Volume up
4. Headphone port
5. Volume down
6. Battery cover
7. Power port (5V IN)
8. Directional pad
9. RESET button
10. START button

PAC-MAN™

Guide PAC-MAN™ through the maze and eat as many small dots (PAC-DOTS) and large dots (Power Pellets) before the ghosts catch up to you. Each PAC-DOT is worth 10 points and the Power Pellets are worth 50 points. When the Power Pellets have been activated, move quickly to eat the blue ghosts to get bonus points. For

additional bonus points, eat the fruit when they appear in the maze.

  How to remove the joystick

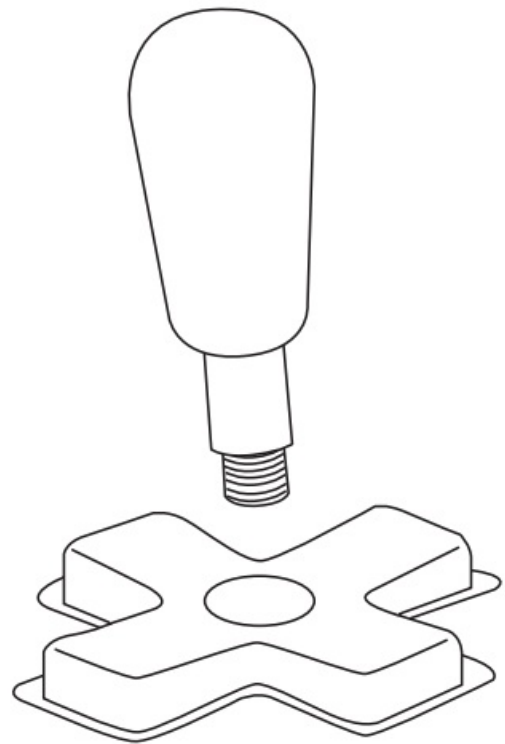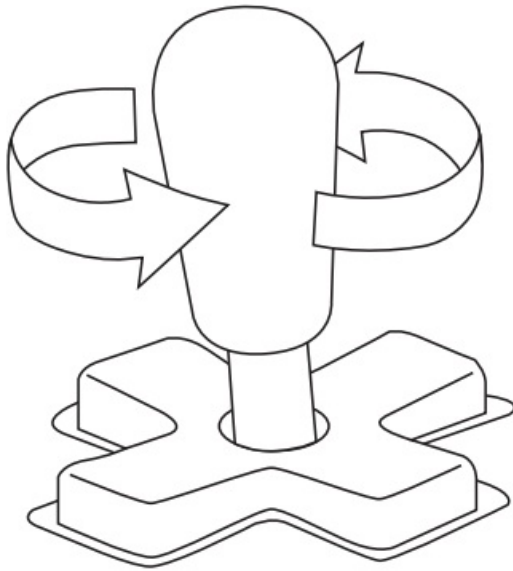

Button and port functions

 
 
- On/off button – Turns the device on and off.
- Volume buttons – To raise and lower the volume.
- Headphone port – To use a 3.5 mm headphone (not included).
- Power port (5V IN) – To power the Micro Player™ with a Micro-USB cable (not included).
- Directional pad and joystick – To move PAC-MAN™.
- RESET button – To return to the main menu.
- START button – To start and pause the game.

Playing on the Micro Player™

1. Remove the battery cover located on the back of the console.
2. Insert 4 AA batteries and replace the battery cover.
3. If you do not want to use batteries, gently insert the Micro-USB end of a Micro-USB cable (not included) into the power port (5V IN) located on the back of the console. Gently insert the other end of the cable into a powered USB port. When using this option you do not need to add batteries.
4. Press the on/off button.

NOTE: A high score does not save after the device has been turned off.

How to insert and remove batteries

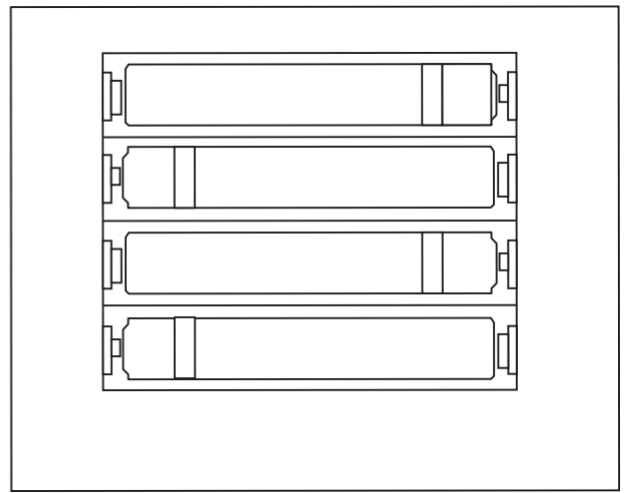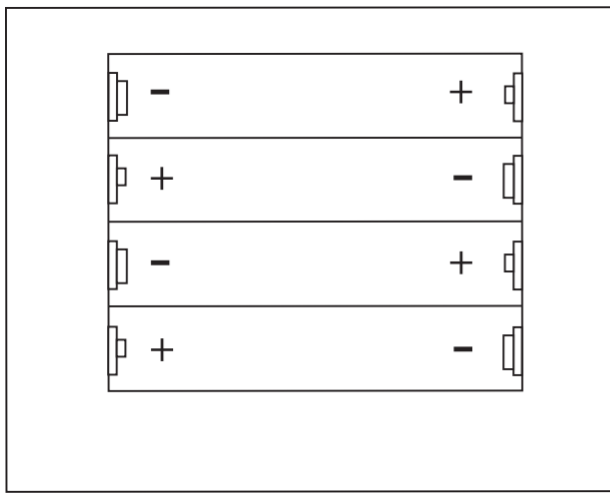


IMPORTANT: Use high-quality Alkaline batteries for longer playing times.

Battery information

Leakage of battery acid can cause personal injury as well as damage to this product. If battery leakage occurs, thoroughly wash the affected skin and clothes. Keep battery acid away from your eyes and mouth. Leaking batteries may make popping sounds.

 - Batteries should be installed and replaced only by an adult.
- Do not mix used and new batteries (replace all batteries at the same time).
- Do not mix different brands of batteries.
- We do not recommend using batteries labeled “Heavy Duty”, “General Use”, “Zinc Chloride”, or “Zinc Carbon”.
- Do not leave batteries in the controller for long periods of non-use.
- Remove batteries and store them in a cool, dry place when not in use.
- Remove depleted batteries from the unit.
- Do not put the batteries in backward. Make sure that the positive (+) and negative (-) ends are facing in the correct direction. Insert the negative end first.
- Do not use damaged, deformed or leaking batteries.
- Do not recharge non-rechargeable batteries.
- Remove rechargeable batteries from the device before charging.
- Dispose of batteries only at the government-approved recycling facilities in your area.
- Do not short-circuit battery terminals.
- Tampering with the product can result in damage to your product, void of warranty and could cause injuries.
- **Warning:** CHOKING HAZARD small parts. Not suitable for children under 36 months.
- The restriction accompanies the age warning.
- The adapter for use with the device requires: 5V DC, 1A.
- Only use an adapter that meets the device’s requirements.
- The adapter is not a toy.
- Adapters used with the device are to be regularly examined for damage to the cord, plug, enclosure and other parts.
- Please keep user guide for important information.
- The toy shall only be used with a transformer for toys or a power supply for toys.
- Rechargeable batteries should be charged under adult supervision.
- The product should only be connected to equipment bearing either of the following symbols.

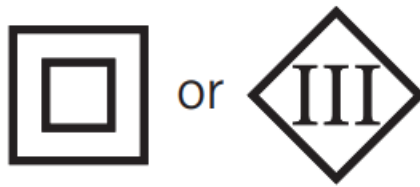

FCC information

This equipment has been tested and found to comply with the limits for a Class B Digital Device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used per the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

Modifications not authorized by the manufacturer may void the user's authority to operate this device. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Warranty information

All MY ARCADE® products come with a limited warranty and have been subjected to a thorough series of tests to ensure the highest level of dependability and compatibility. It is unlikely that you will experience any problem, but if a defect should become apparent during the use of this product, MY ARCADE® warrants to the original consumer purchaser that this product will be free from defects in material and workmanship for 120 days from the date of your original purchase..

If a defect covered by this warranty occurs to a product purchased in the U.S. or Canada, MY ARCADE®, at its option, will repair or replace the product purchased at no charge or refund the original purchase price. If a replacement is necessary and your product is no longer available, a comparable product may be substituted at the sole discretion of MY ARCADE®. For MY ARCADE® products purchased outside of the U.S. and Canada, please ask the store where it was purchased for further information.

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or any other cause not related to either materials or workmanship. This warranty does not apply to products used for any industrial, professional or commercial purposes.

Service Information

For service on any defective product under the 120-day warranty policy, please contact Consumer Support to

obtain a Return Authorization Number. MY ARCADE® reserves the right to require the return of the defective product and proof of purchase.

NOTE: MY ARCADE® will not process any defective claims without a Return Authorization Number.

- **Consumer support hotline**

[877-999-3732](tel:877-999-3732) (U.S. and Canada only)

or [310-222-1045](tel:310-222-1045) (International)

- **Consumer support email:**support@MyArcadeGaming.com

- **Website:** www.MyArcadeGaming.com

- **Save a tree, register online:** MY ARCADE® is making the eco-friendly choice to have all products registered online. This saves the printing of physical paper registration cards. All the information you need to register your recent MY ARCADE® purchase is available at: www.MyArcadeGaming.com/product-registration

- **Declaration of Conformity** A copy of the EU Declaration of Conformity for this product can be found at this link: www.MyArcadeGaming.com/products/pac-man-micro-player

- **Register products at:** MyArcadeGaming.com

@MyArcadeRetro

FAQs

What games are included in the My Arcade DGUNL-3220?

The My Arcade DGUNL-3220 features the iconic Pac-Man game, where you navigate Pac-Man through a maze, eating pellets and avoiding ghosts to achieve a high score.

How big is the screen on the My Arcade DGUNL-3220?

The My Arcade DGUNL-3220 comes with a 2.75-inch full-color display, providing a vibrant and clear visual experience for playing Pac-Man.

How can I control the game on the My Arcade DGUNL-3220?

The My Arcade DGUNL-3220 uses button controls for maneuvering Pac-Man. You can also remove the joystick to use the directional pad instead.

What is the power source for the My Arcade DGUNL-3220?

The My Arcade DGUNL-3220 can be powered by either 4 AA batteries (sold separately) or a micro USB

connection for flexible gaming options.

What audio features does the My Arcade DGUNL-3220 offer?

The My Arcade DGUNL-3220 comes with an external speaker, volume controls, and the option to plug in headphones via the 3.5mm jack for a personalized sound experience.

What is the gameplay like on the My Arcade DGUNL-3220?

The My Arcade DGUNL-3220 offers classic Pac-Man gameplay, where you must navigate through the maze, collect dots, and avoid the four ghosts—Blinky, Pinky, Inky, and Clyde.

 
How long can I play on the My Arcade DGUNL-3220 before the batteries run out?

With the 4 AA batteries (not included), the My Arcade DGUNL-3220 offers hours of gameplay, providing long-lasting fun before needing to replace the batteries.

With the 4 AA batteries (not included), the My Arcade DGUNL-3220 offers hours of gameplay, providing long-lasting fun before needing to replace the batteries.

The My Arcade DGUNL-3220 faithfully recreates the original Pac-Man experience with its classic gameplay, original sound effects, and retro graphics displayed on a vibrant LCD screen.

Video-My Arcade DGUNL-3220 Pac-Man Video Game Machine



[Download this Manual: My Arcade DGUNL-3220 Pac-Man Video Game Machine User Guide Man-Video-Game-Machine.mp4](#)

References

- [User Manual](#)

ul>

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.