



MY REAL JAM 662881 Keyboard Instruction Manual

[Home](#) » [MY REAL JAM](#) » MY REAL JAM 662881 Keyboard Instruction Manual 



**662881 Keyboard
Instruction Manual**



Contents

- 1 662881 Keyboard
- 2 BATTERY REPLACEMENT
- 3 YOUR KEYBOARD
- 4 TROUBLESHOOTING
- 5 Start your own band!
- 6 IMPORTANT INFORMATION
- 7 LIMITED WARRANTY
- 8 BATTERY SAFETY INFORMATION
- 9 FCC COMPLIANCE
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

662881 Keyboard

 
AGES 3+

ADULT SUPERVISION RECOMMENDED

ADULT BATTERY INSTALLATION REQUIRED

CONTENTS

A. Keyboard

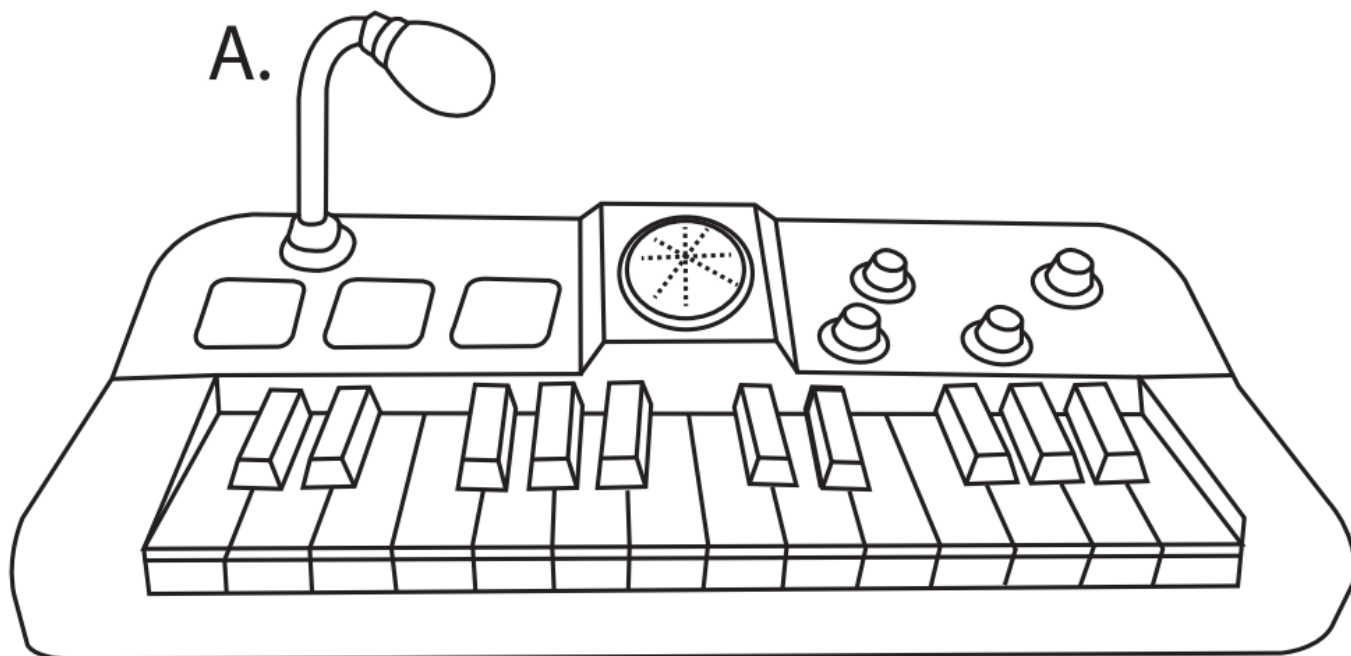

IMPORTANT NOTE!



Your instrument will NOT work as a Bluetooth® speaker.

It will NOT continuously stream music from your device. This instrument has been designed to be as an INTERACTIVE toy to encourage your child to play along to their favorite songs.

FOR INSTRUCTIONAL VIDEOS:



<https://www.myrealjam-qr.com>

Illustrations are for reference only. Styles may vary from actual contents.

 
Please remove all packaging including tags, ties & tacking stitches before giving this product to a child.

BATTERY REPLACEMENT


The batteries included in the unit are for an in-store demonstration. Before playing, an adult must install fresh alkaline batteries (not included) in the unit. Here's how:

1. Using a Phillips screwdriver (not included), remove the screws and battery compartment cover located under the unit.
2. Install three (3) fresh 1.5V AA (LR6) alkaline batteries (not included) in the unit making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.

3. Replace the compartment cover and tighten the screws.

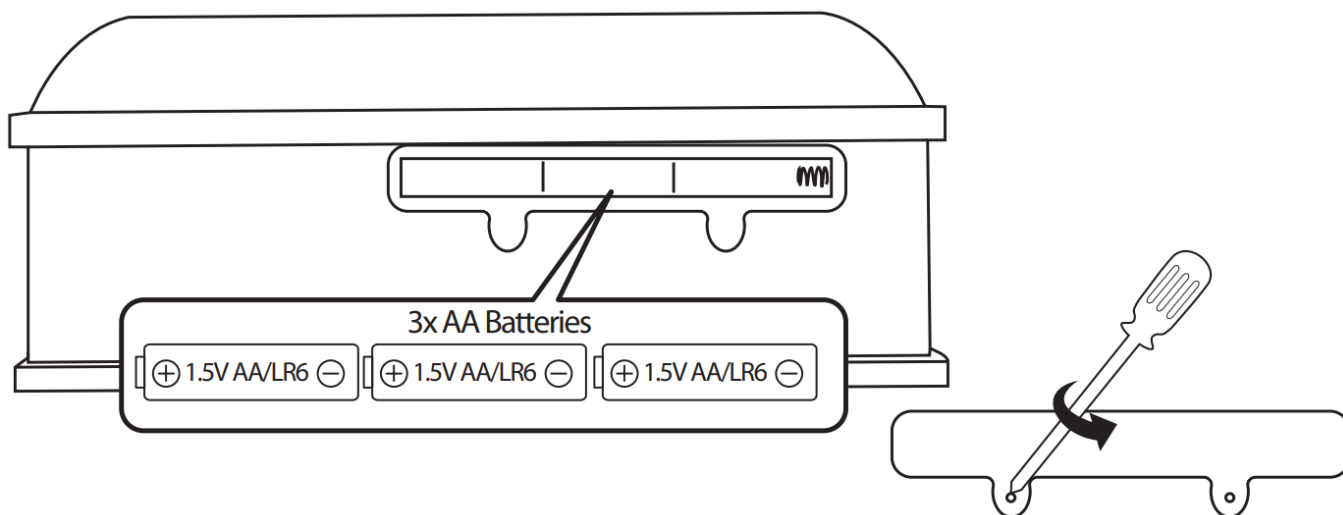

YOUR KEYBOARD

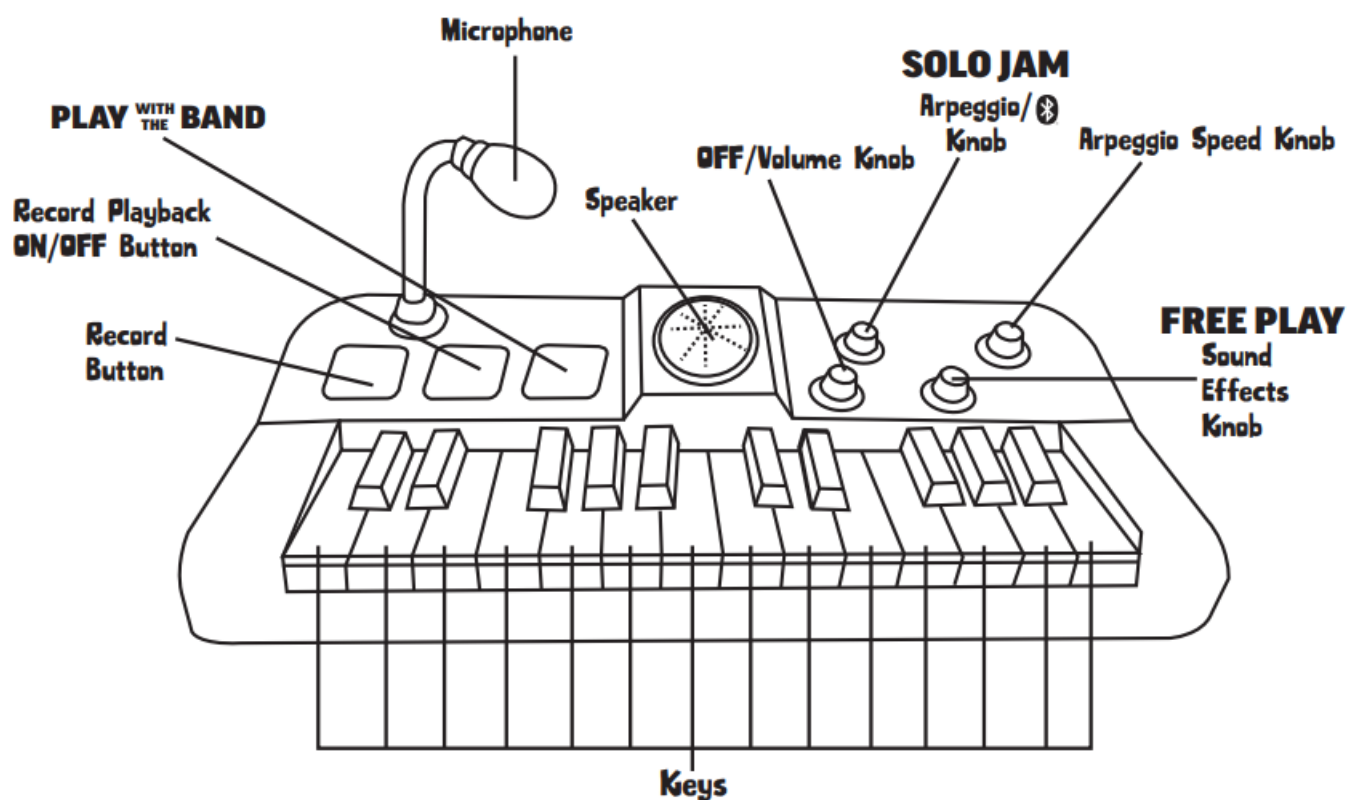 

OFF/Volume Knob:

To turn on the keyboard turn the dial to the volume.


SOLO JAM

Arpeggio/Bluetooth Knob:

- When playing with the piano, move the dial to change the number of notes each key will play.

NOTES



 Move the dial to the Bluetooth® icon and follow the steps on page 3 to connect the keyboard to your device.




Arpeggio Speed Knob:

Turn the dial to control the speed of the arpeggio's tempo.

FREE PLAY

Sound Effects Knob:

Turn the knob to add sound effects.

- Flanger 
- Regular Piano 
- Electronic 



Record Button

1. Press and hold the Record button.
2. When you hear a beep, the keyboard will start recording.
3. Record your audio.
4. Release the Record button.
5. Turn the Sound Effects Knob to the piano symbol and make sure the Arpeggio/Bluetooth® knob is not on the Bluetooth®.
6. Press the Record Playback ON/OFF button to activate the recorded sound.

NOTE: Speak directly into the microphone when recording your audio.



Record Playback ON/OFF Button:

Press to activate the recorded sound.



PLAY BAND WITH THE



Bluetooth®

Press once to turn on the band. Press the keys on the piano to add the piano to the band. Press again to turn off the band.

While in Bluetooth®, press once to start the song on your device and play it like a speaker. Pressing the keys will pause the music.

NOTE: When you play the keys, the keyboard music will start. The music will stop playing when you stop playing the keys.



Jam out to your favorite song by connecting the keyboard to your device. Here's how:

1. Move the dial to the Bluetooth® icon. It will continuously play music while it is searching for your device.
2. Open the settings menu on your device.
3. Select Bluetooth® on your device and make sure it is on.
4. Your device will search for the keyboard.
5. Select the name "MGA Keyboard" to connect your device.

6. Follow the steps under Jam Out to Your Favorite Song to play music from your device.

Note: The instrument can only connect to one smart device at a time. You will not be able to connect two devices to the same instrument.

Jam out to your favorite song!

When using your device, follow the below steps.

1. Connect the device to your keyboard. Follow the steps under Bluetooth®.
2. Make sure the volume on your device is set to the maximum volume.
3. Choose your favorite song.
4. Make sure the song is on pause and make sure the device is NOT in Silent Mode.
5. Continuously play the keys to start the song. If you stop playing the keyboard, the song will continue for a few seconds and then pause. Play the keyboard again to continue the song.


IMPORTANT NOTE: If you stop playing, the music will stop and the instrument will say, “Yeah, Keep playing!” Continue to press the keys to continue playing the music.
For the best experience, choose a song that is the instrument’s genre.

TROUBLESHOOTING

PROBLEM	POSSIBLE SOLUTIONS
The instrument isn't playing the device's song.	<ul style="list-style-type: none">• Make sure the device is connected through Bluetooth®.• Make sure the volume on the device is turned all the way up.• Make sure the device is NOT in Silent Mode.• After choosing a song, exit the app but don't close it. Alternatively, you can put the phone to sleep, but make sure the app is still running in the background.
The instrument stopped working.	<ul style="list-style-type: none">• The batteries included in the instrument are for an in-store demonstration. It is recommended to replace the batteries before playing.• Make sure it is on and the volume is turned up.

Start your own band!

 
COLLECT THEM ALL!
EACH IS SOLD SEPARATELY.

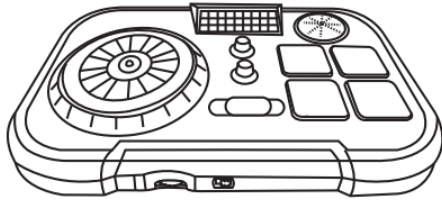


DJ MIXER



 DRUM SET

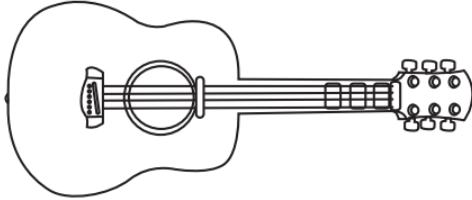


ACOUSTIC GUITAR

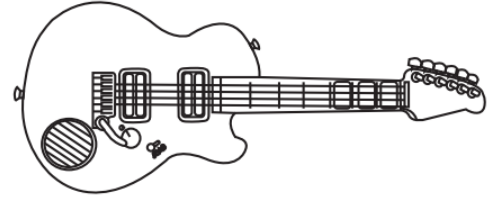 

ELECTRIC GUITAR

IMPORTANT INFORMATION

- The batteries included are for an in-store demonstration. It is recommended to change the batteries before playing.
- To conserve battery power, always turn the unit off by moving the dial to the off () position.
- After 30 seconds of no activity, the unit will go into sleep mode. Press any key to wake it up.
- When using the record feature, the previously recorded audio will delete each time you record something new.

LIMITED WARRANTY

The Little Tikes Company makes fun, high-quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (a dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or the replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers. U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after the warranty expires—contact us for details. Outside U.S.A and Canada: Contact the place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

BATTERY SAFETY INFORMATION

- Use only size “AA” (LR6) alkaline batteries (3 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer’s instructions.

- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

CAN ICES-3 (B)/NMB-3(B).

Hereby, MGA Entertainment, declares that the radio equipment type (keyboard) is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://bit.ly/MGAEDoC> 'Let's care for the environment!'

The wheellie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.

© The Little Tikes Company, an MGA Entertainment company.

LITTLE TIKES® and MY REAL JAM™ are trademarks of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc and any use of such marks by MGA Entertainment, Inc. is under license. Other trademarks and trade names are those of their respective owners.



Printed in China


0322-0-E/INT







www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au

Little Tikes Consumer Service 2180 Barlow Road Hudson, Ohio 44236 U.S.A. 1-800-32 1-0183	MGA Entertainment UK Ltd. 50 Presley Way, Crownhill, Milton Keynes, MK8 0ES, Bucks, UK support@LittleTikesStore.co.uk Tel: +0 800 521 558	MGA Entertainment (Netherlands) V. Baronie 68-70, 2404XG Alphen a/c jn The Netherlands Tel: +31 (0) 172 758038
---	---	---

Documents / Resources

	MY REAL JAM 662881 Keyboard [pdf] Instruction Manual 662881 Keyboard, 662881, Keyboard
---	---

References

-  [Official Home of Little Tikes UK](#)
-  [Official Little Tikes Website | Parent Trusted for Over 50 Years](#)
-  [Little Tikes | Fun & Learning Toys For All Ages - Australia](#)
-  [Smartsheet](#)