

myCharge Universal Charger 6000 MYC-0900-1RM, MYC-0901-1RM, MYC-0902-1RM User Manual

Home » Support » myCharge Universal Charger 6000 MYC-0900-1RM, MYC-0901-1RM, MYC-0902-1RM User
Manual ™

Contents

- 1 myCharge Universal Charger 6000 MYC-0900-1RM, MYC-0901-1RM, MYC-0902-
- 1RM
- 2 In The Box
- 3 Section I: Quick Start
- 4 Section II: Charging Universal Charger 6000
- **5 Section III: Charging Devices**
- 6 Section IV: Checking Battery Level
- 7 Section V: Maintenance
- 8 Section VI: Product Specifications
- 9 Section VII: Troubleshooting
- **10 ONE YEAR LIMITED WARRANTY**
- 11 myCharge Service Center
- 12 WARNINGS
- 13 FCC COMPLIANCE STATEMENT
- 14 myCharge Service Center
- 15 DOWNLOAD
- **16 Related Posts**

myCharge Universal Charger 6000 MYC-0900-1RM, MYC-0901-1RM, MYC-0902-1RM

OWNER'S MANUALS




For latest instructions please go to www.mycharge.com/instructions

Thank you for choosing myCharge Universal Charger 6000™

In The Box

- myCharge Universal Charger 6000
- · Charging cable with included tips
 - Apple 30-pin (1.0A)
 - Apple 30-pin (2.1A) for charging iPads
 - Micro-USB also charges your myCharge
 - Mini-USB
- · Carrying pouch
- · Owner's manual

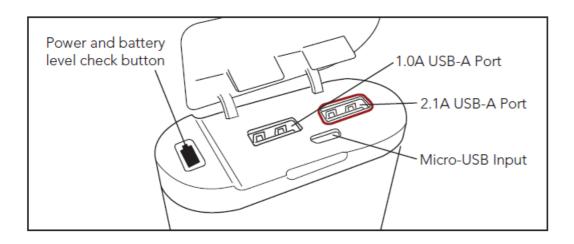


Section I: Quick Start

- 1. Charge up your Universal Charger 6000 with the included USB to Micro-USB cord through your computer or USB AC power adapter.
- 2. As Universal Charger 6000 charges, the battery icon will flash the color of the battery level. When the unit is fully charged, the battery icon will turn solid green. Press the level check button to see how much power is available.

- 3. Universal Charger 6000 comes equipped with two built-in USB ports and a charging cable with the following tips: Apple 30-pin, Micro-USB, and Mini-USB. You can also use your own cable(s) to charge other devices through the USB ports. Connect your device to one of the ports available. You must press and hold the Universal Charger's power button for 3 seconds to begin charging if the unit is not already turned on.
- 4. Unplug your device when it's charged, and go! Your Universal Charger 6000 will automatically power off after your devices are unplugged.

Section II: Charging Universal Charger 6000

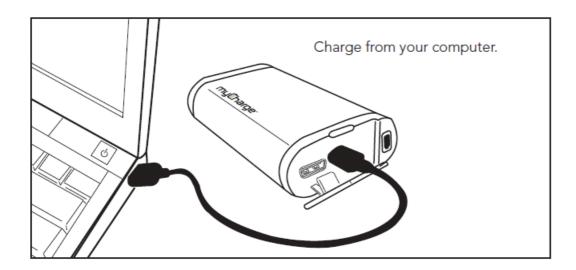

Connect the included charging cable with the Micro-USB tip through your computer's USB port or a USB AC power adapter. Times to charge the Universal Charger 6000 vary based on what it's plugged into. You can expect a full charge from a USB AC power adapter in about 7.5 hours or from a standard USB port in about 13.5 hours.

As your Universal Charger 6000 charges, the battery icon will flash according to the energy level:

Solid Green: 100% Flashing Green: 71–99% Flashing Yellow: 41–70%

Flashing Red: 0-40%

Note: It is normal for your Universal Charger 6000 to be warm to the touch while in use.

Section III: Charging Devices

If the Universal Charger 6000 isn't already turned on, press and hold the power button for 3 seconds to begin charging.

Up to two devices can be charged simultaneously. The Universal Charger 6000's USB ports support the majority of mobile devices including smartphones, tablets, Bluetooth headsets, portable navigation devices, MP3 players, and more.

Section IV: Checking Battery Level

To check how much energy is available, press the battery level check button. The battery icon will illuminate accordingly:

Green: 71-100%

Yellow: 41–70% Red: 11–40%

Flashing Red: 0-10%

After 5 seconds, the LED will turn off.

Section V: Maintenance

To keep your Universal Charger 6000 operating at its full potential, please do the following:

- 1. Re-charge every three months when not in use.
- 2. Keep dry and away from moist and corrosive materials.
- 3. To clean, wipe surface with dry cloth.

Section VI: Product Specifications

Battery: 6000mAh Lithium Polymer Micro-USB Input: 5VDC, 1.0A USB 1 Output: 5VDC, 2.1A USB 2 Output: 5VDC, 1.0A Total Output Current: 2.1A

Section VII: Troubleshooting

My device is not charging: Confirm that your device's charging cable is properly connected to one of the USB ports and the Universal Charger itself has energy (by pressing the battery icon button). If the battery icon is red, there isn't enough energy to charge your devices—please recharge.

For additional troubleshooting information and device compatibility, please visit: www.mycharge.com

ONE YEAR LIMITED WARRANTY

RFA BRANDS sells its products with the intent that they are free of defects in manufacture and workmanship for a period of one year from the date of original purchase, except as noted below. RFA BRANDS warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your RFA BRANDS PRODUCT, contact a Consumer Relations Representative by telephone at 1-888-251-2026 for assistance. Please make sure to have the model number of the product available.

RFA BRANDS does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate RFA BRANDS in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of RFA BRANDS.

This warranty is effective only if the product is purchased and operated in the country in which the product is

purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. RFA BRANDS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, RFA BRANDS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of RFA BRANDS.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you. For more information regarding our product line in the USA, please visit: www.mycharge.com

myCharge Service Center

Telephone: (888) 251-2026

Hours: 8:30 AM-7:00 PM (ET) Monday-Friday

E-mail: cservice@mycharge.com

WARNINGS

Read all instructions and warnings prior to using this product. Improper use of this product may result in product damage, excess heat, toxic fumes, fire or explosion, for which RFA BRANDS is not responsible.

- 1. Do not store battery in high temperature environment, including intense sunlight or heat. Do not place battery in fire or other excessively hot environments.
- 2. Be cautious of excessive drops, bumps, abrasions or other impacts to this battery. If there is any damage to the battery such as dents, punctures, tears, deformities or corrosion, due to any cause, discontinue use and contact the manufacturer or dispose of it in an appropriate manner.
- 3. Do not disassemble the battery or attempt to repair or modify it in any manner.
- 4. Do not expose this battery to moisture or submerge it in liquid. Keep battery dry at all times.
- 5. Do not attempt to charge battery using any other method, apparatus, or connections other than the device's USB connector or wall prongs. For directions on the various ways to charge your myCharge product please refer to the owner's manual.
- 6. Do not attempt to replace any part of the battery.
- 7. If this battery is intended by the Purchaser to be used by a minor, purchasing adult agrees to provide detailed instructions and warnings to any minor prior to use. Failure to do so is the sole responsibility of the purchaser,

who agrees to indemnify the Manufacturer for any unintended use or misuse by a minor.

- 8. All batteries have gone through a thorough quality assurance inspection. If you find that your battery is excessively hot, deformed, cut, emitting odor, experiencing or demonstrating an abnormal phenomenon, immediately stop all battery use and contact the manufacturer.
- 9. For extended storage, first fully charge your battery.
- 10. Never dispose of batteries in the garbage. This is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.

Note: The Manufacturer is not responsible for any damages one may suffer as a result of use, intended or unintended, or misuse of this battery in conjunction with any device or accessory other than the appropriate entertainment device for which this battery is designed.

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

myCharge Service Center

Telephone: (888) 251-2026 Hours: 8:30 AM-7:00 PM (ET)

Monday-Friday

E-mail: cservice@mycharge.com

myCharge name and logo are registered trademarks of RFA Brands.

©2012-2013 RFA Brands. All Rights Reserved. Patent Pending.

Made in China. IB-MC09001RM

DOWNLOAD

myCharge Universal Charger 6000 MYC-0900-1RM, MYC-0901-1RM, MYC-0902-1RM User Manual – [Download PDF]

Manuals+,