

# Mydisplays MYD23412.s.43 Android Network Digital Signage User Manual

## Mydisplays MYD23412.s.43 Android Network Digital Signage User Manual



### Contents

- 1 Operating Instructions for Digital Signage**
  - 1.1 Technical Specifications
  - 1.2 Parts and Connection
  - 1.3 Remote Control
  - 1.4 Description of Basic Operation
- 2 Documents / Resources**
  - 2.1 References
- 3 Related Posts**

## Operating Instructions for Digital Signage

### Technical Specifications

	ITEM	MYD23412.s.43
	LCD size	43"
	Light source	WLED
	Resolution	1920*1080 (pixels)

<b>Panel</b>	Brightness (typ.)/(min)	500cd/m <sup>2</sup>
	Contrast (typ.)	1200:1
	Response (ms)	26ms
	Pixel pitch	0.4903×0.4903mm
	Refresh rate	60Hz
	Viewing angle	89°/89°/89°/89°
	Color saturation	68%
	Viewable area	941.184(H) X 529.416(V) mm
	Chromaticness	16.7M
<b>Power supply</b>	Voltage	AC100-240V
	Power Consumption	70W
<b>Environment</b>	Operating temperature	32~104 °F (0~40 °C)
	Storage temperature	-4~140 °F (-20~60 °C)
	Storage humidity	10~90% RH Non-condensing
	Operating humidity	10~90% RH Non-condensing
<b>Functions</b>	Operating system	Android 7.1
	Processor	Quad-core ARM Cortex-A17, 1.8GHz
	RAM	46
	Built-in memory	326
	Decoding resolution	1080P FHD compatible
	Playback mode	Yes
	Touch support	Yes
	Supported Video Files	RMVB, FLV, MPEG1/2/4, AVI, DIVX, X DIV,
	Supported Video Files	WMV9, H.264, VC-1, MOV, MKV, MP4 , TS, M2T
	Supported Photo Files	BMP/PNG/GIF/JPEG
	Supported Audio files	MP3, WMA, WAV, EAAC+, MP2 dec, Vorbis(Ogg). AC3, FLAC, APE, BSAC;
	RTC (real-time clock)	Yes
	Schedule power on/off	Yes
	System update	Yes
	App installation	Support download and installation
	USB 2.0	X2

10 interfaces	HDMI (IN)	X1
	sp	X1
	Rj45	X1
	3G SIM (Optional)	X1
Touch	Capacitive / Infrared	Optional
Structure	Net weight	53KG /12.5KG(stand base)
Structure	Gross weight	73KG
	Unit dimensions	1800x65x639mm/641x50x435mm(stand base)
	Package dimensions	1930x180x770mm/700x90x500mm(stand base)
	Shell material	Metal
	Shell color	Black
Language	0sp	English, French, German, Simplified Chinese ect.

## Parts and Connection

### Packing List

Name	
1 Digital Signage	●
1 Remote Control	●
1 Operation Manual	●
1 Metal Base	●

Name	
1 Power Cord	●
1 Cleaning Kit	●
1 Keys	●

### Interfaces




1. Power port
2. ON/OFF Button

3. RJ45 (Ethernet)
4. HDMI port 5.3G SIM
5. USB port


**Note:** Please pull out the power plug before installing or disassembling the unit! Steps for Assembly (3 or more people required!)

1. Carefully Remove the digital panel and the metal base from the packing box. Place The digital panel on a raised solid platform that covered by soft cloth. Be sure the screen side faces up to prevent scratch or damage.

**NOTE:** The platform must be high enough to attach the metal base to the bottom of the digital signage.

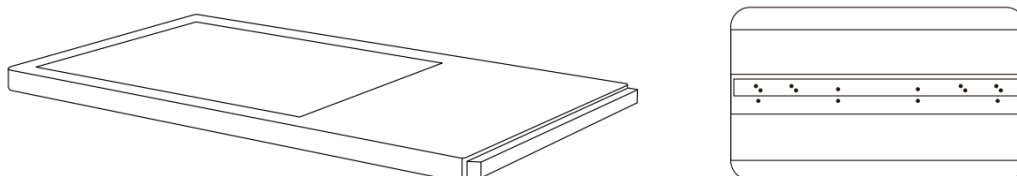



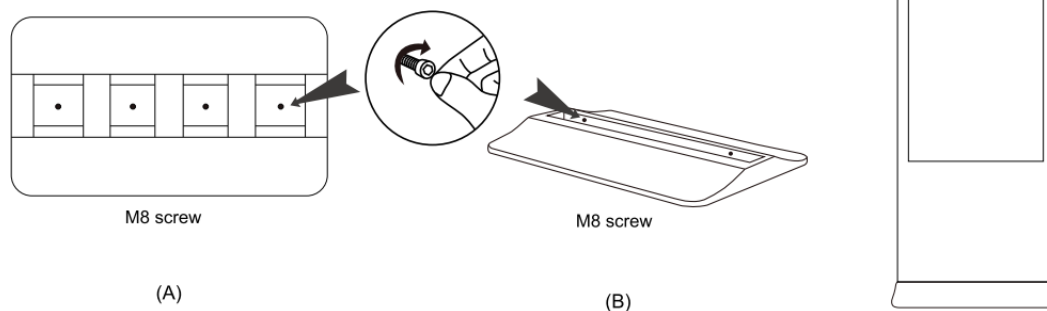






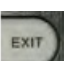


2. Attach the base to the bottom of the stand and fix it with (6) M 8 X 16 mm screws as shown below in (A).
3. Secure the metal base with 16X M 8 X 25 mm screws from the size under the base, as shown in (B).
4. Carefully lift the digital signage to its upright position. The assembly is finished.



## Remote Control




1.  Power on/off button. INPUT
2.  Press this button to return to home screen. MENU
3.  Press MENU to organize screens and apps.
4.  Mute. Press this button to mute the sound.
5.  Upwards Arrow. Move up selection or move the cursor up.
6.  Downwards Arrow. Move down selection or move the cursor down.
7.  Leftwards Arrow. Move selection to the left or move the cursor left.
8.  Rightwards Arrow. Move selection to the right or move the cursor right. ENTER
9.  Confirm button, select the use menu or setup menu, press this button to confirm VOL
10.  Turn volume up VOL-
11.  Turn volume down. EXIT
12.  Return to previous page or a level up in an app.

NOTE: Only buttons shown above have functions.

## Description of Basic Operation

Insert the power plug into the outlet. If the Digital Signage has the switch button “I”, turn it on. In power on state,

press the “” button on the remote control, and the Digital Signage enters standby state.

### Interface and Home Screen

After power on, the machine shown below: will launch home screen, as




### File Manager

1. Click the Main Apps button” in the Home screen to enter the “APPS” menu interface (Fig. 2);
2. Click the “Explorer” icon in the “APPS” menu interface (Fig. 2) and enter “Explorer” menu (Fig. 3);
3. Choose storage in the “Explorer” menu to read the files from different devices.



**Fig. 1**

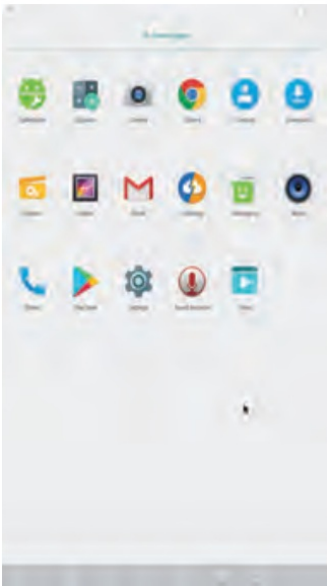

**Fig.2**



**Fig.3**

### **Local Settings.**

1. Click the \*Settings” icon (Fig. 1) and enter “Settings” menu (Fig. 2);
2. Click “Wi-Fi” and choose options then set up the WIFI connection.

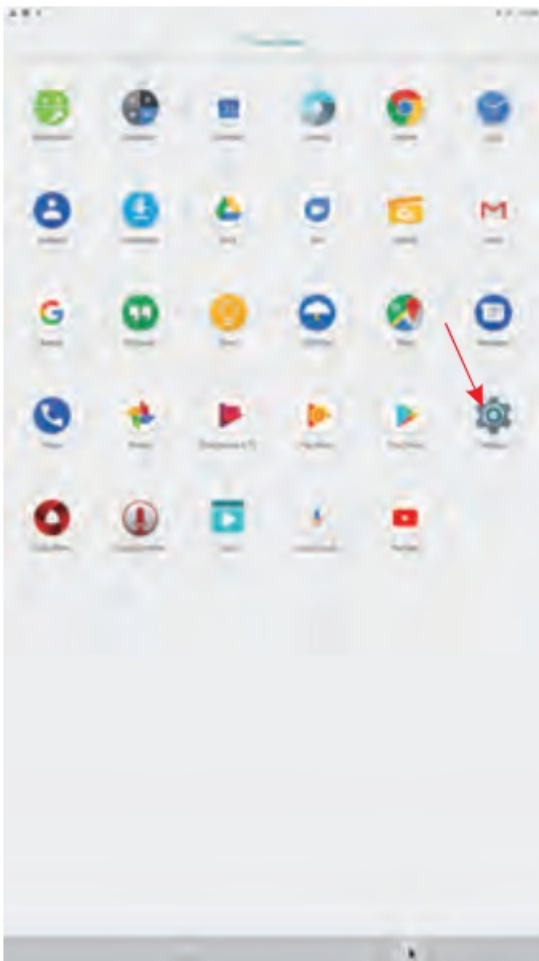


Fig. 1



Fig.2


## Description of Settings Interface (shown on the right)

Icon	Function
	WIFI switch
	Data usage
	Bluetooth
	USB
	Sound & notification
	Battery saver
	HDMI
	Display
	Storage
	Apps
	Screenshot Setting
	Location
	Accounts
	Backup & reset
	Security
	Language & input
	Date & time
	Printing
	Accessibility
	About device



## Status of Menu Bar

1. Click the setting
2. At the setting menu click the display menu
3. At the display setting menu unselect the display navigation check box

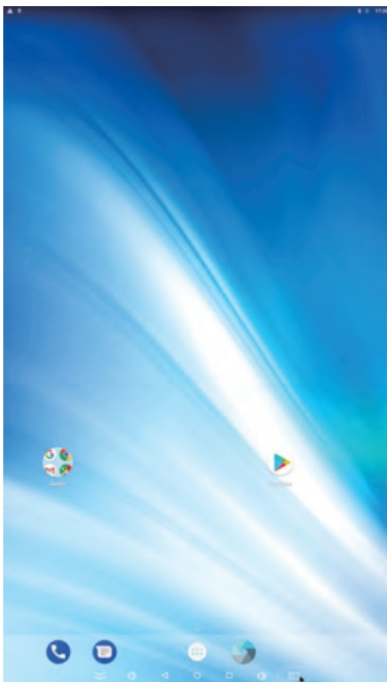

**Fig. 1**

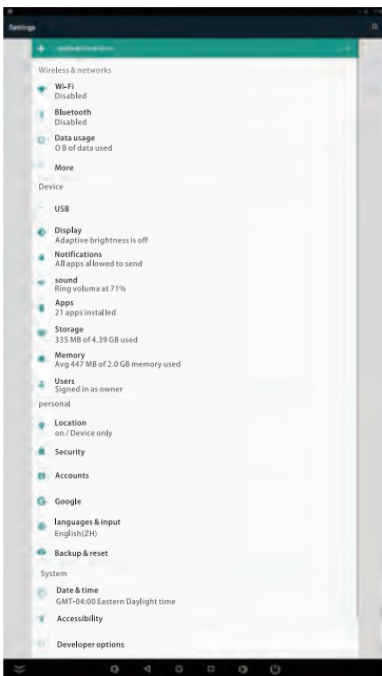


Fig. 2



Fig. 3



## Documents / Resources

	<p><a href="#">Mydisplays MYD23412.s.43 Android Network Digital Signage</a> [pdf] User Manual  MYD23412.s.43 Android Network Digital Signage, MYD23412.s.43, Android Network Digital Signage, Network Digital Signage, Digital Signage, Signage</p>
--	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.