




myFirst 3A17 Digital Camera User Manual

[Home](#) » [myFirst](#) » myFirst 3A17 Digital Camera User Manual 

myFirst 3A17 Digital Camera User Manual



 
Contents

- [1 How to Use](#)
- [2 Appearance](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

How to Use


Insert Memory Card

Please insert the memory card into the slot in the correct direction as shown.

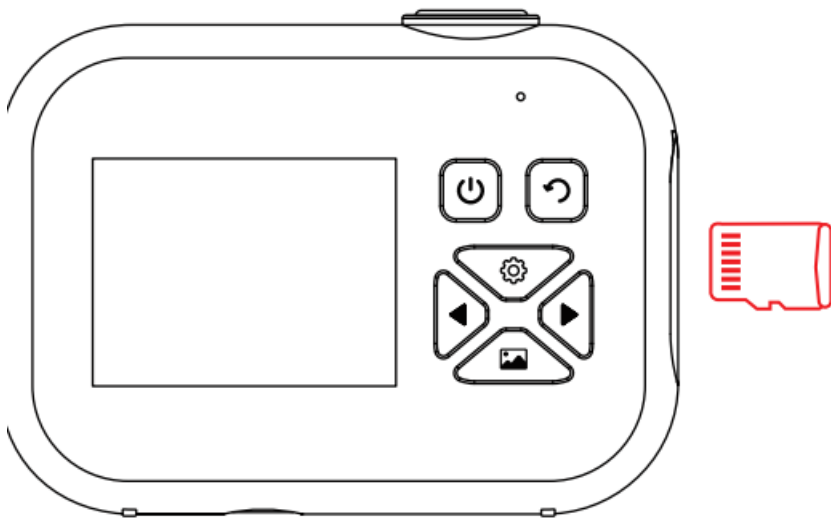


Turn On/Off

Press and hold the Power button for 3 seconds to turn the camera on or off.

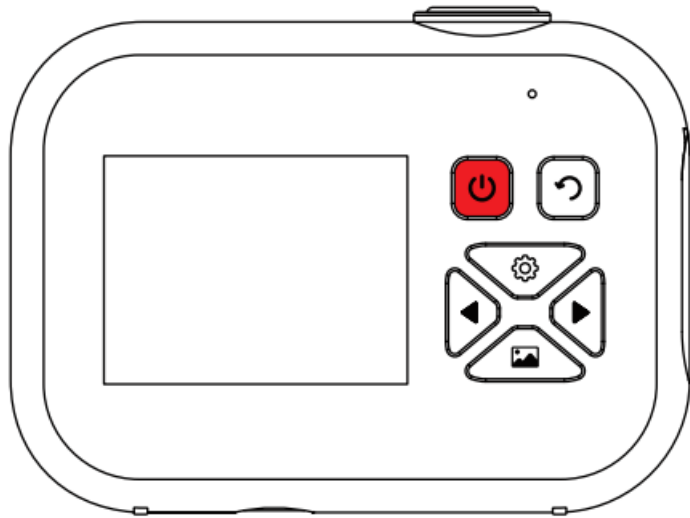


Picture Mode and Video Mode

Press and hold the Shutter button for 3 seconds to switch to Video Mode.
In Video Mode, tap on the Return button to return to Picture Mode.

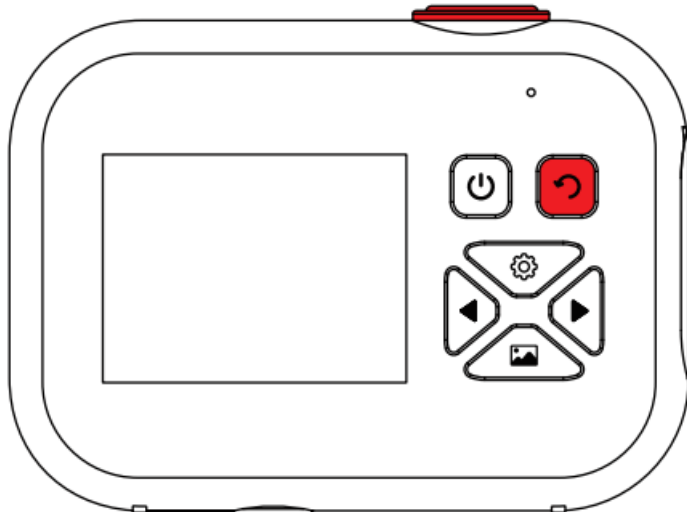


Take Photo and Record Video

Tap the Shutter button to take a photo. Tap the Shutter button in Video Mode to start recording.

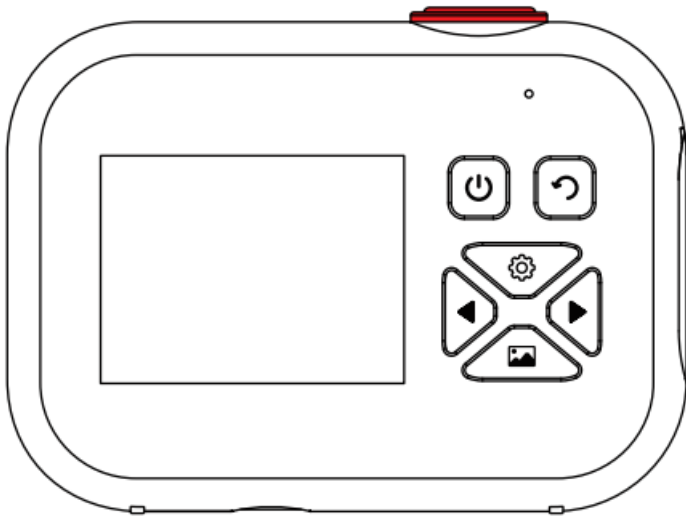

Gallery

To browse your photos and videos, press the Down button to enter the Gallery. Press the Left or Right button to browse files. Press the Shutter button to play videos. In Gallery, press the Return button to Return to Picture Mode.

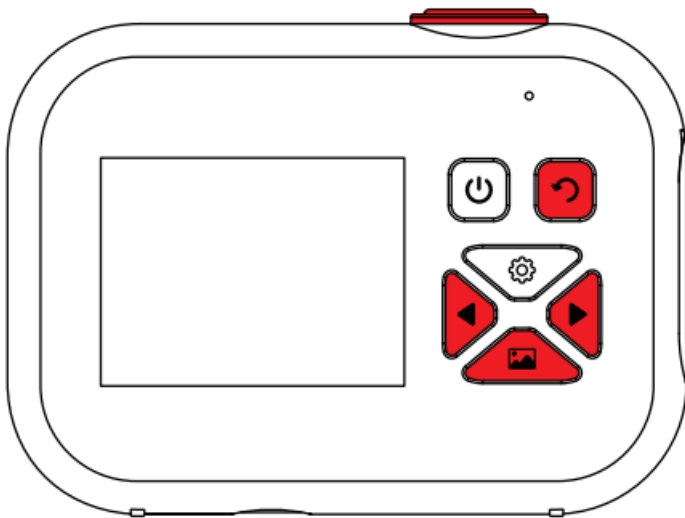

Delete Files

In Gallery, press the Up button for deletion menu. Press the Shutter button to confirm your selection or to cancel.



More Features

In Picture Mode, press the Left or Right button to select different camera modes, including:

1. Photo frames and filters

2. Continuous shooting, 5 shots at one time
3. Self-timer, 5 seconds countdown

Settings

1. Tap the Up button to access the settings menu.
2. Tap the Up or Down button to scroll through different options, including Language, Date/Time, Sounds, and Formatting.
3. Press the Shutter Button to confirm your selection, and Return button to cancel.



Charging

When the camera indicates that the battery is low, please use the provided cable and connect it to the 5V power converter for charging. A red light will be on when charging, and will turn off when the battery is full.

Notes



1. Formatting will erase all files, please be cautious.
2. If the camera is not working correctly, do not disassemble it yourself.
Press the pin inside the reset hole to reset your camera.
3. Do not drop or squeeze the camera to avoid damage to internal electronic components.
4. Do not expose the camera to water or splashing water to avoid damage to internal electronic components

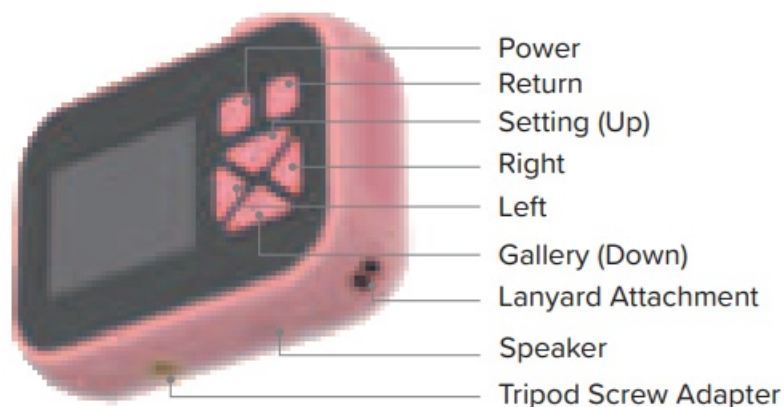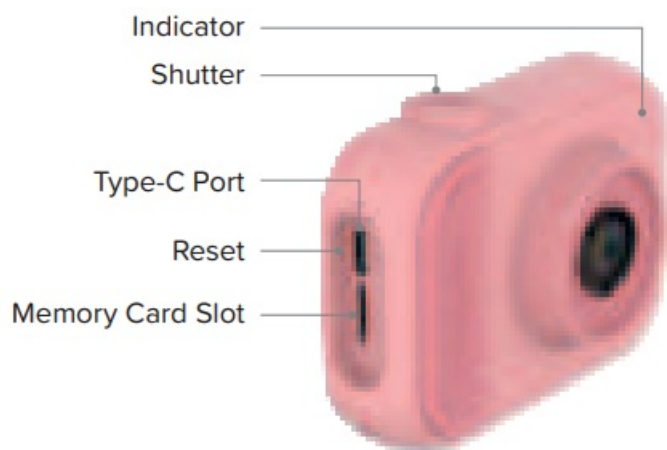Appearance





Documents / Resources

  <small>Get to know myFirst Camera 10 User Manual</small>	myFirst 3A17 Digital Camera [pdf] User Manual 3A17, 3A17 Digital Camera, Digital Camera, Camera
--	--

Manuals+,