



myFirst Camera 3 Digital Camera User Manual

[Home](#) » [myFirst](#) » myFirst Camera 3 Digital Camera User Manual 

my
First



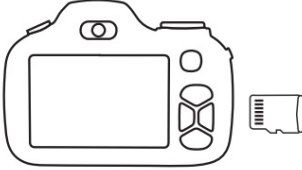 
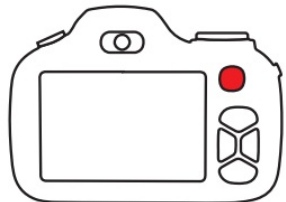 
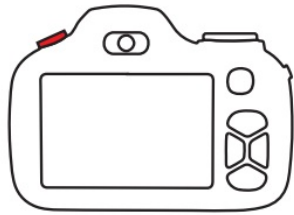 
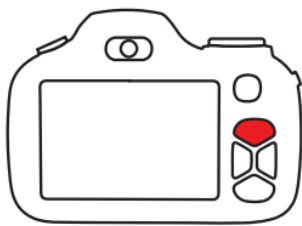 
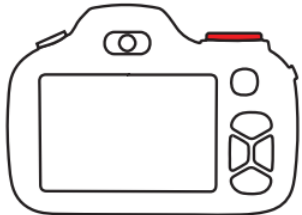 
USER MANUAL






Get to know myFirst Camera 3

Contents

- [1 How to Use](#)
- [2 Settings](#)
- [3 Camera Modes](#)
- [4 Icons Glossary](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

How to Use

	Please insert the memory card into the slot in the correct direction as shown on the left.
	Press and hold the Power button to turn the camera on or off. After booting, tap the Return button.
	Press the Lens-Switcher button to switch the front and rear camera.
	Press and hold the Up button to enter Macro mode. Press and hold again to exist.
	Tap the Shutter button to take a photo. Press and hold the Shutter button for 2 seconds to start recording.

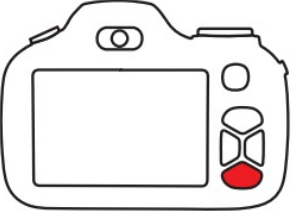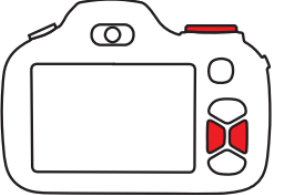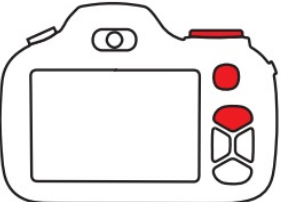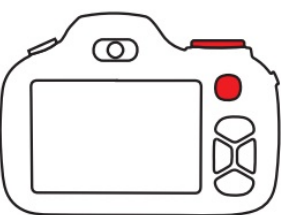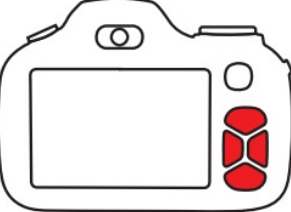     	To browse your photos and videos, press the Down button to enter the playback mode.
	Press the Left or Right button to browse files. Press the Shutter to play the video.
	In playback mode, press the Up for the deletion menu. Press the Shutter to confirm your selection, and Power button to cancel.
	When browsing photos, tap the Shutter button to zoom in and the Power button to zoom out.
	During the zooming, press and hold the Left, Right, Up, or Down buttons to adjust the position.

Settings

1. Tap the Up button to enter the settings menu.
2. Tap the Up or Down to choose different options, including date and time, language, sound, and formatting. (Formatting can erase all files, please be cautious)
3. Press the Shutter button to confirm your selection, and Power button to cancel.
4. When Auto Focus is turned "On", press the shutter, and the camera will take some time on the autofocus. When the focus frame turns from red to green, the camera will take a photo.

Camera Modes

1. During photo-taking, press the Left or Right button to select different camera modes, including photo frames, continuous shooting, self-timer, filters, and grid.
2. In different camera modes, press the Power button to return to the standard camera mode.
3. In the self-timer and continuous shooting mode, press the Up button to change durations.

 
Icons Glossary




2 secs
timer




5 secs
timer




10 secs
timer

 


2 secs
a shot

 

5 secs
a shot

 


10 secs
a shot

 

3 shots
continuously

Notes

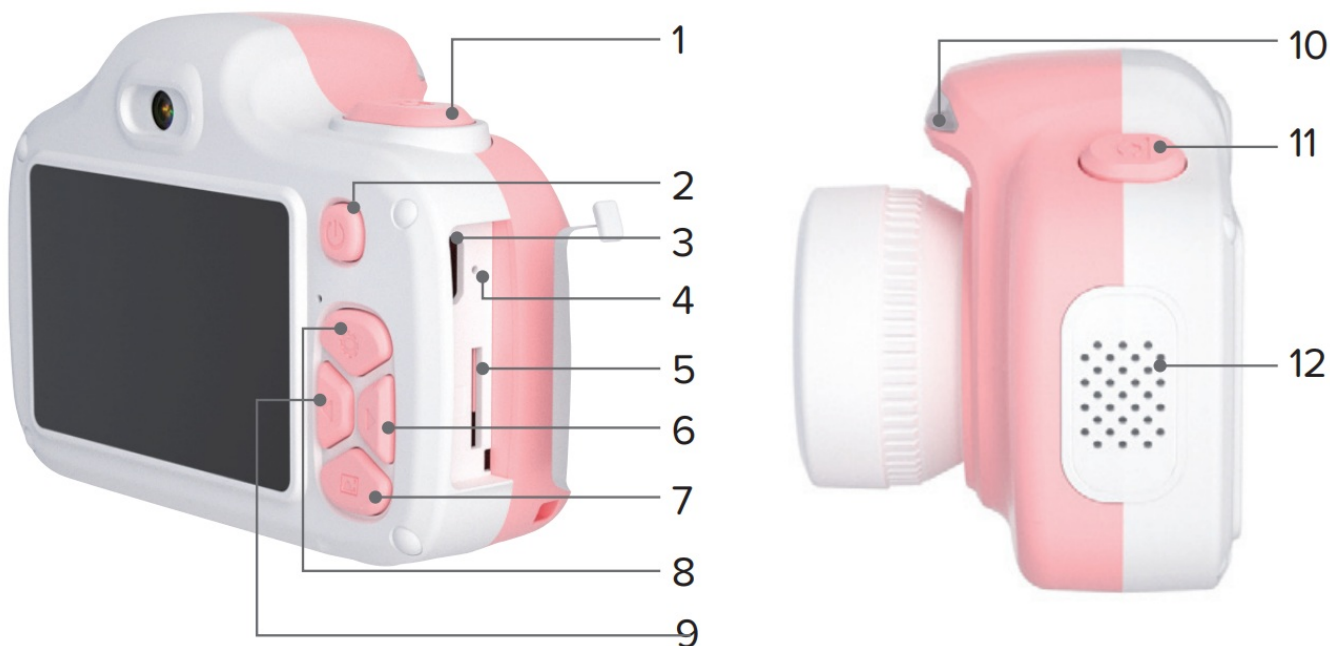 1. When the camera indicates that the battery is low, please use the MicroUSB charging cable and connect it to the 5V power converter for charging. The red light is on when charging, and the red light is off when the battery is full.
2. When the camera does not work correctly, do not disassemble it yourself. Press the pin inside the reset hole to reset your camera.
3. Do not drop or squeeze the camera to avoid damage to internal electronic components.
4. Do not expose the camera to water or splashing water to avoid damage to internal electronic components.




1. Shutter (OK)
2. Power (Return)
3. Micro USB
4. Reset
5. Memory Card Slot
6. Right
7. Playback (Down)
8. Setting (Up)
9. Left

- 10. LED Light
- 11. Lens-Switcher
- 12. Speaker



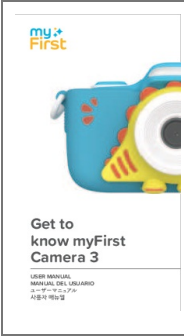 Documents / Resources

 The image shows the cover of the 'myFirst Camera 3' user manual. It features a blue and yellow camera with a large eye-like lens. Text on the cover includes 'myFirst', 'Get to know myFirst Camera 3', and 'USER MANUAL'.	<p>myFirst Camera 3 Digital Camera [pdf] User Manual</p> <p>Camera 3 Digital Camera, Camera 3, Digital Camera</p>
--	---

Manuals+,