



MYSTERY CONCEPT Record Player with Radio Instruction Manual

[Home](#) » [MYSTERY CONCEPT](#) » MYSTERY CONCEPT Record Player with Radio Instruction Manual 

Contents

- [1 MYSTERY CONCEPT Record Player with Radio](#)
- [2 Steps first use](#)
- [3 Bluetooth playback](#)
- [4 Important Safety Instructions](#)
- [5 TECHNICAL SPECIFICATIONS](#)
- [6 About the lighting logic of two LEDs](#)
- [7 RECORD PLAYER](#)
- [8 FCC](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

MYSTERIOUS

MYSTERY CONCEPT Record Player with Radio



Steps first use

Power Connection:

Before playing a record, please insert the power plug into the power outlet. Tip: This record player is powered by a DC 5V 1A adapter during normal use. Using other specifications of the power supply will damage the record player, which is not covered by the warranty.

Input connection:

To connect a location device with an audio cable: (1.) The 3.5mm plug is connected to the AUXIN socket of the machine.

Output connection:

To connect to an external amplifier or amplifier with an audio cable:

1. The red plug is connected to the R channel output
2. The white plug is connected to the L channel output

Tip: Please confirm the connection before playing. After the connection, you can control the volume through the power amplifier

RECORD PLAYER

1. Put the vinyl record on the tray, push the record speed selector button, and select the rotation speed (33/45/78) of the vinyl record you are playing. Note: When playing a large hole turntable place the large hole disc cover on the center shaft.
2. Turn on the power switch.
3. Take off the white stylus protective cover of the phono cartridge, and unfasten the stylus lock that secures the tonearm.
4. Push up the tonearm lifter, move the tonearm close to the edge of the record, and the tray starts to rotate. Push down the tonearm lifter, the tonearm begins to slowly descend, the cartridge is lowered to the record, and playback begins. after the end. If the
5. When the automatic switch is in the ON position, the record will automatically stop automatic stop switch is in the OFF position, the record will not automatically stop after the end. Note: We generally recommend that this switch be adjusted to the ON position.
6. After the record is over, please use the lift lever to lift the record bar and move it back to the record bar lock position.
7. Put on the protective cover of the phono head and change the light only. (For those who teach only Daxiu's sheath, please don't stop touching the stylus)
8. Turn off the power.
9. Please do not turn the turntable artificially, this will cause damage to the tone arm and stylus.

Bluetooth playback

1. When the record stops playing, the product will automatically switch to the Bluetooth playback mode, and the blue light of the Bluetooth prompt light will be on.
2. Turn on the Bluetooth function of the mobile phone, search the nearby Bluetooth, and select the Bluetooth Name: "mcb01 Hearing the prompt of 'successful connection'" in English or the Bluetooth symbol displayed at the top right of the mobile phone interface indicates that the Bluetooth connection is successful. Bluetooth

needs to be paired manually for the first time, and it can be paired automatically in the future.

3. The use distance of Bluetooth device is about 10m, and the transmission distance is different in different environments.
4. When you manually disconnect Bluetooth, the English “disconnect” prompt, and the blue light of Bluetooth prompt is off.
5. Note: when playing with an external audio amplifier or phonograph, Bluetooth will be automatically disconnected from the mobile phone.

Notice: In order to avoid fire or vibration, please do not use long power cords or other sockets privately, and make sure that the contacts of the plug are not fully inserted. Place the turntable in a damp place. Children under the age of 12 use this product carefully

- The lightning bolt symbol with an arrow in this equilateral triangle informs the user that there is an uninsulated dangerous voltage sufficient to cause electric shock within the enclosure of this product.
- The exclamation point in the equilateral triangle is to warn the user that there are important operation and maintenance instructions in the product manual.
- Warning: In order to avoid electric shock, please do not move the parts inside the Yan board (or the back board), if you need to repair it, consult a professional.


Important Safety Instructions

1. Please read the manual carefully
2. Save the manual.
3. Heed all warnings.
4. Please follow the instructions in the manual.
5. Please do not place the turntable near water or damp.
6. Please put the whole machine in a cool and ventilated place and use it according to the manufacturer's instructions.
7. Please do not place the whole machine near heat sources, such as radiators, stoves, etc.
8. Please use the accessories provided by the manufacturer
9. Please unplug the power plug when encountering thunder and lightning or not using it for a long time.
10. If maintenance is required, professionals must be invited.
11. Please do not move the power cord casually, and do not squeeze the plug.
12. Do not place this unit near a container full of liquids or where water is dripping.
13. Please use the power supply as required.
14. Please do not use chemical reagents to clean the surface of the wooden box, which will cause damage to the surface of the wooden box,
15. Before starting the machine, please confirm whether the plug is inserted properly.
16. Please unplug the power plug before moving the turntable.

TECHNICAL SPECIFICATIONS


HARDWARE FEATURES		SAMPLE PARAMETERS	
OUTPUT POWER (RMS)		GRAMOPHONE 2*3W BLUETOOTH 2*3W	
NEEDLE FREQUENCY		80-- 10000HZ+3/-1DB	
FREQUENCY		FO 160HZ 20% --- 20 KHZ 20%	
POWER		VDD=5.0V,RL= 4 Ω ,PO= 3W	
POWER SUPPLY		DC/ 5V/1A	
CHARGING CONNECTOR		TYPEC	
MUSIC PLAYER		TURNTABLE, BLUETOOTH AND AUDIO INPUT PLAYBACK	
OTHERS		AUX-OUT LINE-IN HEADPHONE	
RADIO INTERFACE		SAMPLE PARAMETERS	
BLUETOOTH FREQUENCY		2.4GHZ	
RECEIVING RANGE		WITHIN 15 METERS	
MECHANICAL PROPERTIES		SAMPLE PARAMETERS	
SIZE (L*W*H)		49.2FT	
WEIGHT		5.5LB	
MATERIALS (FRONT , REAR , MIDDLE , BACK COVER ...)		FRONT, BACK, WOOD BOTTOM, ABS ABOVE, DUST COVER TRANSPARENT PC	
COLOUR		BROWN	
COLOR COMPOSITION		TAN WOOD+PC TRANSPARENT COVER	
OTHER		VOLUME KNOB AUDIO INPUT/OUTPUT TERMINAL	
POWER SUPPLY		SAMPLE PARAMETERS	
BATTERY TYPE		18650	
CAPACITY		2000MA	
USE TIME		ABOUT 3 HOURS	
CHARGING TIME		ABOUT 4 HOURS	

About the lighting logic of two LEDs

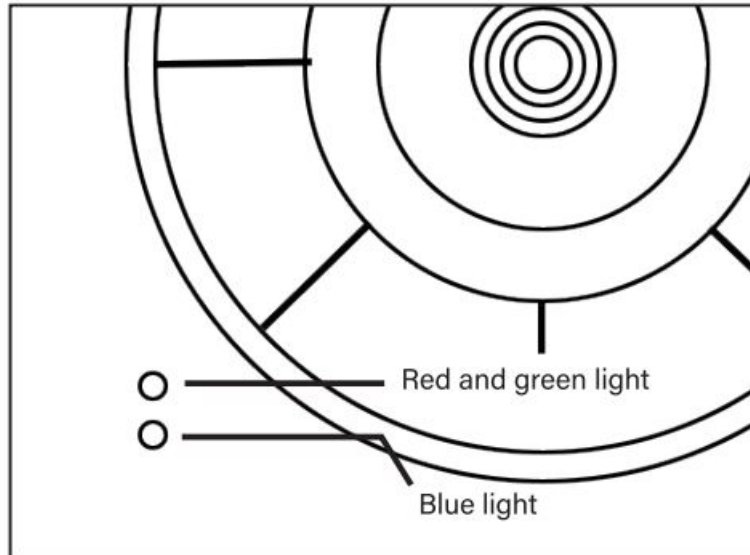

1. The red light is on after the external power supply is connected the red light goes out when the power supply is unplugged)
2. The green light is on after playing with the battery (the green light is on only when playing)
3. Plug in the external power supply battery and turn on the yellow light after playing (when playing, the external power supply and lithium battery are powered at the same time, the red light and green light are on at the same time, and the light is yellow).

RECORD PLAYER

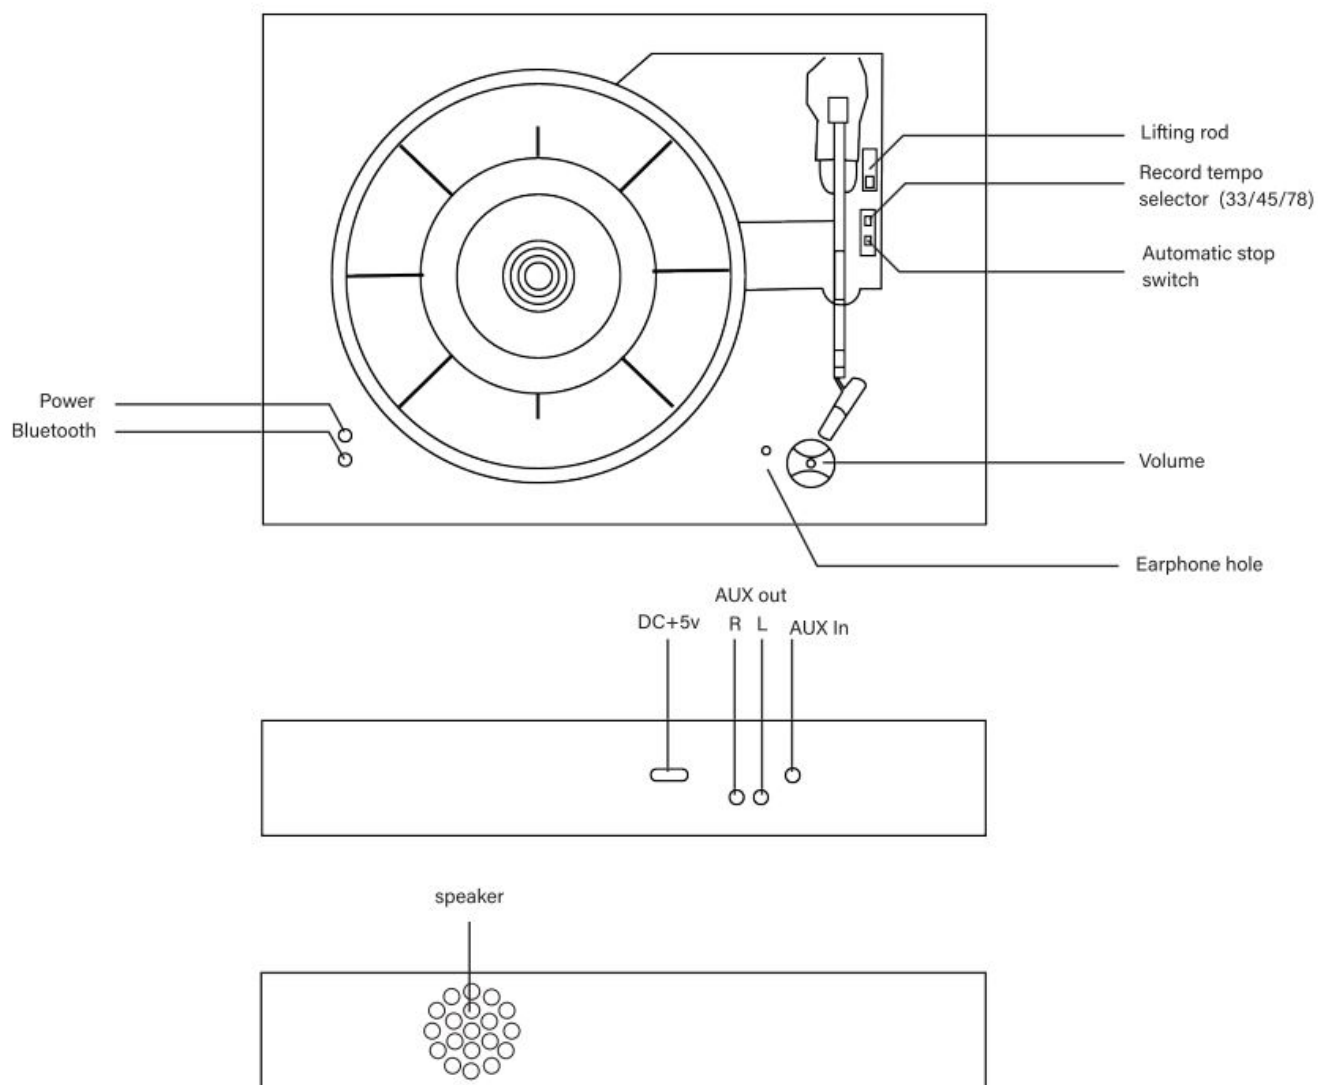

1. Power
2. Bluetooth
3. Lifting rod
4. Record tempo selector (33/45/78)
5. Automatic stop switch
6. Volume
7. DC+5v
8. AUX out R L
9. AUX In
10. speaker
11. Earphone hole

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Documents / Resources



[MYSTERY CONCEPT Record Player with Radio](#) [pdf] Instruction Manual
MCP-001, MCP001, 2A6HF-MCP-001, 2A6HFMCP001, Record Player with Radio