



## myStrom 241001 WiFi Switch Ex Installation Guide

[Home](#) » [myStrom](#) » myStrom 241001 WiFi Switch Ex Installation Guide 

### Contents

- [1 myStrom 241001 WiFi Switch Ex](#)
- [2 Product Usage Instructions](#)
- [3 FAQs](#)
- [4 INSTALLTION](#)
- [5 Ports Buttons and LED](#)
- [6 MORE INFORMATION](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)



**myStrom 241001 WiFi Switch Ex**



## Product Usage Instructions

### Installation

1. Download the myStrom app from the official app store.
2. Open the app and create a free account or log in with your existing account.

### LED Functions

- **White LED:** Indicates a successful WiFi connection to the myStrom service.
- **White Blinking LED:** Activates WiFi pairing mode (WPS).
- **Red LED:** Indicates the device is in Start/Boot mode or connection is in progress.

### On/Off Button

The on/off button can be used to manually switch the connected device on and off.

### Other Functions

To perform a WPS Reset, follow these steps:

1. Press and hold the on/off button for 3-5 seconds until the LED flashes white slowly.
2. Press and hold the on/off button for 10 seconds until the LED flashes white quickly.

### FAQs

- **Q: How do I know if the WiFi connection is successful?**
  - **A:** The white LED indicator will be solid when the WiFi connection is OK and connected to the myStrom service.
- **Q: How can I reset the device using WPS?**
  - **A:** To perform a WPS Reset, press and hold the on/off button for the specified duration until the LED

flashes accordingly.

- **Q: WiFi Switch not working?**

- **Restart it** – simply unplug it and plug it in again.
- **Plug it close to your DSL Router** – if the LED lights up in white, the WiFi Switch works perfectly and could have suffered from a weak WiFi signal in its previous location.
- **Reconnect it** – activate WPS first on your Router, then on your WiFi Switch.


## INSTALLTION

- **Download the myStrom app**



- **Launch app**
  - Open a free account or connect with your existing one.
- **Add WiFi Switch**
  - Select «Add device» in the menu to add your new WiFi Switch.
- **All Done**


## Ports Buttons and LED

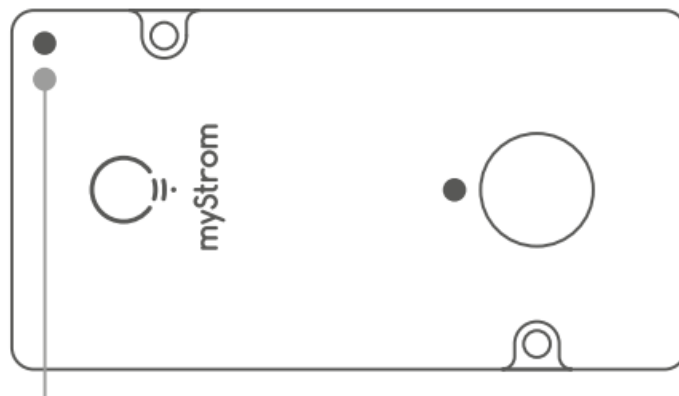

### LED indicator

- **Off WiFi**, the Switch is plugged off

- **White** WiFi connection OK and connected to the myStrom service
- **White blinking** WiFi pairing mode (WPS)
- **Red** Start/Boot mode
- **Red blinking** Connection in progress
- **Red short blinking** Access Point mode

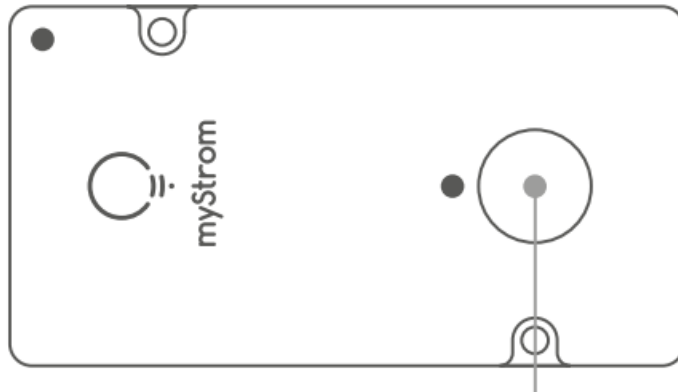

- **On/off button**
  - Switches the connected device on and off manually.
- **Other functions**
  - **WPS** Press and hold the on/off button for 3-5 seconds until the LED flashes white slowly.
  - **Reset** Press and hold the on/off button for 10 seconds until the LED flashes white quickly.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal.

## MORE INFORMATION

- [mystrom.com/support](https://mystrom.com/support)



**myStrom AG**

c/o tiko Energy Solutions AG Pflanzschulstrasse 7 8004 Zürich / Switzerland [mystrom.com](https://mystrom.com)

**Documents / Resources**



## [myStrom 241001 WiFi Switch Ex](#) [pdf] Installation Guide

241001-MS-Manual-Switch-Ex-GPSR-v1-OL, 241001 WiFi Switch Ex, 241001, WiFi Switch Ex, Switch Ex, Ex

## References

- [myStrom.com | Innovations For Your Home. Designed in Switzerland.](#)
- [Support | myStrom](#)
- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.