



myStrom WG552535P WiFi Button Max Instruction Manual

[Home](#) » [myStrom](#) » myStrom WG552535P WiFi Button Max Instruction Manual 

Contents

- [1 myStrom WG552535P WiFi Button Max](#)
- [2 Installation](#)
- [3 Download the myStrom app](#)
- [4 Button, LED, Modes, Reset](#)
- [5 Reset](#)
- [6 FAQ & Support](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



myStrom WG552535P WiFi Button Max



Installation

Download the myStrom app



Launch app

Open a free account or connect with your existing one.

Add WiFi Button

Select «Add device» in the menu to add your new WiFi Button.

All Done

The battery in this device: WG 552535P / 3.7V / 450mAh / Li-Po The battery and the device must be disposed of separately. To do this, open the device by pressing both halves apart and disconnecting the battery from the electronics.

Button, LED, Modes, Reset

Off	WiFi Button inactive / no power
White / blinks every 15 seconds	WiFi connection Mode (WPS) for 2 minutes after Reset
Blinks white/red	Manual WiFi Connection Mode
Blinks 10x white	Reset successful
Blinks 3x green	WPS successful
Blinks 3x red	WPS unsuccessful

LED

WPS	During 2 minutes – if not connected to a WiFi network or after Reset
Manual	Push button after 2 seconds during WPS Mode

Reset

Push the top right button for 10 seconds > it will blink white/red > release your finger > within 5 seconds, push it again, once > it will blink 10x white – this will reset the WiFi Button to its factory settings. The connection to your WiFi network is lost.

FAQ & Support

Recharge the built-in battery – with the USB cable.

The WiFi Button is not working?

Place it close to your DSL Router Re-connect the WIFI Button – reset it. The Button is now in WPS Mode for 2

minutes. Push the WPS button on your router. If the Button blinks 3x in green, it has reconnected. If it blinks 3x in red – please repeat the Reset procedure myStrom AG c/o tiko Energy Solutions AG Switzerland mystrom.com

Documents / Resources



[myStrom WG552535P WiFi Button Max](#) [pdf] Instruction Manual
300628, WG552535P WiFi Button Max, WiFi Button Max, Button Max

[Manuals+.](#)