

myTEM Radio RGBW Module User Manual

Home » myTEM » myTEM Radio RGBW Module User Manual 🖔







The myTEM Radio RGBW MTRGB-100-WL is a module for controlling and dimming 4-coloured LED strips. In addition to the red-green-blue-white color control, a warm white setting can be realized if the LED strip supports this function.

Contents

- **1 SAFETY INSTRUCTIONS**
- **2 DISCLAIMER**
- 3 Product description
- 4 Installation
- 5 Color and dimming settings
- 6 Technical specifications
- 7 Supported Command Classes
- 8 Explanation of some Z-Wave specific terms
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

SAFETY INSTRUCTIONS

- Operate this device only as described in the manual.
- Do not operate this device if it has obvious damage.
- This device shall not be altered, modified, or opened.
- This device is intended for use in buildings in a dry, dust-free location.
- This device is intended for installation in a control cabinet. After installation, it must not be openly accessible.

DISCLAIMER

All rights reserved. This is a translation from the original version in German.

This manual may not be reproduced in any format, either in whole or in part, nor may it be duplicated or edited by electronic, mechanical, or chemical means, without the written consent of the publisher.

The manufacturer, TEM AG, is not liable for any loss or damage caused by failure to follow the instructions in the manual

Typographical and printing errors cannot be excluded.

However, the information contained in this manual is reviewed on a regular basis and any necessary corrections will be implemented in the next edition. We accept no liability for technical or typographical errors or the consequences thereof. Changes may be made without prior notice as a result of technological advances. TEM AG reserves the right to make changes to product design, layout, and driver revisions without notice to its users. This version of the manual supersedes all previous versions.

Product description


The myTEM Radio RGBW module MTRGB-100-WL is a Z-Wave device of the type **Light Dimmer Switch** for use in **Europe** / **Switzerland**. It can be used for controlling

and dimming 4-colored LED strips. In addition to the green-blue-white color control, a warm white setting can also be realized if the LED strip supports this function.

The load is no longer switched directly via a (possibly existing light) switch, but a signal is sent to a controller like the myTEM Smart Server or the myTEM Radio Server,

which in turn controls the myTEM Radio RGBW module via radio.

The myTEM Radio RGBW module must be powered by a 24 VDC power supply and can control 24 VDC RGBW LED strips or lamps. The device is installed in a control cabinet, mounted on a 35 mm DIN rail.

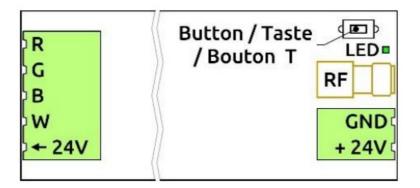

Installation

Please install the device according to the following steps:

- 1. **WARNING!** Make sure that the device is disconnected from the power supply.
- 2. **CAUTION!** Connect the myTEM Radio RGBW module as shown above.
- 3. **CAUTION!** The device shall only be operated with stabilized power supplies (24 VDC). Connecting higher voltages will damage the device.
- 4. Turn on the power.
- 5. Include (Add) the module into the Z-Wave network.
 - CAUTION! The myTEM Radio RGBW module must be operated with the same voltage supply as the connected LED strips.
 - CAUTION! When connecting long LED strips, there may be a loss of power. This can cause the luminosity to decrease with lights farther away from the RGBW outputs. To avoid this effect, several short, parallel LED strips are recommended instead of a long, serially connected LED strip. It is also recommended to connect LED strips with a maximum length of 10 m to the RGBW outputs. Please also note the instructions of the respective LED strip manufacturer.

Color and dimming settings

The command class Color Switch is used to set the desired color.

The command class Multilevel Switch is used to set the desired intensity (value for dimming).

CAUTION! By default, the values for the color and intensity are 0, resp. set to OFF. To turn on the LED strip **BOTH** values must be set.

Further information can be found on our website: www.mytem-smarthome.com/web/en/downloads/



https://www.mytem-smarthome.com/web/en/downloads/



ATTENTION:

This device is not a toy. Please keep it away from children and animals!

Please read the manual before attempting to install the device!

These instructions are part of the product and must remain with the end-user.

Warning and safety instructions

WARNING!

This word indicates a hazard with a risk that, if not avoided, can result in death or serious injury. Work on the device must only be carried out by persons with the necessary training or instruction.

CAUTION!

This word warns of possible damage to property.



Trademarks

myTEM and TEM are registered trademarks. All other product names mentioned herein may be trademarks or registered trademarks of their respective companies.

What is Z-Wave®?

Z-Wave is the international wireless protocol for communication in the Smart Home. Z-Wave ensures reliable communication by reconfirming every message (two-way

communication) and every mains powered node can act as a repeater for other nodes (**meshed network**) in case the receiver is not in direct wireless range of the transmitter.

Z-Wave **products from different manufacturers can be used together** in a wireless network. Thus, this product with any Z-Wave product from other manufacturers can

be used in a common Z-Wave wireless network. The myTEM Radio RGBW module is a Z-Wave device with **secure communication (S2)** and uses a radio frequency of 868.4 MHz. If other devices also support the same secure communication, the data is exchanged in this secure mode. Otherwise, it will switch automatically to a lower level of security to maintain backward compatibility.

For more information about frequency regulations please refer to the homepage of <u>Silicon Labs</u>. For more information about Z-Wave technology, devices, tutorials, etc. please refer to <u>www.z-wave.info</u>.







Preparation for the installation

WARNING! Depending on national safety standards, only authorized and/or trained technicians may be allowed to make electrical installations on the power supply.

Please inform yourself about the legal situation before installation.

In order to include (add) a Z-Wave device to a network, it **must be in the factory default state.** Please make sure to reset the device into factory default. After power-up the status is displayed as below:

Status Add (included in a Z-Wave network):

The **LED** lights **green** for 1-2 seconds

Status Remove (not included):

The **LED** flashes red for 5-10 seconds

Reset to factory default

If the myTEM Radio RGBW module shows the status Add, the Remove can be performed with any controller in the network or with the help of a new controller. However

it is recommended to use the primary controller of the previous network unless it is no longer available or damaged.

Remove deletes the memory chip, including all Z-Wave network settings.

To start the Remove process, please press the button **(T)** four times in quick succession. The LED flashes red and then the new status is:

Add: The **LED** lights up briefly in **green** Remove: The **LED** lights up briefly in **red**

Inclusion/Exclusion (Add/Remove) of the device

On factory default, the device does not belong to any -Wave network. In order to communicate with other Z-Wave devices, it must be included in an existing network

or a new network has to be established. In Z-Wave, this process is called "Add". Devices can also be removed from networks. In Z-Wave, this process is called "Remove". Both processes are initiated by the primary controller of the Z-Wave network. This controller is put into the "Add", respectively the "Remove" mode.

The manual of the controller will contain the information on how to switch it into these modes. Only when the primary controller of the Z-Wave network is in the "Add" mode can devices be added. Removing a device from the network will reset it to the delivery state.

Inclusion/Exclusion (Add/Remove)

To include/exclude (Add/Remove) the device to/from a Z-Wave network, press the button T four times in quick succession. When the device is in Add mode, the LED

flashes green. When finished, the new status is:

Add: The **LED** lights up briefly in **green** Remove: The **LED** lights up briefly in **red**

Quick troubleshooting

The following hints may help solve trouble during the network installation.

- 1. Make sure that new devices are in the factory reset state. The status is displayed at power-up.
- 2. If a connection cannot be established, check that the controller and the device are working on the same radio frequency.
- 3. If a connection cannot be established, the control cabinet may reduce the radio signal. **Please use in this** case an external antenna, such as, for example, the myTEM MTANT-100-WL.
- 4. Remove devices that are no longer available in the Z-Wave network from all association groups. Otherwise, significant delays in the execution of commands are possible.
- 5. Make sure you have enough mains-powered devices to benefit from the meshing network.
- 6. Never use "sleeping" battery-powered devices without a central controller.
- 7. Do not poll battery-powered devices.
- 8. Make sure you have set color and intensity values, otherwise the LED strip will stay turned off.

Z-Wave Association – Devices control each other

The Association Command Class is used to manage associations to NodeID destinations. An association group sends commands to the configured destinations when triggered by an event.

Association group of the myTEM Radio RGBW module:

Group ID	Profile / Na me	Max. no of units	Command Class	Type / Event	Description
1	General: NA /Lifeline	5	Notification Report	T: System (0x09) E: Heartbeat (0x05)	Reports to be alive (in terval according to configuration)
				T: Power Management (0x08) E: Power has been applied (0x01	Reports the device had a start-up (sent after each power-up only)

The reports "Heartbeat" and "Power Management" can be activated/deactivated separately via the command class **Notification.**

Z-Wave configuration parameter

Z-Wave products can be used out of the box after inclusion (Add) into the network. However, configuration settings can adapt the behavior of the device better to the needs of your application. This device uses the following parameter:


Par#	Description	Unit	Min	Max	Default	Precisio n	R/W	Size
1	Heartbeat rat	min	1	1440	60	0	r/w	2 bytes

Technical specifications

Dimensions (W x H x D)	37.3 x 101.1 x 62.5 mm (height with connectors 106.8 mm)			
Installation / mounting	On 35 mm DIN rail			
Operating voltage	24 VDC t 10%			
Power consumption in standby	Continuous operation for a wireless network, therefore no standby operation			
Power consumption in operation	0.3 W (MTRGB-100-WL only, without external LED ships)			
RGBW outputs	Max. 50 W per LED channel			
Ambient temperature for operation	0 °C — 50 °C			
Ambient temperature for storage	-20 °C — 60 °C			
Ambient humidity	5 %RH — 85 %RH (non condensing)			
Wire cross-section connectors	0.25 mm ² — 2.5 mm ²			
Stripping length for connectors	ca. 7 mm			
Tightening torque for connectors	0.5 Nm			
Degree of protection provided by the enclosure	IP 20 (after installation)	(according to EN 60529)		
Protection class	III	(according to EN 60730-1)		
Overvoltage category	I	(according to EN 60730-1, resp. EN 60664-1)		
Pollution degree	2	(according to EN 60730-1)		
Safety main unit	EN 60730-1:2016 + AI:2019			
EMC main unit	EN 60730-1:2016 + Al:2019 EN IEC 61000-6-2:2019	EN 61000-6-3:2007 + A1:2011 / AC:2012		
Safety radio part	EN 62368-1:2014 / AC:2017	EN 62479:2010		
EMC radio pal	EN 301 489-1 V2.1.1	EN 301 489-3 V2.1.1		
Radio spectrum	EN 300 220-2 V3.2.1			
RoHS	EN IEC 63000:2018			
CE conformity C €	2014/30/EU (EMC) 2011/65/EU (RoHS)	2014/53/EU(RED)		
Z-Wave hardware platform ZM5101				
Device Type	Light Dimmer Switch			
Role Type	Always On Slave (AOS)			

Т

ſ

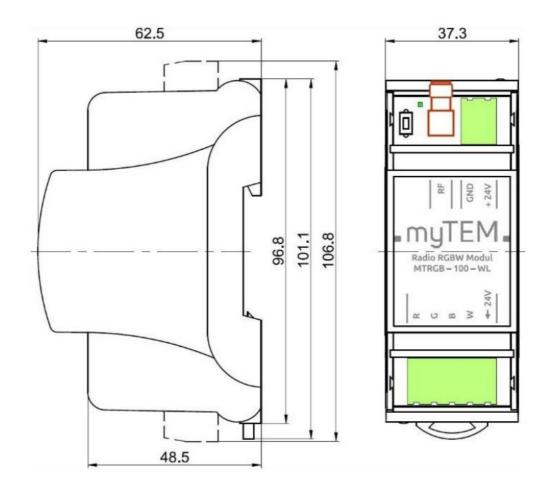

Supported Command Classes

Command Class (CC)	Not added	Non-secure ad ded	Securely added, non-se cure CC	Securely added, secure CC
Application Status C	Support	Support	Support	
Association CC	Support	Support		Support
Association Group Information CC	Support	Support		Support
Basic CC	Support	Support		Support
Color Switch CC	Support	Support		Support
Configuration CC	Support	Support		Support
Firmware Update Met a Data CC	Support	Support		Support
Manufacturer Specific CC	Support	Support		Support
Multilevel Switch CC	Support	Support		Support
Notification CC	Support	Support		Support
Powerlevel CC	Support	Support		Support
Security_2 CC	Support	Support	Support	
Supervision CC	Support	Support	Support	
Transport Service CC	Support	Support	Support	
Version CC	Support	Support		Support
Z-Wave Plus Info CC	Support	Support	Support	

Explanation of some Z-Wave specific terms

Controller... is a Z-Wave device with the capability to manage a network. They are typically gateways, remote controls, or wall controllers.

Primary controller... is the central administrator of the Z-Wave network. In a Z-Wave network, only one primary controller is allowed.

Slave... is a Z-Wave device without the ability to manage a network. Slaves can be sensors, actuators, and even remote controls.

Add (Inclusion)... is the process of adding new Z-Wave devices into a network.

Remove (Exclusion)... is the process of removing Z-Wave devices from the network.

Wakeup Notification.. is a special wireless message issued by battery-powered Z-Wave devices to announce that they are awake and able to communicate.

Node Information Frame (NIF)... is a special wireless message issued by a Z-Wave device to announce its capabilities and functions.





myTEM myTEM Radio RGBW Module [pdf] User Manual

myTEM, Radio, RGBW, Module

References

- ► TAQ | myTEM smart automations
- <u>Z-Wave Europe The leading european distributor for Smart Home products.</u>
- <u>Z-Wave Europe The leading european distributor for Smart Home products.</u>
- Z-Wave Global Regions Silicon Labs

Manuals+,