



myTouch Smart 26893 In Wall Digital Timer Instruction Manual

[Home](#) » [myTouch Smart](#) » myTouch Smart 26893 In Wall Digital Timer Instruction Manual 

Contents

- [1 myTouch Smart 26893 In Wall Digital Timer](#)
- [2 Product Information](#)
- [3 Product Usage Instructions:](#)
- [4 Fast, easy setup](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



myTouch Smart 26893 In Wall Digital Timer



Product Information

Specifications:

- Product Name: In-Wall Digital Timer
- Setup: Fast and easy
- Reset Button: Located below the arrow buttons
- Custom On/Off Times: Multiple programmable times in a 24-hour period
- Manual/Override: Allows manual control of lights
- Made In: Vietnam
- Distributed by: Jasco Products Company LLC
- Address: 10 E. Memorial Rd., Oklahoma City, OK 73114
- Control Purpose: Timer Action Type 1.B Action; Micro-disconnection on Operation; Type 1.R: Timing action interrupted upon loss of electrical supply and resumes upon restoration of electrical supply
- Control Pollution Degree: Pollution Degree 2
- Rated Impulse Voltage: 2500V

Product Usage Instructions:

After Installation:

For the first use, follow these steps:

1. Press the reset button (◀) located below the arrow buttons using a toothpick or pencil.

Set the Time:

To set the time, follow these steps:

1. Use the up (▲) and down (▼) arrows to set the desired time.

Choose Your Custom On/Off Times:

To program custom on/off times, follow these steps:

1. Press the “my on time” button.
2. Use the up (▲) and down (▼) arrows to set the desired on time.
3. Press the “my off time” button.
4. Use the up (▲) and down (▼) arrows to set the desired off time.
5. If the blue LED is on, the program is set. If the LED is off, the program will not operate.
6. Repeat the above steps for each additional “my on/my off” button.
7. All programmed times will run simultaneously in a 24-hour period.

Manual/Override:

To manually control your lights, follow these steps:

1. Press the “manual/override” buttons.

Note:

When daylight saving time occurs, use the up (▲) and down (▼) arrows to adjust the time by 1 hour.

FAQ:

1. Question: Where is the reset button located?

Answer: The reset button is located below the arrow buttons.

1. Question: How do I manually control my lights?

Answer: Press the “manual/override” buttons to manually control your lights.

1. Question: Can I program multiple on/off times?

Answer: Yes, you can program multiple on/off times using the “my on/my off” buttons.

1. Question: What happens when there is a power outage?

Answer: The timing action will be interrupted upon the loss of electrical supply and resumes at the point of interruption upon restoration of the electrical supply.

Fast, easy setup

1. After installation

For first use, press the reset button (r) below the arrow buttons using a toothpick or pencil.

2. Set the time

Use up (▲) and down (▼) arrows to set the time.



3. Choose your custom on/off times

Press “my on time,” then use up (▲) and down (▼) arrows to set on time.

Press “my off time,” then use up (▲) and down (▼) arrows to set off time. If the blue LED is on, the program is set. If the LED is off, the program will not operate. Repeat for each additional “my on”/“my off” button. All programmed times run simultaneously in a 24-hour period.



4. Manual/ Override

Press on and off buttons to manually control your lights.



Note: When daylight saving time occurs, use the up (▲) and down (▼) arrows to adjust the time by 1 hour.

MADE IN VIETNAM

Distributed by Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114.
This Jasco product has a 1-year limited warranty. Visit www.byjasco.com for warranty details.
Questions? Contact our U.S.-based Consumer Care at
1-800-654-8483 M–F, 7AM–8PM Central Time.
For product patent information, visit www.byjasco.com/patents.

WARNING

RISK OF ELECTRIC SHOCK

- SHUT OFF POWER AT FUSE BOX OR CIRCUIT BREAKER BEFORE INSTALLATION
- DO NOT USE IN WET LOCATIONS
- USE INDOORS ONLY RISK OF FIRE
- DO NOT USE TO CONTROL APPLIANCES THAT CONTAIN HEATING ELEMENTS (COOKING APPLIANCES, HEATERS, IRONS, ETC.)
- DO NOT EXCEED ELECTRICAL RATINGS
- USE COPPER WIRE ONLY WITH THIS DEVICE
- DO NOT USE TO CONTROL RECEPTACLES

Purpose of CONTROL: Timer

ACTION: type 1.B ACTION; MICRO-DISCONNECTION on OPERATION; Type 1.R: a timing action which is interrupted upon loss of the electrical supply and resumes at the point of interruption upon restoration of the electrical supply

CONTROL POLLUTION DEGREE: POLLUTION DEGREE 2 RATED IMPULSE VOLTAGE: 2500V

