



Mytrix MTNSPC-01 Wireless Controller for NS User Manual

[Home](#) » [mytrix](#) » Mytrix MTNSPC-01 Wireless Controller for NS User Manual 

Contents

 
- [1 Mytrix MTNSPC-01 Wireless Controller for NS](#)
- [2 Specification](#)
- [3 Package Includes](#)
- [4 Wireless Connection & Wake-Up Function](#)
- [5 Controller Auto Sleep](#)
- [6 Functions Comparison](#)
- [7 Warranty](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Mytrix

Mytrix MTNSPC-01 Wireless Controller for NS



3.5mm jack(only works when controller connects console via cable)

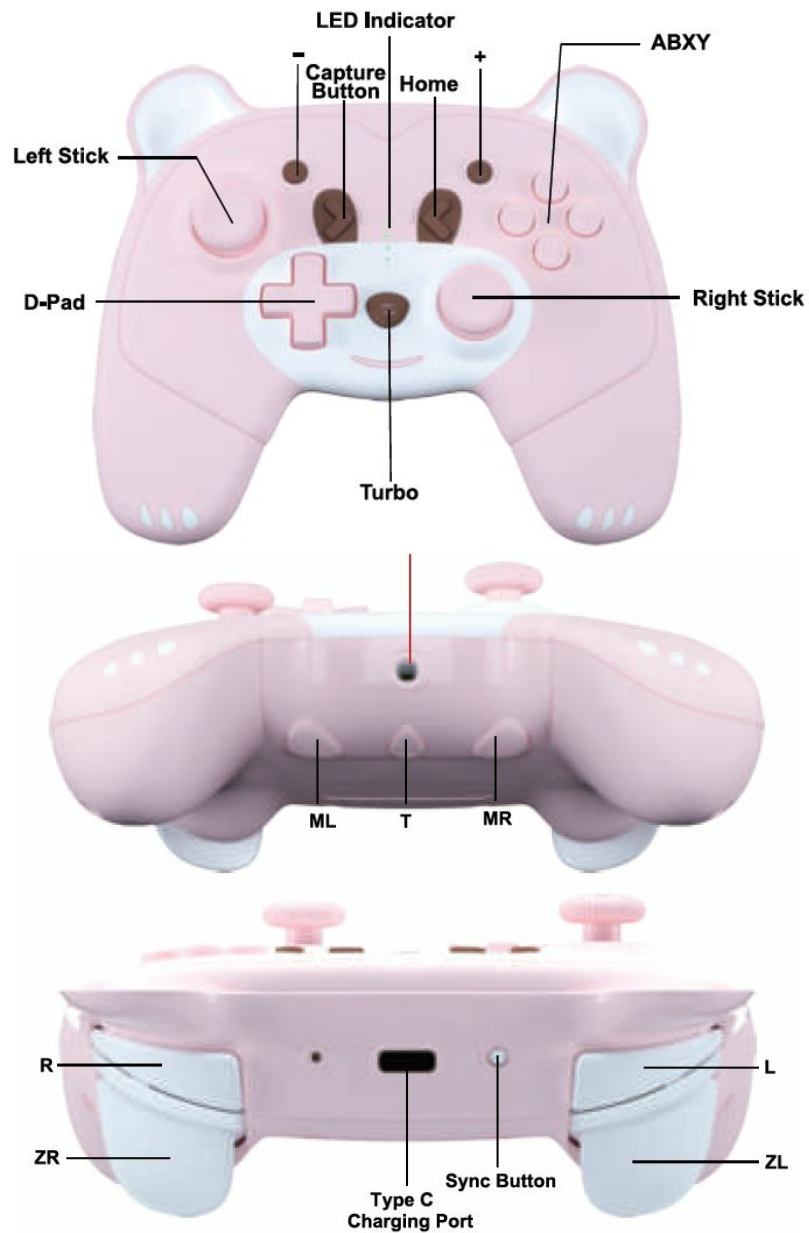

Specification

- Input Voltage: 5V, 300mA
- Working Voltage: 3.7V
- Battery Capacity: 300mAh
- Product Size: 130*55*102mm
- Weight: 155+5g
- Material: ABS

Package Includes

- 1x Controller
- 1xUSB Type-C Charging Cable
- 1x User Manual

Wireless Connection & Wake-Up Function

Please Note: Please make sure the AIRPLANE mode of the console is turned off before starting to use it.

First-Time Pairing

1. From the HOME menu of the console, select Controllers, then Change Grip/Order.
2. Press and hold the “SYNC” button on the top of the controller for at least five seconds to power on the controller until all 4 LEDs flash. Once paired, all 4 LEDs will remain lit, and the controller will be shown on the screen.



Wake Up and Reconnect

Once the controller has paired with the console:

- If the console is in SLEEP mode, the “HOME” button of the controller can wake up both the controller and the console.
- If the console is on, all the buttons can wake up the controller, the controller will reconnect to the console. If unable to connect, please follow the three steps
- Turn off the AIRPLANE mode on the console
- Remove the controller's information on the NS console (System Setting > Controllers and Sensors > Disconnect Controllers)
- Follow the First-Time Pairing steps

 
Controller Auto Sleep

- In the wireless connection, press and hold the HOME button for 3 seconds, the controller will be disconnected and turn into sleep mode.
- If no button is pressed within 5 minutes, the controller will automatically sleep.
- The controller sleeps when the controller is in SLEEP mode.

Wired Connection

1. Turn on the “Pro Controller Wired Communication” in the console: System Settings > Controllers and Sensors > Pro Controller Wired Communication > On
2. Communication > On

Please Note: The “Pro Controller Wired Communication” must be turned on BEFORE connecting the controller and the Dock with the cable.

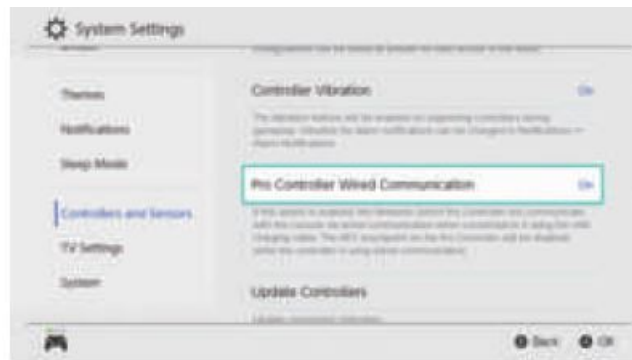


Wired Connection

1. Turn on the “Pro Controller Wired Communication” in the console: System Settings > Controllers and Sensors > Pro Controller Wirec Communication > On

Please Note: The “Pro Controller Wired Communication” must be turned on BEFORE connecting the controller and the Dock with the cable.

 2. Set the Switch console on the Dock for the TV mode. Connect the Switch the Dock and the controller directly with the USB Type C to A cable.

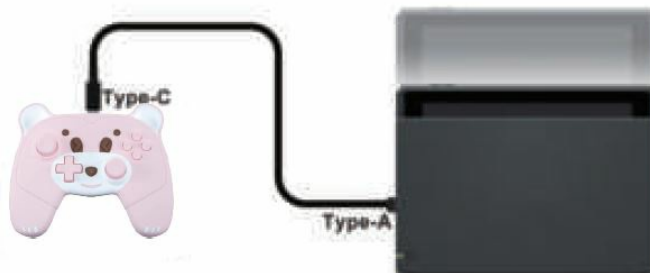


3. Press the HOME button > Controllers > Change Grip/Order. The controller icon with the “USB” displayed on the screen indicates the wired connection is successful.



Audio Function

The controller has a 3.5mm audio port and supports 3.5mm wired headsets or microphones.

 Please Note: The audio function will ONLY work in the Wired Connection Mode with a Switch console. It will NOT work under the wireless connection or when the controller is wired to a PC.

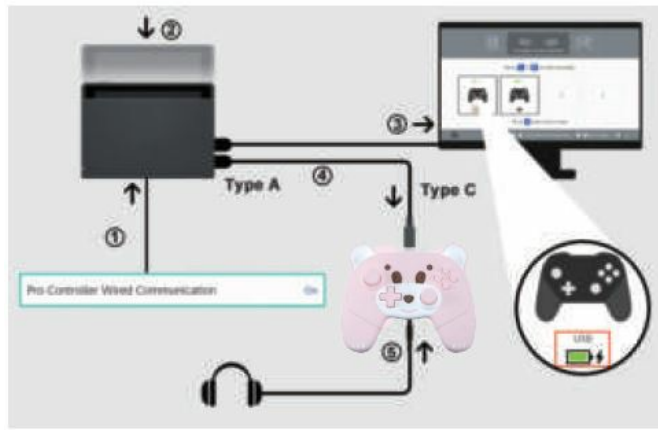

Please Note

The “Pro Controller Wired Communication” must be turned on BEFORE connecting the controller and the Dock with the cable. System settings > Controllers and Sensors > Pro Controller

Wired Communication > On

Set the Switch console on the Dock for the TV mode.3 Connect the Switch Dock and the controller with the USB cable The icon with “USB” displayed indicates the wired connection is successful. Plug the 3.5mm audio jack into the audio port on the bottom of the controller.

Turbo and Auto-fire

Buttons Available to Set the Turbo Function:

A/B/X/Y/LIZL/R/ZR button



Turbo and Auto-fire

Buttons Available to Set the Turbo Function:

A/B/X/Y/LIZL/R/ZR button

Set Up the Turbo Function

1. Manual Turbo Function: Press and hold the Turbo button, then press any function button ONCE to turn on the “Manual Turbo Function”.
2. Auto Turbo Function: Repeat the first step above to switch to the “Auto Turbo Function”.
3. Turn Off the Turbo Function: Repeat the first step after the “Auto Turbo Function” has been set.

Turn off all the turbo functions for all buttons

Press and hold the Turbo button for 3 seconds, then press the subtract ‘-’ button to turn off the turbo functions of all buttons.

There Are Three Levels For the Turbo Speed

- Slow: 5 shots/s, the corresponding LED indicators will flash at a slow speed.
- Medium: 12 shots/s, the corresponding LED indicators will flash at a medium speed. (Default Level)
- Fast: 20 shots/s, the corresponding LED indicators will flash at a fast speed.

Adjust the Turbo Speed Levels

Press and hold the Turbo button, and push down the right joystick to decrease one grade of turbo speed; pull up the right joystick to increase one grade of turbo speed. You Can Test and Check the Turbo Settings on a Console: Settings > Controllers and Sensors > Test Input Devices > Test



Controller Buttons

Adjust Vibration Intensity There Are Four Levels of Vibration Intensity: None, weak, medium, strong.



Macro Definition Function

There are two macro-enabled buttons “ML/MR” on the back of the controller, and a macro definition switch button “T”. Buttons “ML/MR” can be programmed into function buttons or buttons sequences respectively.

ML/MR Buttons Can Be Programmed to

 
A/BIX/Y/LIZL/RIZR/up/down/left/right buttons

Enter the Macro Definition Mode and Set Up the Button(s)

1. Press the “T” button on the back of the controller for 3 seconds, and the light “LED2-3” will flash slowly.
2. Press the “ML” or “MR” button, and the “LED2” light will flash slowly, The controller is ready to record the macro setting.
3. Press the function buttons that need to be set in turn, the controller will record the button and the time interval of each button pressed.
4. Press the “T” button to save, the “LED1” light will keep lit. The macro definition function will be memorized.
5. When the controller re-connects to the console, it will automatically apply the last macro definition setting.

Clear the Macro Definition Settings

Press and hold the “T” button for 5 seconds until the “LED1-4” lights flash, all the current macro definition settings will be cleared.

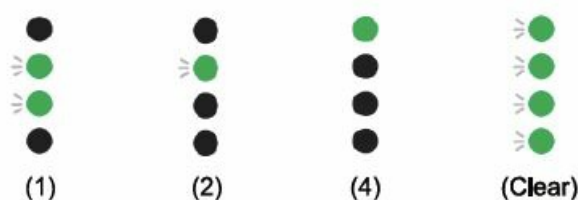

Example:

- Hold down the “T” button for 3 seconds until the “LED2-LED3” light flashes slowly.
- Press the “ML” button, the “LED2” light will flash slowly, and then the controller is ready to record.
- Press the “B” button, after 1 second press “A”, after 3 seconds Press “X”, then press “T” to finish setting and save
- The button “ML” now is set to perform “B (after 1s) → A (after 3s) → X

- You Can Test and Check the “ML/MR” Settings on a Console: Settings > Controllers and Sensors > Test Input Devices > Test

Controller Buttons

Wired Connection on Windows PC

PC X-INPUT

- Connect the controller to a Windows system computer with the USB cable, it will automatically be recognized as “X-INPUT” mode.
- The first and the fourth LEDs will have a steady light.
- **Please Note:** In the X-INPUT mode, button “A” becomes “B”, “B” becomes “A”, “X” becomes “Y”, and “Y” becomes “X”. STEAM
- Press down the right joystick and connect the controller to the computer with the USB cable.
- It will be recognized as the STEAM “Pro Controller” mode and can be used for supported games.

Functions Comparison

Platform	Screenshot	Audio Function	Motion	Vibration	Macro	Turbo
Switch Wireless	√	×	√	√	√	√
Switch Wired	√	√	√	√	√	√
PC X-Input	×	×	×	√	√	√
PC STEAM	×	×	×	√	√	√

Adjust the Ears Light Modes

Three Light Effect Modes of Ears breathing mode → light on → light off

Adjust the Light Modes

 
After the controller connects with the console, press both the “L” and “R” buttons for 5 seconds to switch the lighting effect mode.

Charging Instructions

- The controller can be charged using the Switch charger, the Switch Dock, the 5V 2A power adapter, or USB power supplies with the USB Type C to A cable.
- If the controller is connected to the console while charging, the corresponding channel LED light(s) on the controller will flash. The channel LED light(s) will stay lit if the controller has been fully charged.
- If the controller is not connected to the console while charging, the 4 LED lights will flash. The LED lights will go off when the controller has been fully charged.
- When the battery is low, the corresponding channel LED light(s) will flash; the controller will turn off and need to be charged if the battery is exhausted.

Calibrate the Control Sticks

Press the HOME button > System Settings > Controllers and sensors > Calibrate Control Sticks > Press the stick you want to calibrate Follow the on-screen instructions to verify the controller functionality

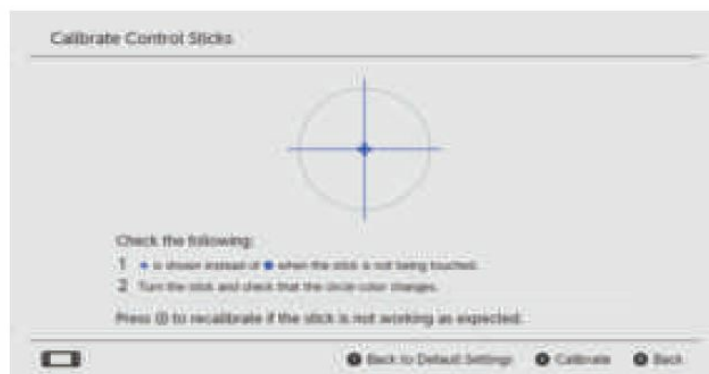

Calibrate Motion Controls

Press the HOME button > System Settings > Controllers and Sensors > Calibrate Motion Controls > Calibrate the Controllers > Put the controller on a horizontal plane and hold “-” or “+” on the controller you want to calibrate.

Please Note

When using the wireless controller for the first time, it is recommended to have both the Controller Sticks and Motion Controls calibrated before usage. If the calibration fails, please press the “Y” button to restore the settings and press the “X” button to repeat the calibration steps. Power off the controller once the calibration is finished, then restart the controller and console.

Warranty

The product comes with a 1-year limited warranty. Our goal is to achieve total customer satisfaction, we will do our best to understand our customer’s requirements and always meet the requirements. If you have any questions, please do not hesitate to contact us via cs@mytrixtech.com. We will be more than happy to assist you.

Company Information

Company: Mytrix Technology LLC


Customer Service Tel: +1 978-496-8821

Customer Service Email: cs@mytrixtech.com

Web: www.mytrixtech.com

Address: 13 Garabedian Dr Unit C, Salem NH 03079

Documents / Resources

	Mytrix MTNSPC-01 Wireless Controller for NS [pdf] User Manual MTNSPC-01 Wireless Controller for NS, MTNSPC-01, Wireless Controller for NS, Controller for NS
---	---

References

- [User Manual](#)